



# BILLET ALUMINUM BULLET ANTENNA

---

## INSTALLATION INSTRUCTIONS

### CONTENTS

---


- (1) Antenna
- (7) Threaded Adapters
- (2) 7.5mm Spacers
- (1) 13mm Spacer

### TOOLS REQUIRED

---

Adjustable Wrench

## STEP 1

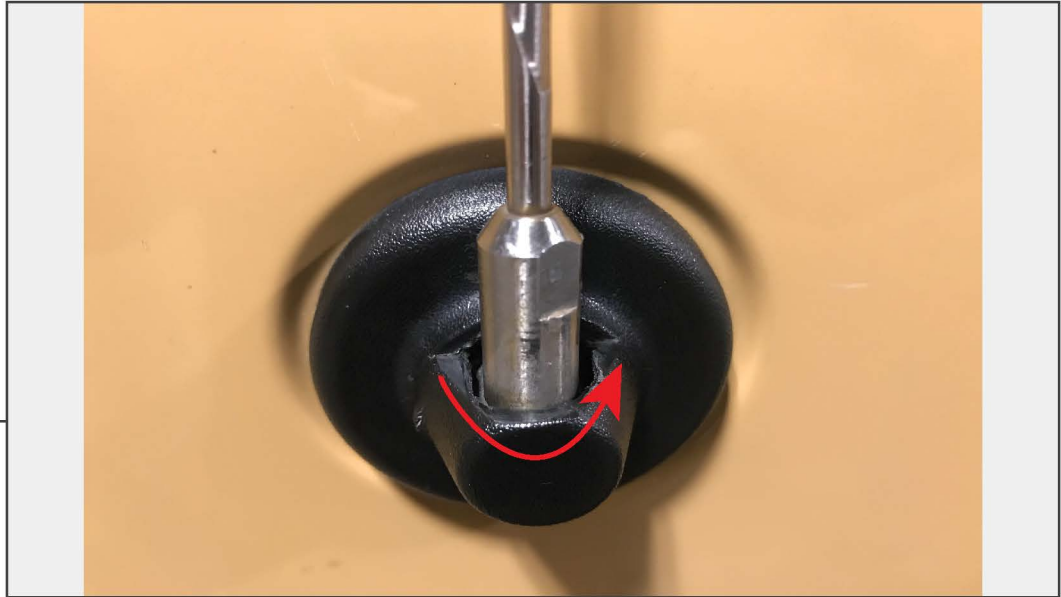

Remove the OEM antenna from the vehicle using an adjustable wrench.

## STEP 2



Using (2) 7.5mm spacers, install them on the threaded fitting first. Then, install (1) 13mm spacer onto the threaded fitting.

## STEP 3



With the spacers in place, thread the fitting onto the antenna.

## STEP 4



Thread the antenna assembly to the vehicle antenna base. Tighten until fully secure.

Installation is now complete.