



ALUMINUM SIDE STEPS

(2018+ WRANGLER JL)

INSTALLATION INSTRUCTIONS

CONTENTS

(2) Side Steps
(4) Big Bracket
(2) Small Bracket
(6) M8 Screws
(24) M6 Screws
(6) M8 Washer
(24) M6 Spacers
(6) Washers
(12) Black M6 Nuts

TOOLS REQUIRED

10, 13, 15MM Sockets/ Wrenches
Socket Wrench


SKU #J138356-JL

STEP 1



If your vehicle came equipped with factory side steps, remove the (2) nut and (1) bolt securing the factory side step to the vehicle. Repeat at all mounting locations.

STEP 2

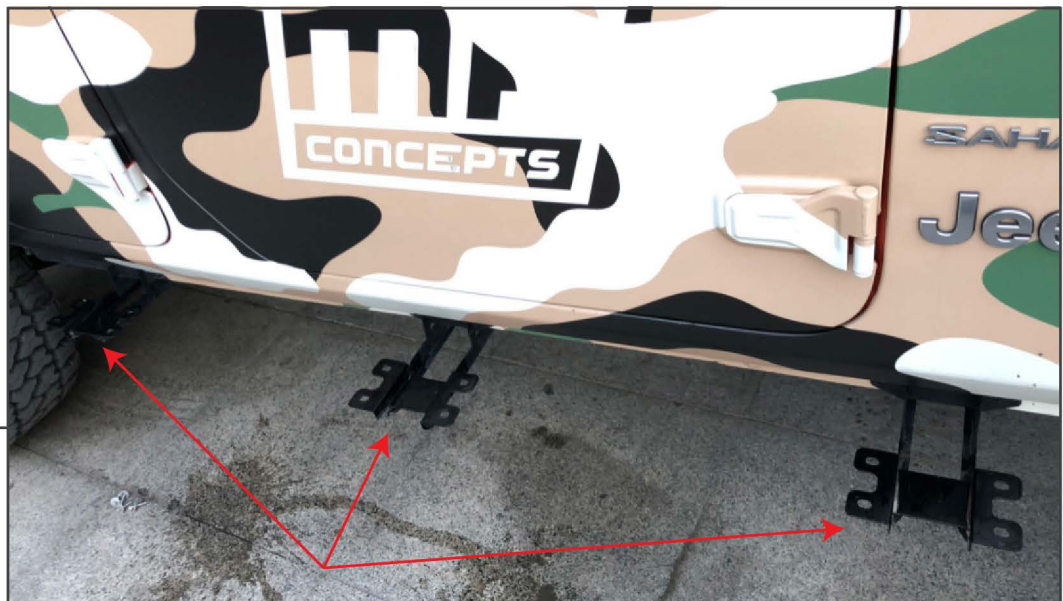

Install the new side step brackets using the provided hardware.



STEP 3

Secure the side step to the bracket using (4) bolts per mounting brackets.



STEP 4

Installation is now complete.