

LED TAIL LIGHTS

(1976-1986 CJ5 / CJ7)

(1987-1995 WRANGLER YJ)

(1997-2006 WRANGLER TJ)

INSTALLATION INSTRUCTIONS


CONTENTS

- (1) LH Tail Light
- (1) RH Tail Light
- (2) Resistors
- (6) M6 Flange Bolts
- (6) M6 Nuts
- (8) Lens Screws
- (6) Scotchlok Connectors
- (2) Ring Terminals

TOOLS REQUIRED

- 10mm Socket
- Ratchet
- Phillips Screwdriver
- Drill & Drill Bits
- Wire Strippers/Crimpers
- Hammer & Punch

STEP 1

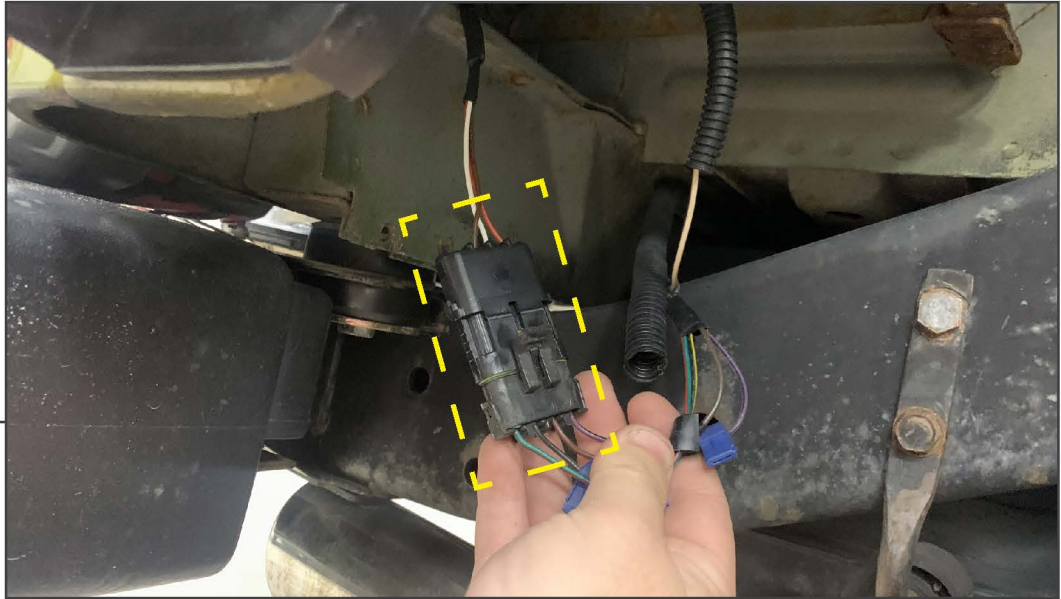

From under the vehicle, locate the tail light wiring harness. Unplug the wiring connector.

STEP 2



Remove the (4) Phillips screws from the tail light lens, and set the lens aside.



STEP 3

Remove (3) 10mm bolts securing the tail light to the vehicle.



STEP 4

Use a punch and a hammer and tap out the appropriate mounting bolt holes in the tail light housing.

Align the tail light to the vehicle mounting holes. Secure the tail light into place using (3) M6 flange bolts and nuts behind the tail light.

**STEP 5
(WIRING)**



Splice the tail light wiring into the vehicle tail light harness using the following diagram. Depending on vehicle year, wire color may vary. Scotchlok connectors and ring terminals provided.

<u>Vehicle Harness</u>	-	<u>LED Tail Light</u>
Green/Red(LH) ; Brown/Red(RH)	-	Yellow (Brake Light/Turn Signal)
Black/Yellow	-	Brown (Parking Lights)
Violet/Black	-	Red (Reverse Lights)
Vehicle Chassis	-	Black (Ground using Ring Terminal)

Use the included resistor if the turn signals hyperflash. Splice the resistor in between turn signal + and ground.

STEP 6



Repeat steps 1-5 for the remaining tail light.

Installation is now complete.