



FRONT AND REAR MUD GUARDS

(2018-2020 WRANGLER JL, EXCLUDING RUBICON)

INSTALLATION INSTRUCTIONS

CONTENTS


(2) Front Mud Guards
(2) Rear Mud Guards
(16) Plastic Rivets

TOOLS REQUIRED

Rivet Tool
Panel Removal Tool
Cutting Pliers
Drill
1/4" Drill Bit
Permanent Marker

SKU # J141419-JL

STEP 1

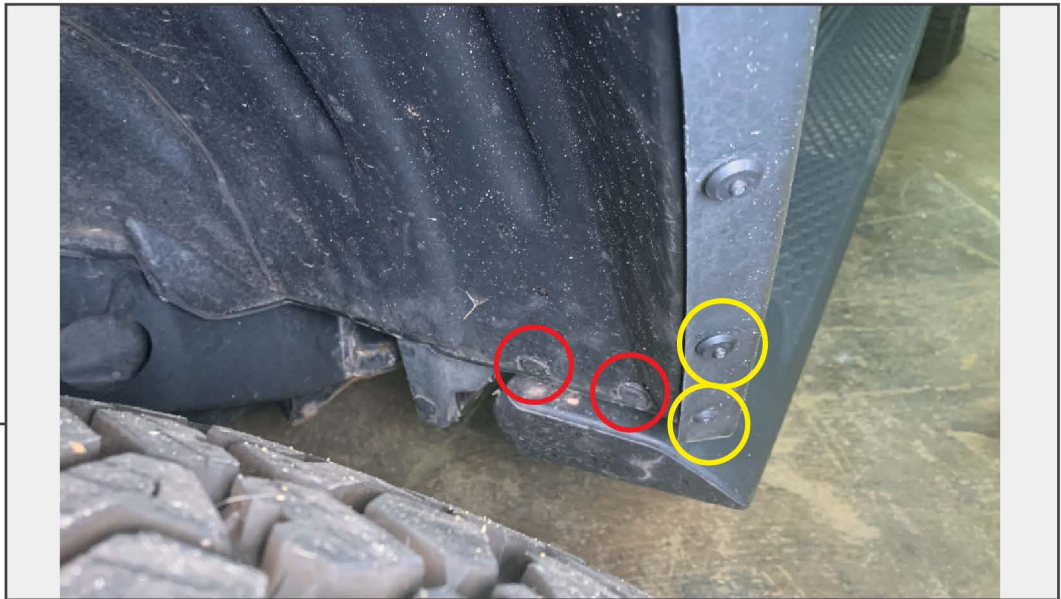

Using a panel removal tool, remove the (2) plastic push clips in the fender liner. Cut the (2) plastic rivets off of the fender flare trim.

STEP 2



Align the mud guard with the vehicle. Using (4) plastic rivets, attach the mud guard to the vehicle using the existing holes.



STEP 3

Once the mud guard is secured with the (4) plastic rivets, use the mud guard as a template and drill a 1/4" hole through the fender liner. Install (1) plastic rivet through the mud guard into the fender liner.



STEP 4

Repeat steps 1-3 to the opposite side to complete front installation.

**STEP 5
(REAR)**



Remove (1) 8mm bolt from the rear fender liner.

STEP 6



Align the mud guard to the vehicle, and reinstall original 8mm bolt. With the bolt secure, mark the holes along the outside of the mud guard with a permanent marker. Remove the mud guard from the vehicle and drill the marked areas using a 1/4" drill bit.



STEP 7

Once drilled, reinstall the mud guard to the vehicle using the 8mm bolt. Use the provided (3) plastic rivets to secure the side of the mud guard to the bumper.



STEP 8

Repeat steps 5-7 to the opposite side to complete rear installation.