

## REAR QUARTER PANEL BODY ARMOR

(1997-2006 WRANGLER TJ)

INSTALLATION INSTRUCTIONS

## **CONTENTS**

- (1) Driver's Side Armor
- (1) Passenger's Side Armor
- (4) Self-Tapping Screws

## **TOOLS REQUIRED**

Phillips Screwdriver 10mm Socket Isopropyl Alcohol





Remove the license plate from the vehicle. Remove (4) 10mm bolts to remove the license plate bracket from the vehicle.



STEP 2

Remove (4) Phillips screws from the tail light cover, then remove (3) 10mm bolts from inside the tail light. Unplug and remove tail light from vehicle.





Remove the gas cap from the vehicle. Remove (8) Phillips screws from the gas cap bezel. Remove bezel from vehicle.



Clean inside the indicated area with isopropyl alcohol.






Peel back the film on the provided double sided tape. While aligning the bolt holes on the vehicle with the armor, adhere the armor to the vehicle.




Reinstall the gas cap bezel reusing original hardware.



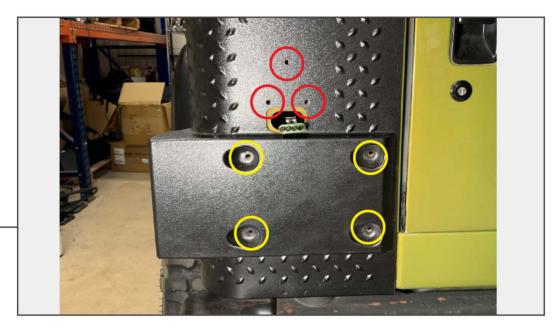

Plug in and reinstall the tail light to the vehicle using original hardware. Using the (4) license plate bracket bolts, secure the armor to the vehicle.

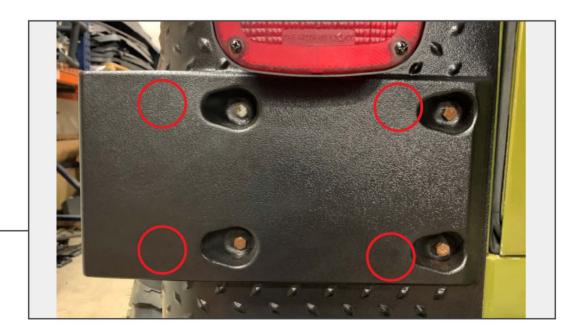

STEP 8

Use the provided self-tapping screws to secure the license plate to the armor.

Installation is now complete.