



FRONT AND REAR SUN SHADE SET

(2018-2023+ WRANGLER JL - 4 DOOR)

INSTALLATION INSTRUCTIONS

CONTENTS

- (1) Front Mesh Top
- (1) Rear Mesh Top
- (10) 8.5" Elastic Bands
- (4) 10.5" Elastic Bands
- (4) 12.5" Elastic Bands
- (6) 17.5" Elastic Bands

TOOLS REQUIRED


N/A

STEP 1




Lay out the front mesh top to determine the direction of the top.

STEP 2

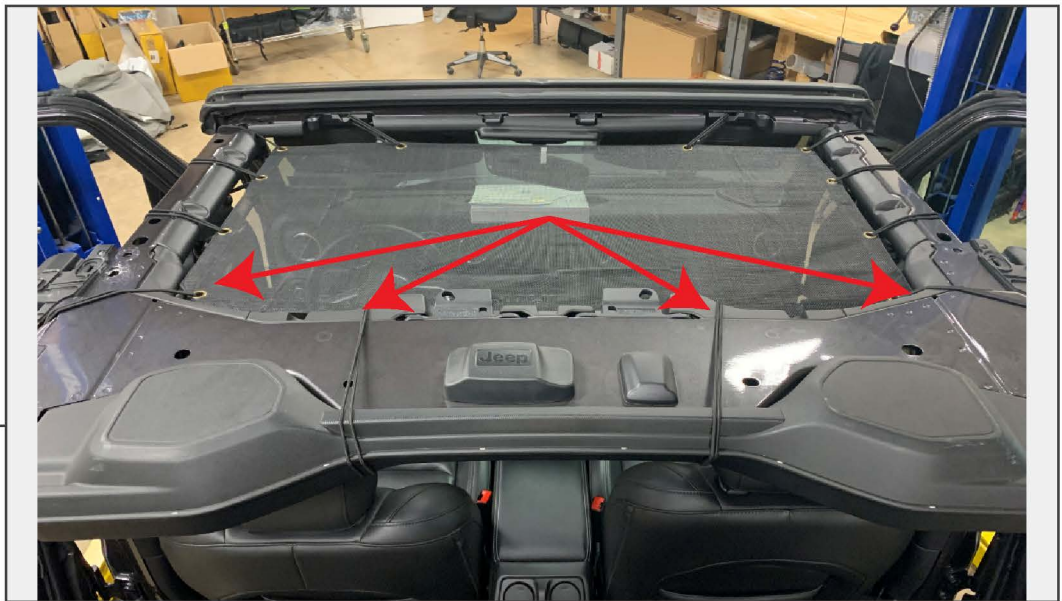


Attach the rear of the mesh top to the roll bar using (4) 17.5" elastic bands.

STEP 3

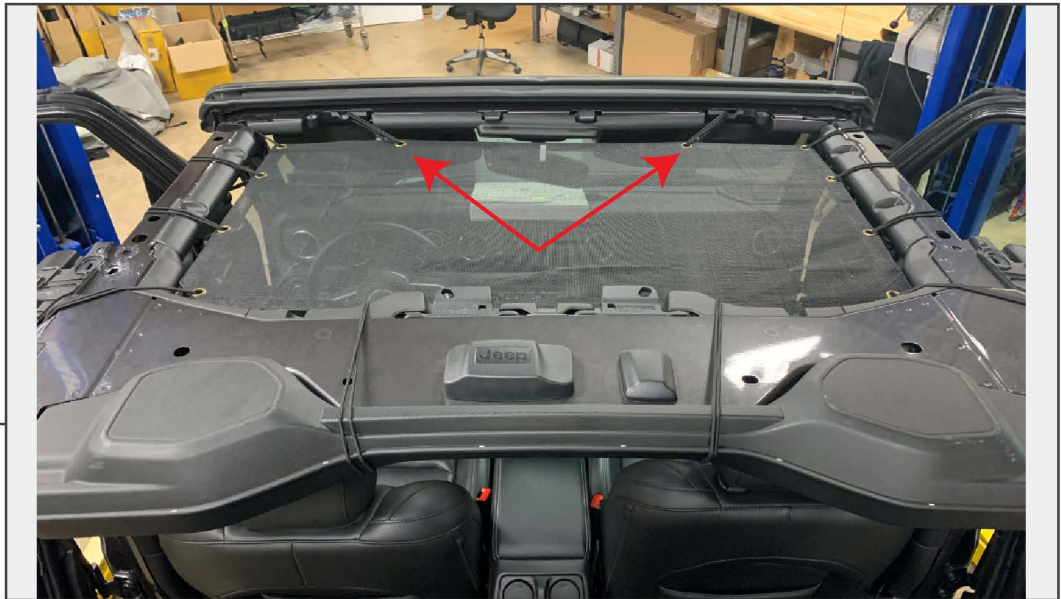

Attach the front of the mesh top to the vehicle using (2) 12.5" elastic bands per side.

STEP 4

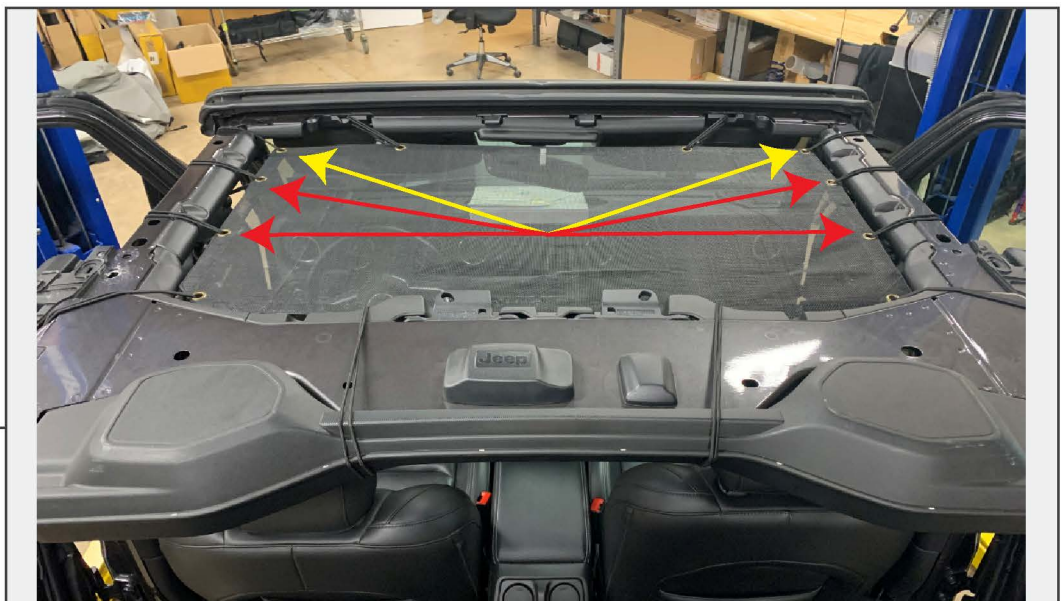

Attach the sides of the mesh top to the roll bar using (1) 12.5" elastic band and (2) 8.5" elastic bands per side.


Front installation is now complete.

**STEP 5
(REAR)**



Lay out the rear mesh top to determine the direction of the top.

**STEP 6
(REAR)**

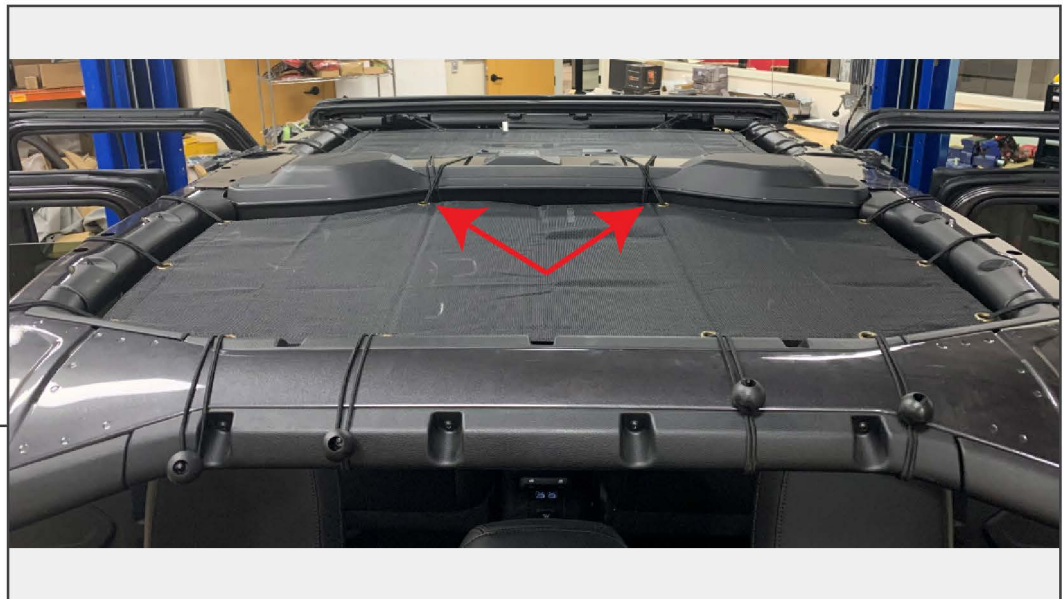


Attach the front of the mesh top to the roll bar using (2) 17.5" elastic bands.

**STEP 7
(REAR)**



Attach the rear of the mesh top to the vehicle using (4) 10.5" elastic bands per side.

**STEP 8
(REAR)**

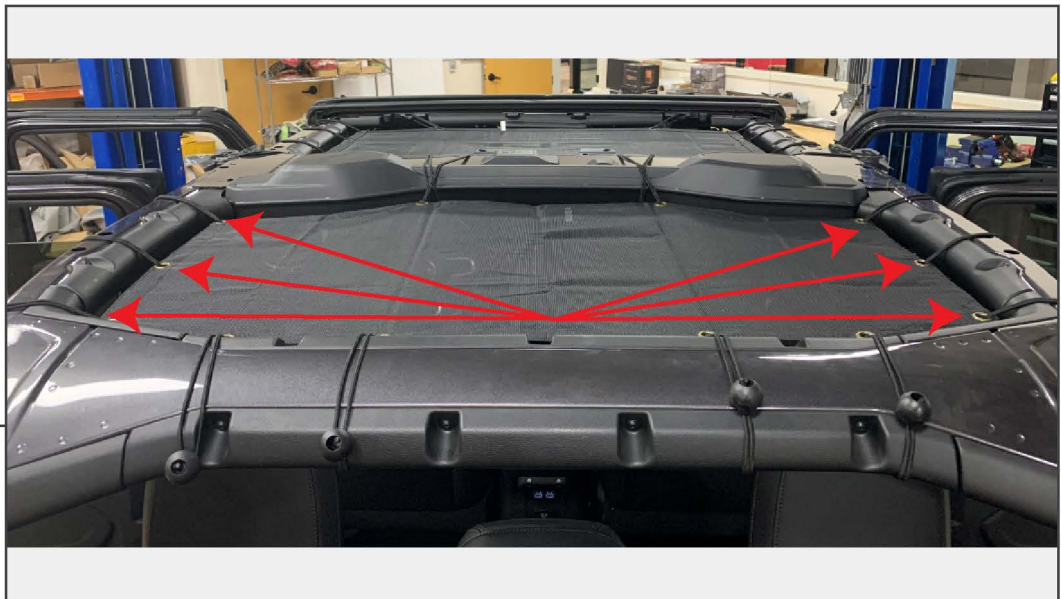

Attach the sides of the mesh top using (3) 8.5" elastic bands per side.

Rear installation is now complete.