



SPARE TIRE CARRIER TAILGATE BRACKET

(1997-2006 WRANGLER TJ)

INSTALLATION INSTRUCTIONS

CONTENTS


- (1) Tire Carrier
- (1) "L" Bracket
- (3) M10 Allen Bolts
- (3) M10 Flat Washers
- (3) M10 Lock Washers
- (3) M10 Lock Nuts
- (3) 19mm Lug Nuts

TOOLS REQUIRED

- 1/2" Socket
- 19mm Socket
- 17mm Wrench
- 6mm Allen Socket
- Socket Wrench
- Exterior Detailer


SKU # J141593

STEP 1

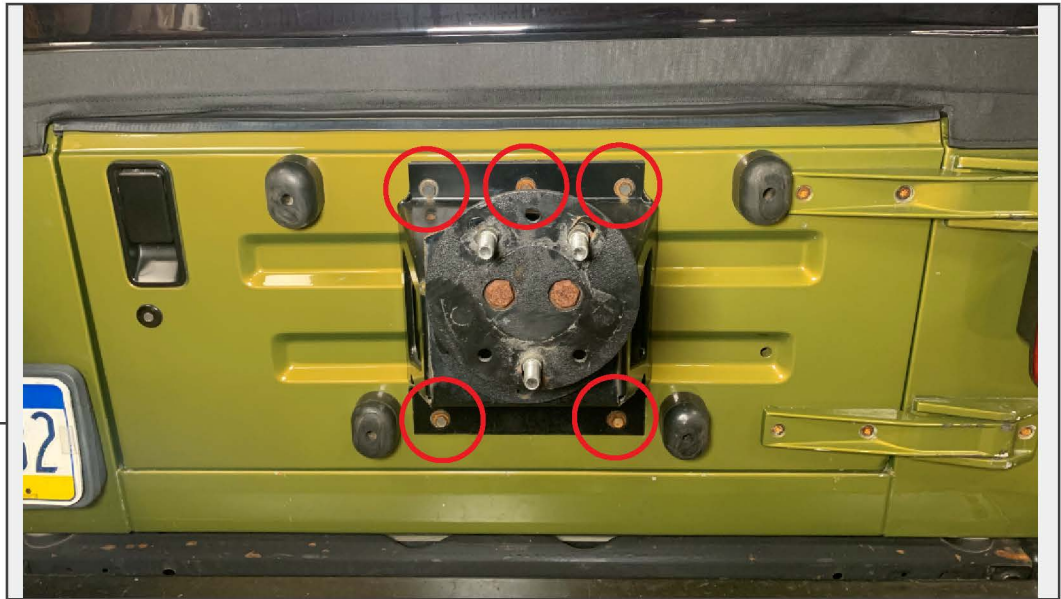

Remove spare tire from original tire carrier, then remove the (5) 1/2" bolts from the tailgate.

STEP 2

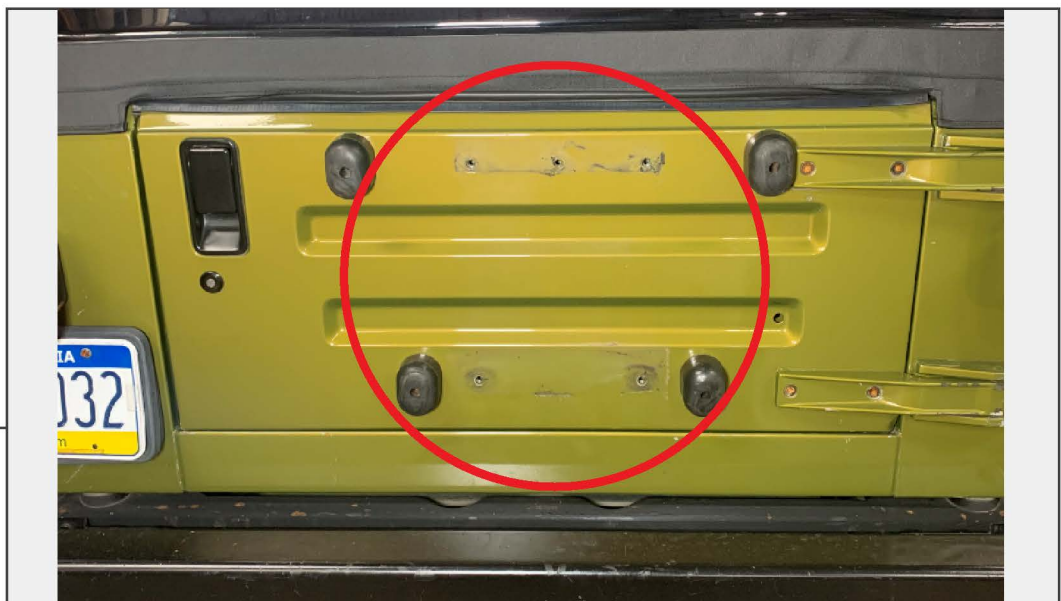

Clean the tailgate of any dirt and debris using exterior detailer.

STEP 3

Using (3) provided M10 allen bolts, lock washers, flat washers, and lock nuts, install the “L” Bracket onto the tire carrier using a 6mm Allen Socket and a 17mm wrench.

STEP 4

Reusing (5) original 1/2” bolts, reinstall the tire carrier assembly onto the tailgate.



STEP 5

Using the (3) provided lug nuts, secure the wheel to the tire carrier. Torque to 100ft/lbs.

Installation is now complete.