



SHADE TOP

(2007-2018 WRANGLER JK 4 DOOR)

INSTALLATION INSTRUCTIONS

CONTENTS

(1) Shade Top

TOOLS REQUIRED

10mm Socket
Ratchet

SKU # J141991


STEP 1




Note: Before installing, leave the top in the sun for 30 minutes to soften the material to prevent top damage.

Remove the original top from the vehicle. Drape the vinyl top over the roll bars of the vehicle. Using the (3) velcro straps, secure the front of the top to the windshield bar.

STEP 2

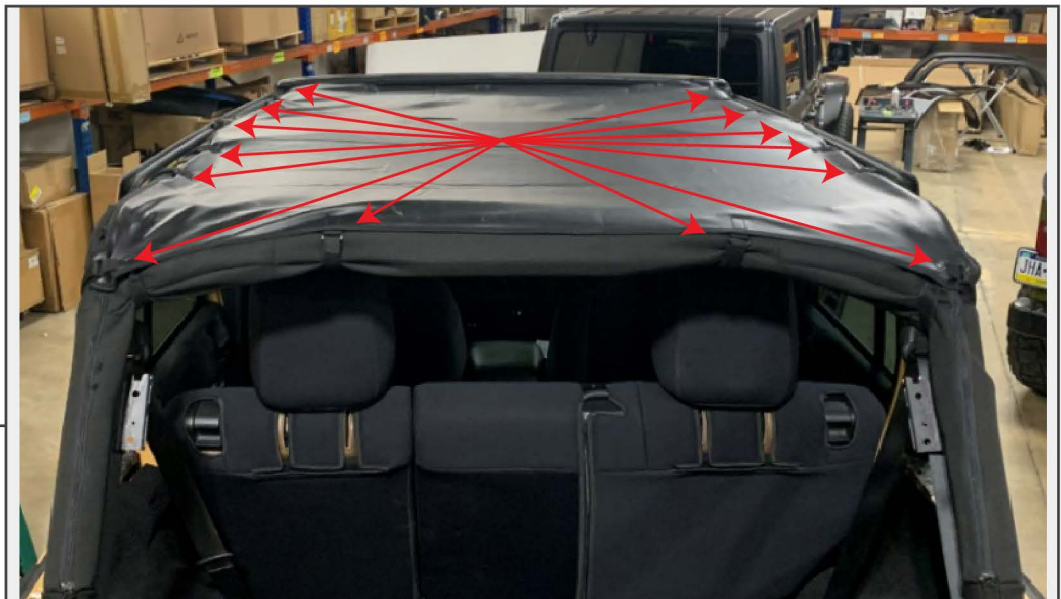

Evenly tighten the (14) Velcro straps around the perimeter of the top to the roll bars.

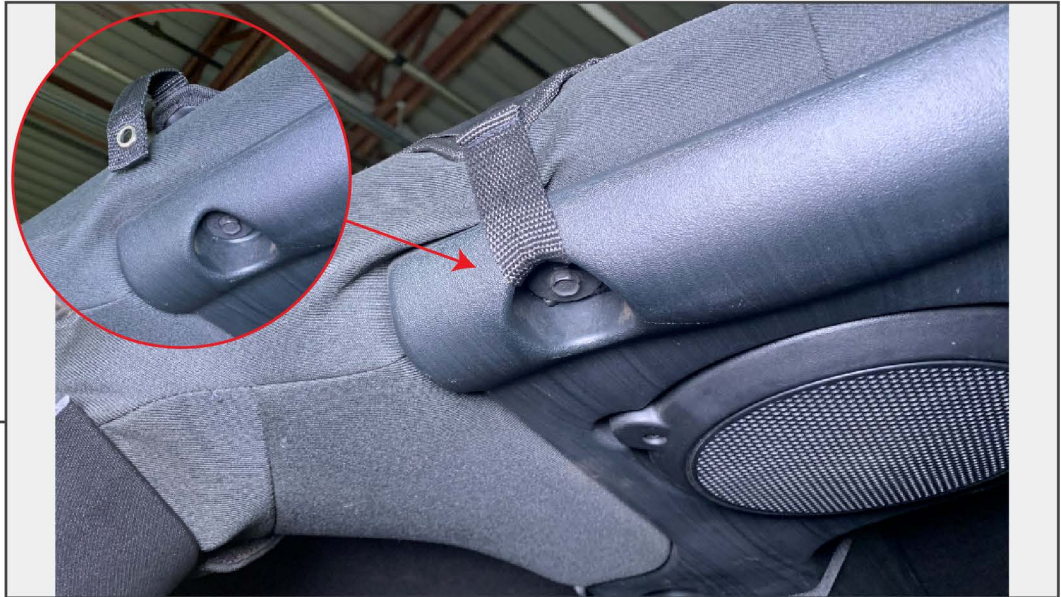

STEP 3

Remove (1) 10mm bolt from the rear seat roll bar, then pull the top strap down. Reusing the bolt, secure the strap to the roll bar. Repeat this step for the opposite side.



STEP 4

Wrap the (2) straps around the roll bar in the middle of the vehicle, and tighten until secure.



STEP 5

Installation is now complete.