



SHADE TOP; BLACK

(1997-2006 WRANGLER TJ)

INSTALLATION INSTRUCTIONS


CONTENTS

(1) Shade Top

TOOLS REQUIRED

N/A

SKU # J142007

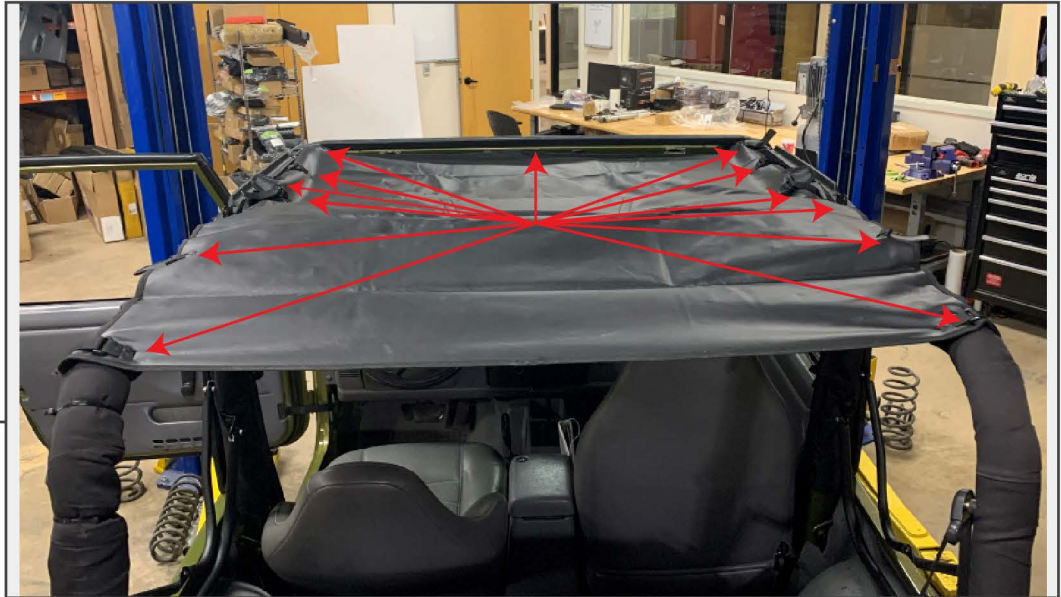

STEP 1

Allow top to sit in sunlight for 30 minutes before installation to soften material.

Remove the top from the vehicle. Drape the shade top over the roll bars of the vehicle. Secure the front of the top using the attached Velcro strap to the windshield bar. Using the attached straps, loosely secure the top to the vehicle.



STEP 2

Wrap the straps inside the top around the rear roll bar. Tighten into place. Tighten all of the perimeter straps to fully secure the top to the vehicle.

Installation is now complete.