

# REDROCK

---

## ADHESIVE BACKED INTERIOR / EXTERIOR TRIM PANELS

---

INSTALLATION INSTRUCTIONS

### TOOLS REQUIRED


---

Isopropyl Alcohol  
Microfiber Cloth



## EXTERIOR TRIM PANELS

Clean the application site using isopropyl alcohol to ensure all wax/grease is removed. Allow the time for the panel to flash dry. Test fit the part to familiarize yourself with how it fits. Then remove the tape backing and press the trim onto the vehicle. Apply firm even pressure to ensure proper adhesion.

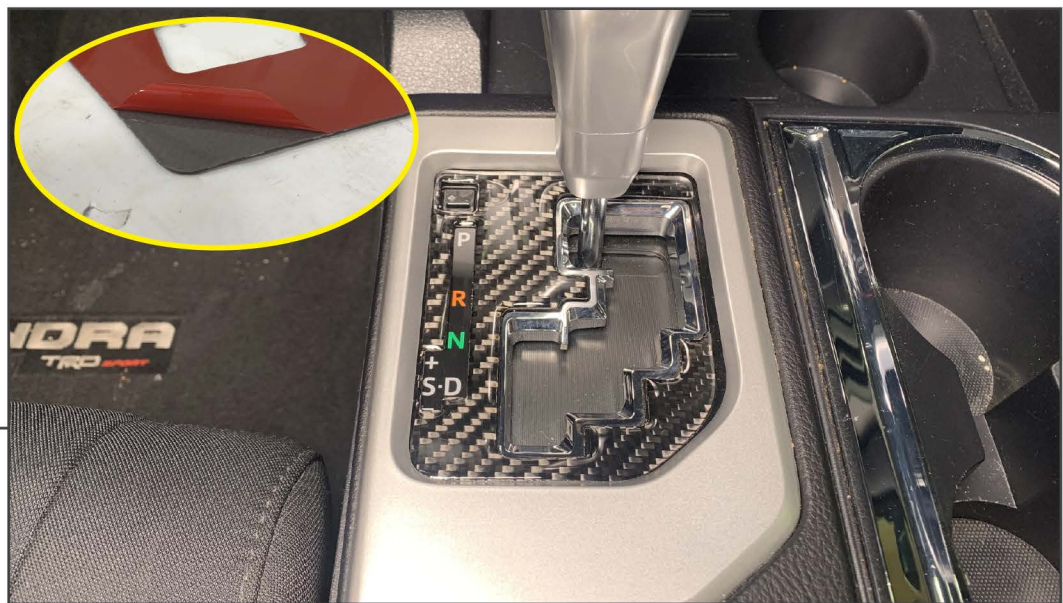

## INTERIOR TRIM PANELS

Clean the application site using isopropyl alcohol to ensure all wax/grease is removed. Allow the time for the panel to flash dry. Test fit the part to familiarize yourself with how it fits. Then remove the tape backing and press the trim onto the vehicle. Apply firm even pressure to ensure proper adhesion.