



GOLIATH GRILLE WITH LED DRL

(2018-2021 WRANGLER JK & 2020+ GLADIATOR JT)

INSTALLATION INSTRUCTIONS


CONTENTS

- (1) Grille
- (1) Weatherstrip
- (8) Vampire Clips
- (5) Wire Holders
- (1) Fuse Tap
- (1) ScotchLok
- (6) Push Clips
- (8) Tree Clips

TOOLS REQUIRED

- Panel Removal Tool
- Flathead Screwdriver
- Wire Strippers/Crimpers
- Isopropyl Alcohol
- Microfiber Cloth

SKU # J145335

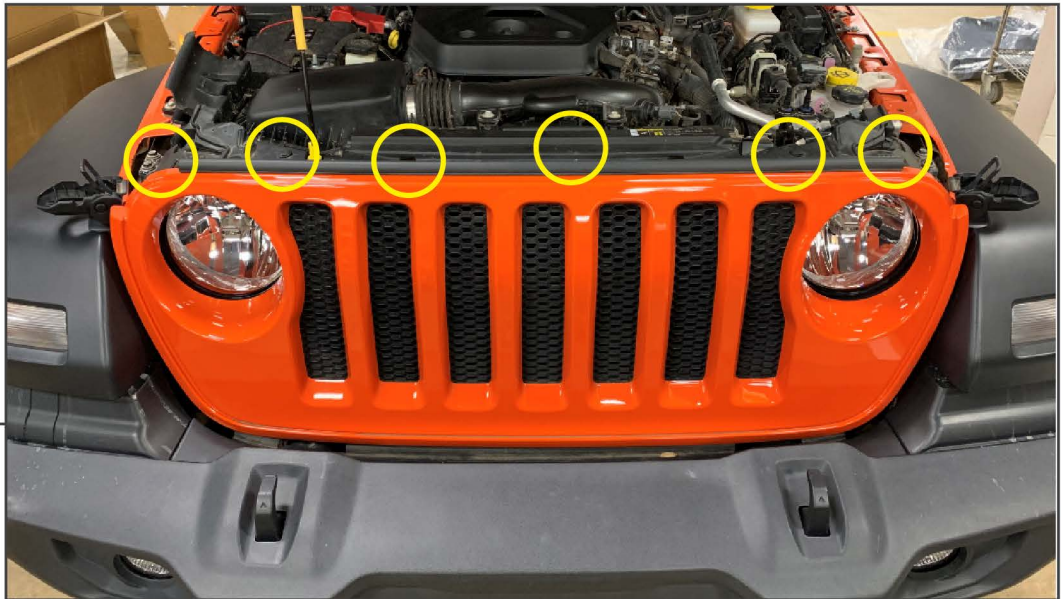

STEP 1

Open the hood. Remove (6) plastic push clips using a panel removal tool.




STEP 2

Firmly pull the lower portion of the grille away from the vehicle to dislodge the lower clips from the grille.




STEP 3

Install each backing panel to the new grille using the provided (4) tree clips per panel.

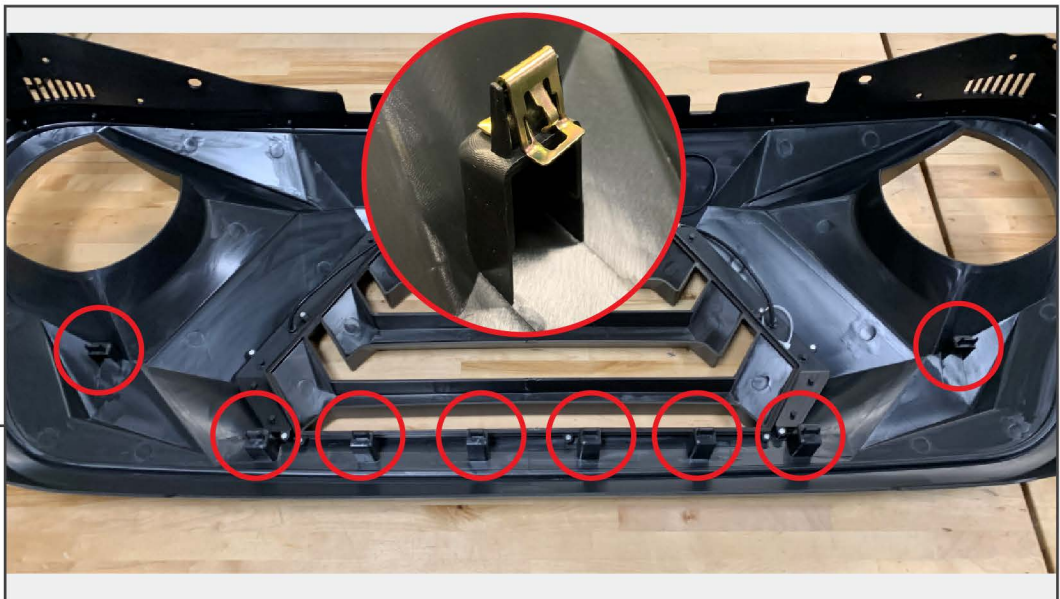


STEP 4

Attach (8) vampire clips to the back of the grille in the designated locations. Be sure the clips are pressed down completely and evenly.

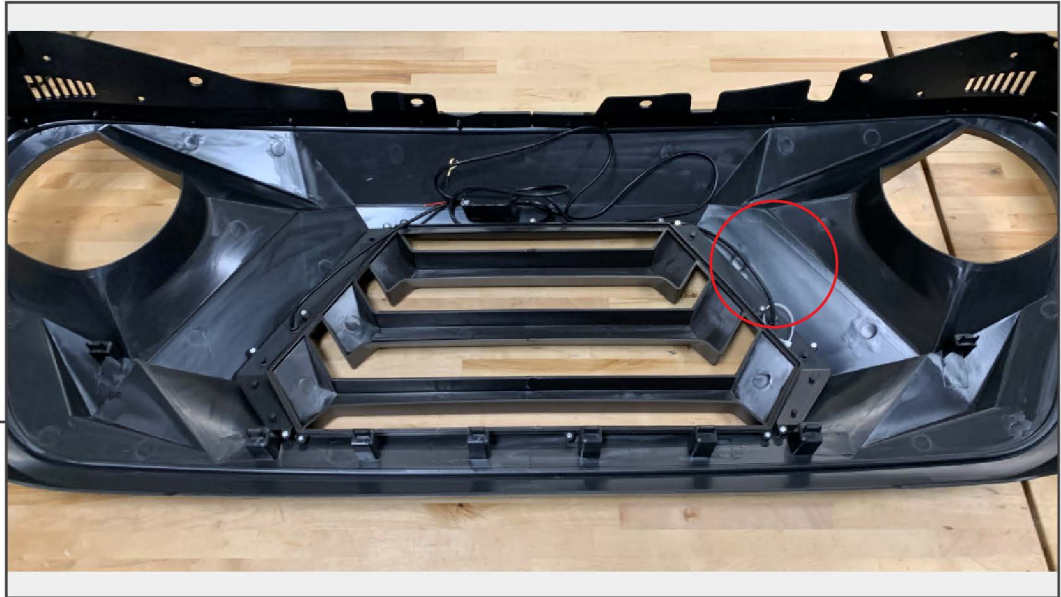


STEP 5

Clean the designated area of the grille using isopropyl alcohol and a microfiber cloth. Adhere the DRL harness module to the back of the grille.

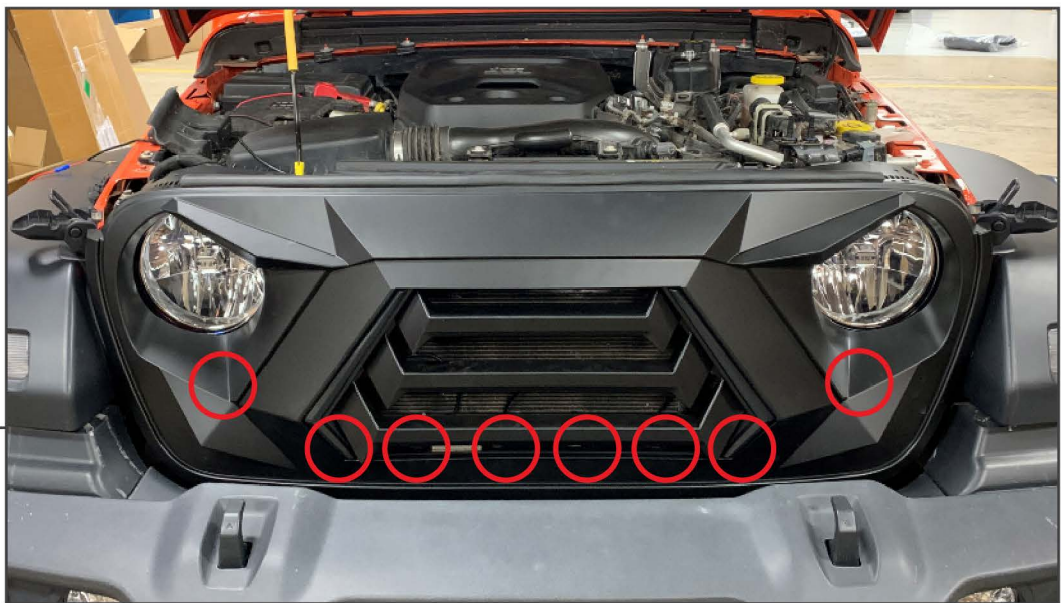

STEP 6


Align the grille to the vehicle. Route the DRL wiring harness towards the vehicle battery. Align the bottom of the grille with the lower grille clip mounts on the vehicle. Firmly push the grille onto the lower mounts to secure the bottom of the grille to the vehicle.

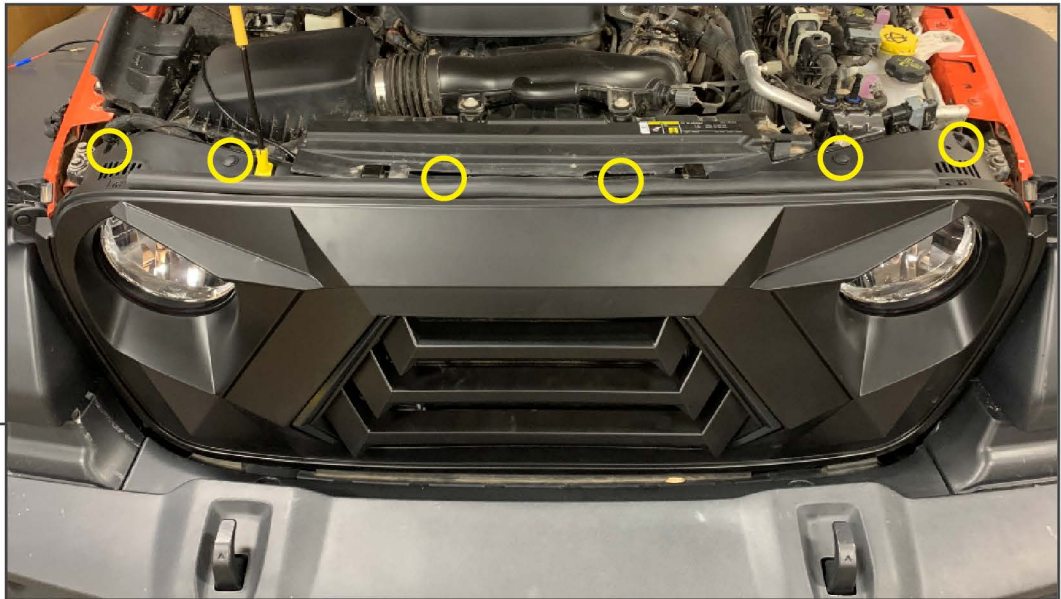**STEP 7**

Align the top of the grille to the radiator support and secure into place using the provided (6) push clips.

**STEP 8**

Insert the (1) fuse tap into the fuse box at the indicated location [F58]. If fuse spot is currently used, remove the fuse and replace a fuse in the fuse tap prior to installation. Route the fuse tap out of the fuse box and crimp to the grille DRL wiring harness.

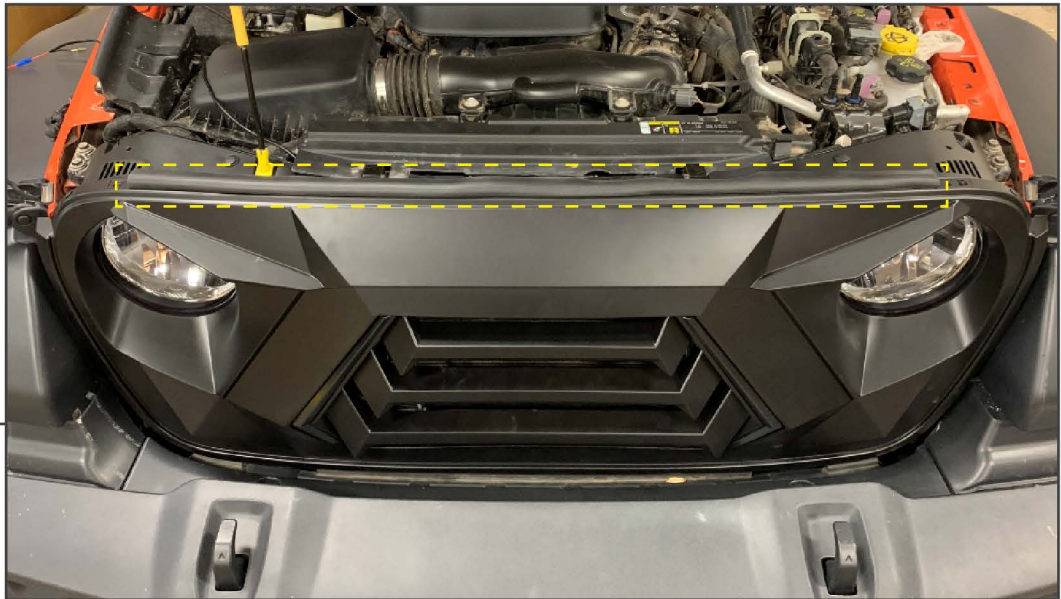

STEP 9

Clean the upper portion of the grille using isopropyl alcohol and a microfiber cloth. Adhere the weatherstrip to the top of the grille. Close the hood.



STEP 10

Installation is now complete.