



BILLET ALUMINUM PEDAL COVERS

(2018-2021 WRANGLER JL WITH AUTO TRANSMISSION)
(2020-2021 GLADIATOR JT WITH AUTO TRANSMISSION)

INSTALLATION INSTRUCTIONS

CONTENTS

- (1) Brake Pedal Cover
- (1) Throttle Pedal Cover

TOOLS REQUIRED


- Heat Gun/Hot Water
- Multi-Purpose Cleaner
- Microfiber Cloth

SKU # J150589



STEP 1

Clean the throttle pedal using multi-purpose cleaner. Remove the original brake pedal cover by peeling up the edge on all sides.

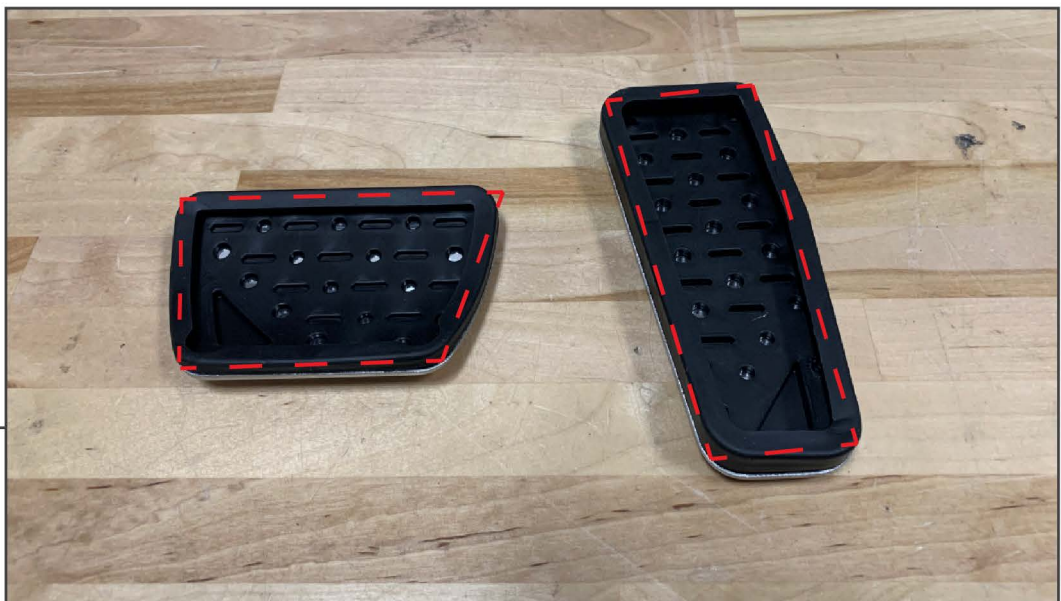

STEP 2

Using a heat gun, heat the rubber surrounding the billet pedal cover. While the cover is warm, apply the cover to the vehicle pedal. Be sure the rubber is fully surrounding the pedal.

Note: Hot water can be used in place of a heat gun. Allow the pedal cover to soak, then apply the cover to the pedal while the cover is warm. Be sure the rubber is fully surrounding the pedal.



STEP 3

Allow the pedal covers to cool to ensure the rubber grips the pedals.

Installation is now complete.