



---

# BILLET ALUMINUM HOOD CATCH KIT

(2007-2018 WRANGLER JK)

(2018-2021 WRANGLER JL)

(2020+ GLADIATOR JT)

---

## INSTALLATION INSTRUCTIONS

### CONTENTS

---

- (2) Upper Hood Catches
- (2) Lower Hood Catches
- (2) Upper Catch Gaskets
- (2) Lower Catch Gaskets
- (2) Rubber Stoppers
- (2) M8x1.25 x 20mm Allen Bolts
- (2) M8 Flat Washers
- (2) M8 Locking Nuts
- (4) M6x1.00 x 20mm Allen Bolts
- (4) M6 Flat Washers
- (4) M6 Locking Nuts

### TOOLS REQUIRED

---

- 4mm Allen Key
- 5mm Allen Key
- 10mm Socket/Wrench
- 13mm Socket/Wrench
- Ratchet

SKU # J154497 , J154498



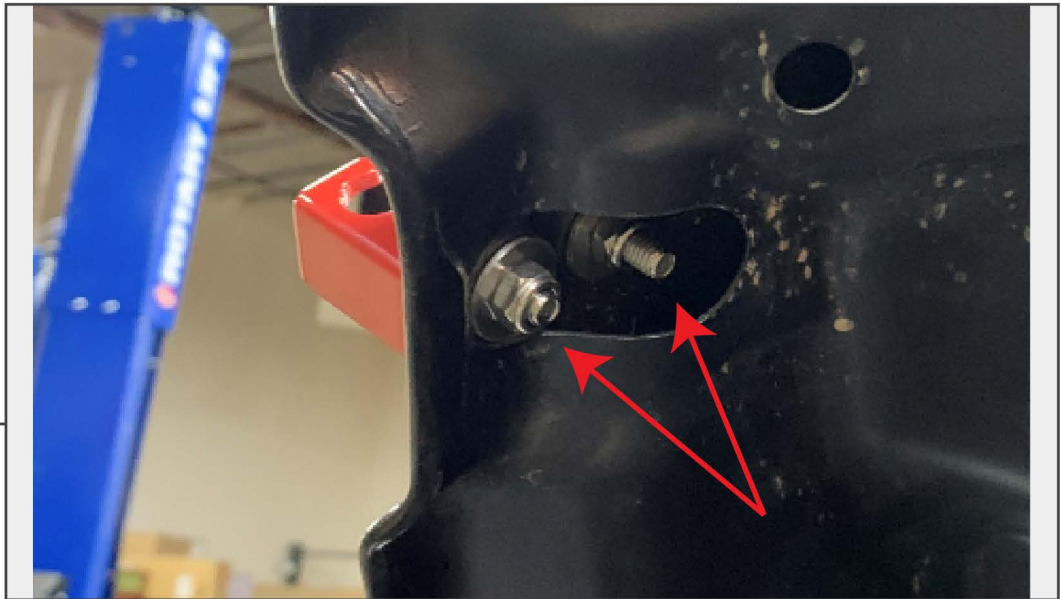
**STEP 1**

Remove the vehicle lower hood catch by removing (1) 13mm nut.



**STEP 2**

Remove the vehicle upper hood catch by removing (2) 10mm nuts.

**STEP 3**

Secure the new upper hood catch and gasket to the hood using the provided (2) M6 Allen bolts, (2) M6 flat washers, and (2) M6 locking nuts. Tighten until secure.

**STEP 4**

Remove (2) 4mm Allen bolts from the sides of the lower hood catch mount. Install the lower mount to the vehicle using (1) M8 Allen bolt, (1) M8 flat washer, (1) M8 locking nut, and (1) lower catch gasket. Tighten until secure.





---

**STEP 5**

With the lower mount installed, re-install the hood catch onto the lower mount re-using the previously removed bolts. Close the hood and test functionality. Make adjustments as necessary to ensure hood is securely latched. Repeat steps 1-5 to the opposite side.

Installation is now complete.