

FRONT DOOR PANEL STORAGE ORGANIZER

(2018-2023+ WRANGLER JL)

INSTALLATION INSTRUCTIONS


CONTENTS

(1) Pair of Front Storage Panels

TOOLS REQUIRED

T-20 Torx Screwdriver Drill (Optional) Isopropyl Alcohol Microfiber Cloth



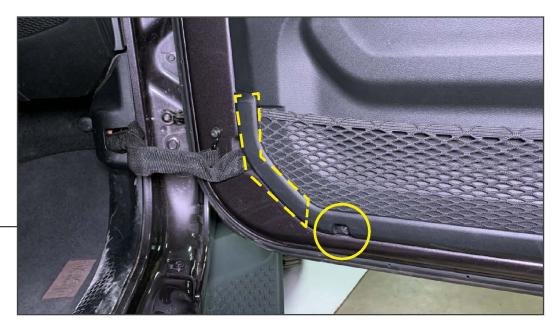

STEP 1


Clean the designated area of the door panel using isopropyl alcohol and a microfiber cloth. Remove (1) T-20 Torx screw from the bottom of the door panel.



STEP 2

Peel back the double sided tape from the storage panel. Align the storage panel to the door panel. Re-install the T-20 Torx screw into the door panel to secure the bottom of the storage panel. Firmly press the double sided tape down to secure the upper portion of the storage panel.



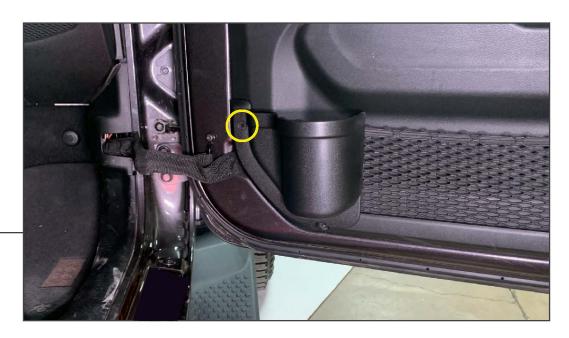

STEP 3 (OPTIONAL)

Optional: Using (1) self tapping screw, fasten the top of the storage panel to the door.

Installation is now complete.