



FRONT MESH SUN SHADE

(2007-2018 WRANGLER JK)

INSTALLATION INSTRUCTIONS


CONTENTS

- (1) Front Mesh Sun Shade
- (10) 8" Elastic Bands
- (2) 14" Elastic Bands

TOOLS REQUIRED

N/A


SKU #
J156703 / J156704 / J156705

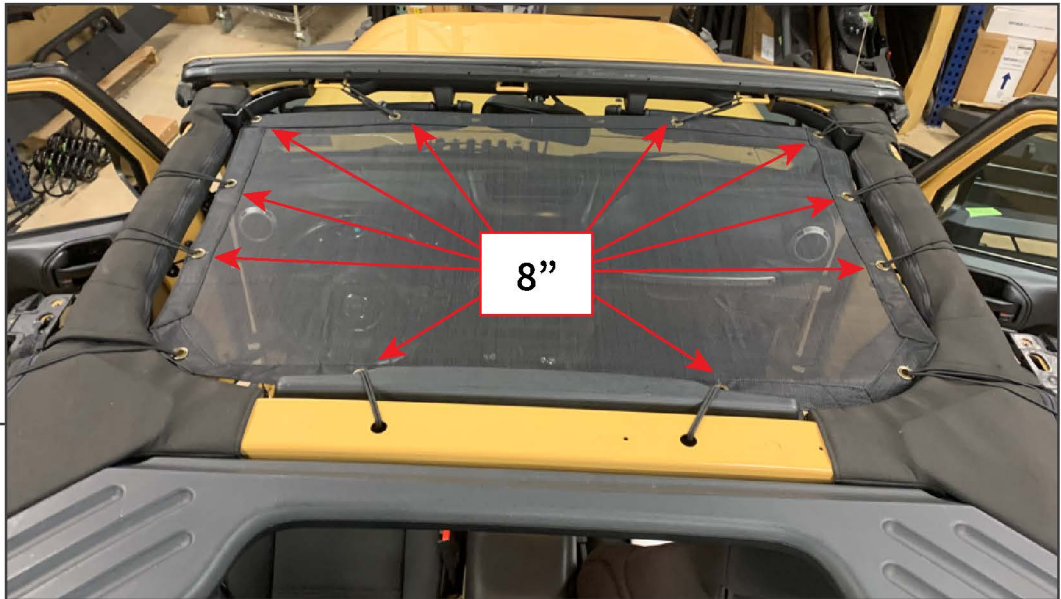

**STEP 1
(FRONT)**

Using (10) 8" elastic bands, install the front sun shade to the vehicle roll bars.

Note: The rear (2) elastic bands route through the hard top mounting point holes in the roll bar.

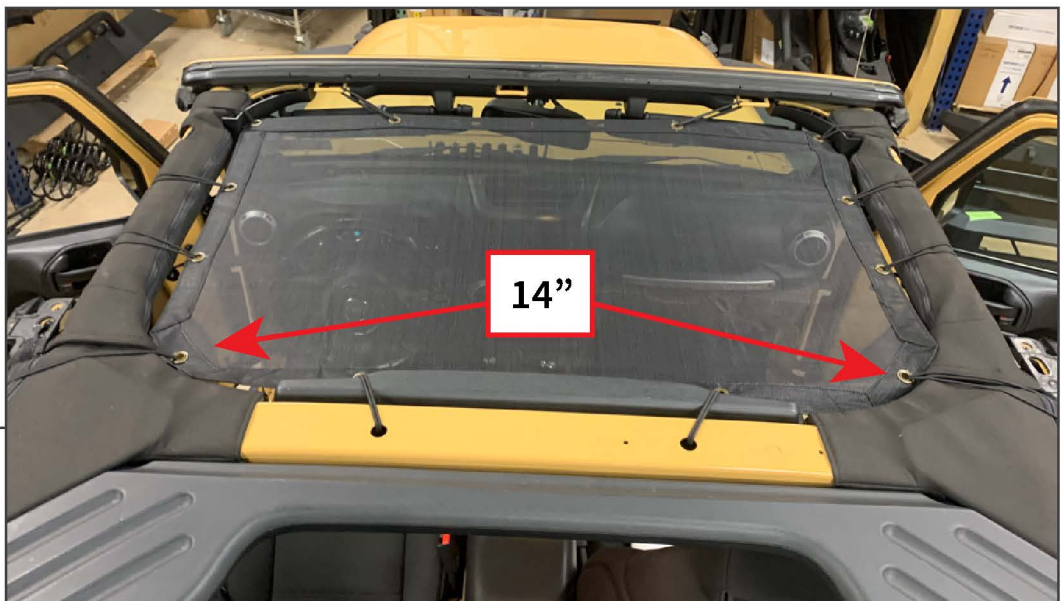

**STEP 2
(FRONT)**

Using (2) 14" elastic bands, install the rear corners of the mesh top to the vehicle roll bar corners.

Installation is now complete.