



MESH SUN SHADE; FRONT

(2018-2021 WRANGLER JL)

INSTALLATION INSTRUCTIONS


CONTENTS

- (1) Front Sun Shade
- (10) 8" Elastic Bands
- (2) 14" Elastic Bands
- (1) 18" Elastic Bands

TOOLS REQUIRED


N/A

SKU #:
J156714-JL / J156715-JL / J156716-JL

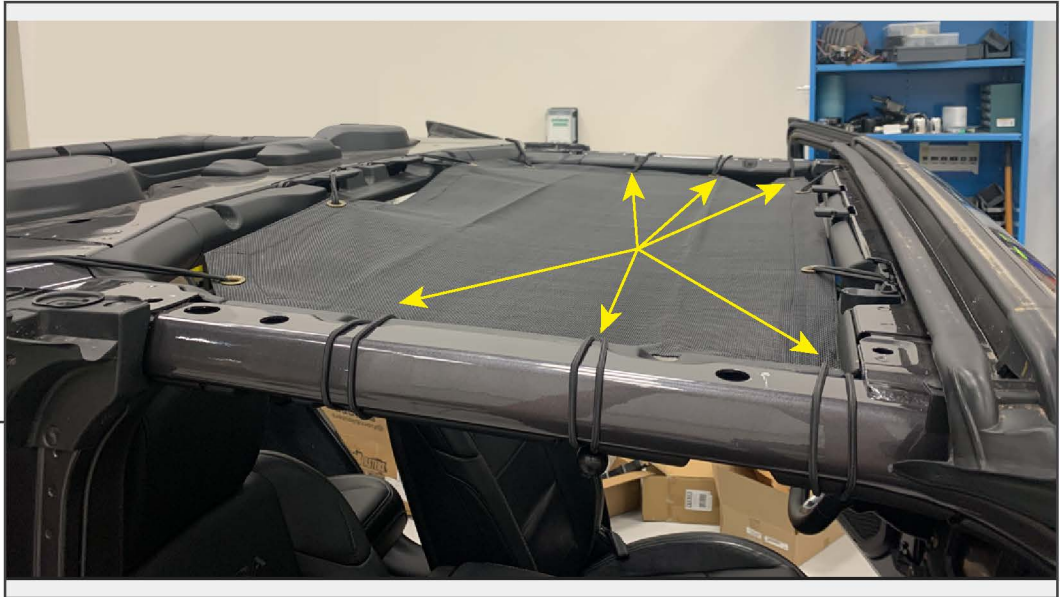

**STEP 1
(FRONT)**

Remove the top from the vehicle. Drape the sun shade over the front vehicle roll bars. Secure the sides of the mesh top to the side roll bars using (6) 8" elastic bands.

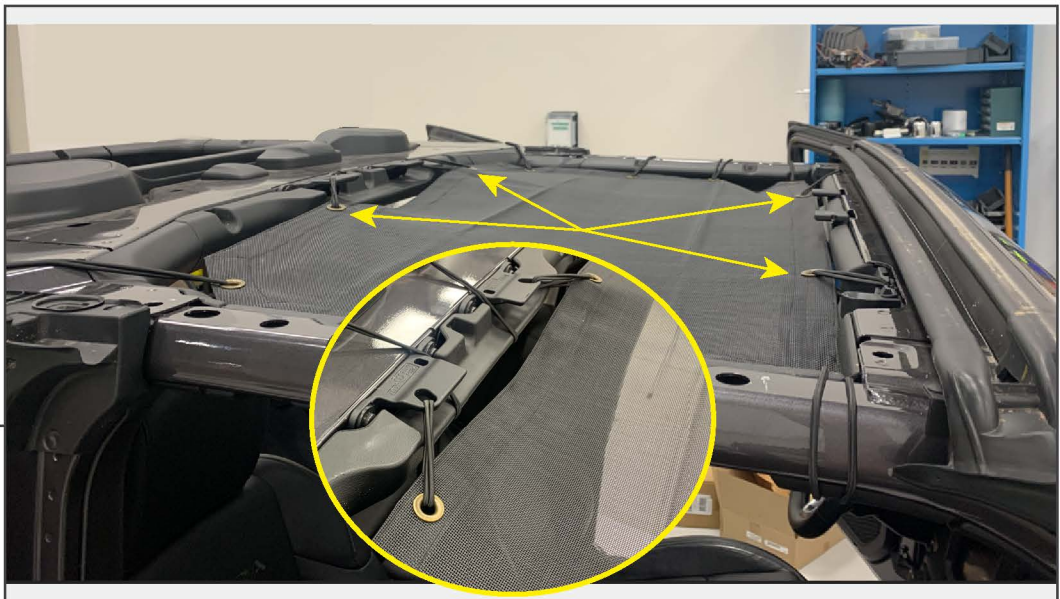


**STEP 2
(FRONT)**

Secure the front and rear of the mesh top to the vehicle top mounting points using (4) 8" elastic bands.



**STEP 3
(FRONT)**

Secure the rear corners of the mesh top to the roll bars using (2) 14" elastic bands. Wrap the band around the rear section of the roll bar towards the rear door.

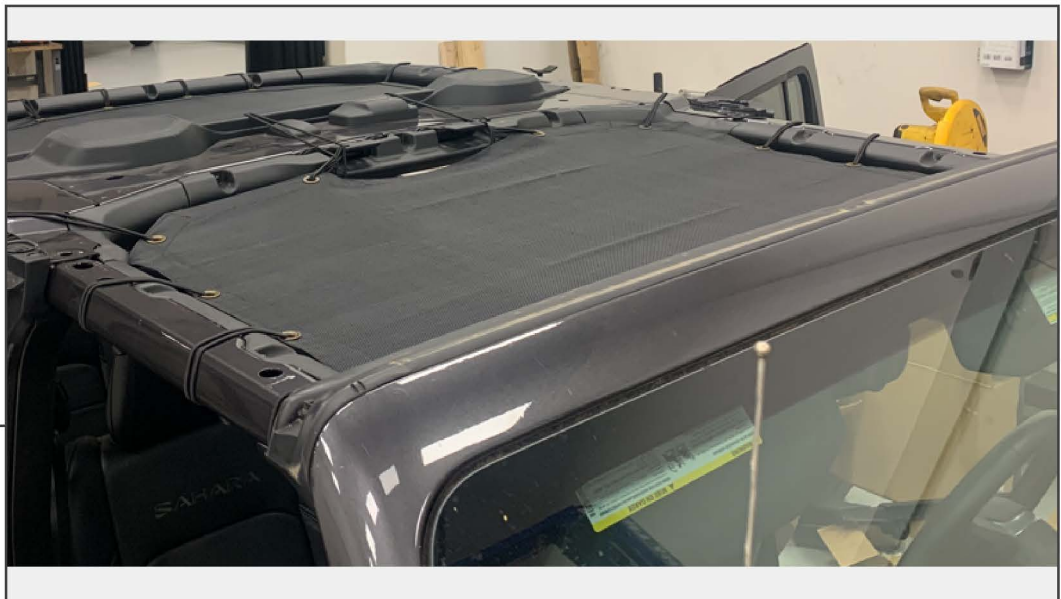

**STEP 4
(FRONT)**

Install the center of the rear mesh top using (1) 18" elastic band. Wrap the band around the entire center roll bar and sound bar assembly.

Front installation is now complete.