



PRECISION MOLDED CARGO LINER

(2018-2021 WRANGLER JL)

INSTALLATION INSTRUCTIONS


CONTENTS

(1) Cargo Liner

TOOLS REQUIRED

Razor Knife

SKU # J156989-JL

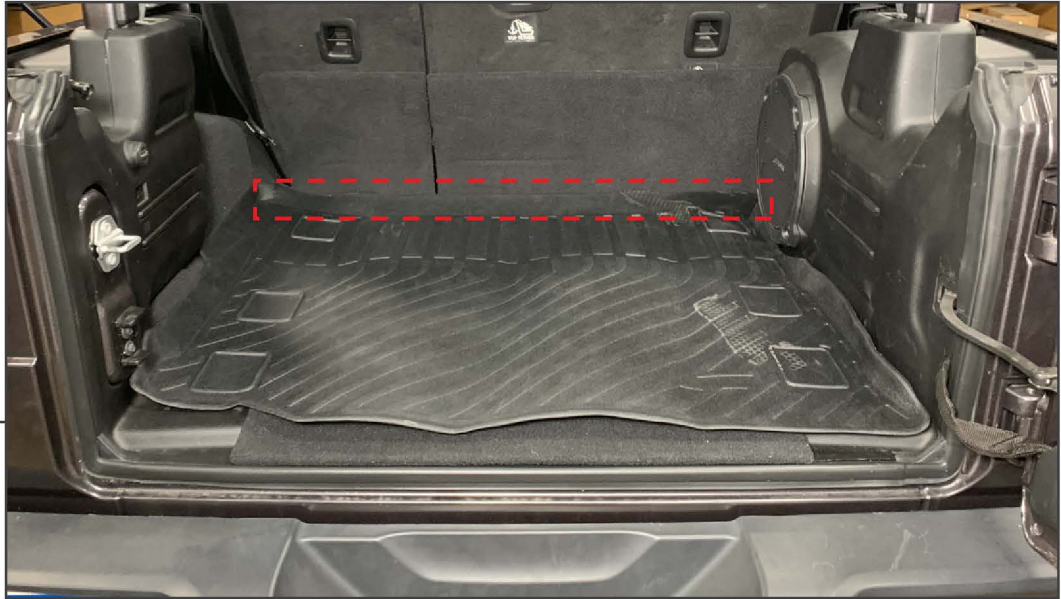

STEP 1

Place the cargo liner into the vehicle cargo area. Ensure the front lip is raised to allow the liner to fully fit into the cargo area.



STEP 2

Installation is now complete.