



ROCK SLIDERS

(2007-2018 WRANGLER JK - 4 DOOR)

INSTALLATION INSTRUCTIONS

CONTENTS


(2) Rock Sliders

TOOLS REQUIRED

18mm Socket
Impact Gun or 1/2" Ratchet


SKU # J157738

STEP 1

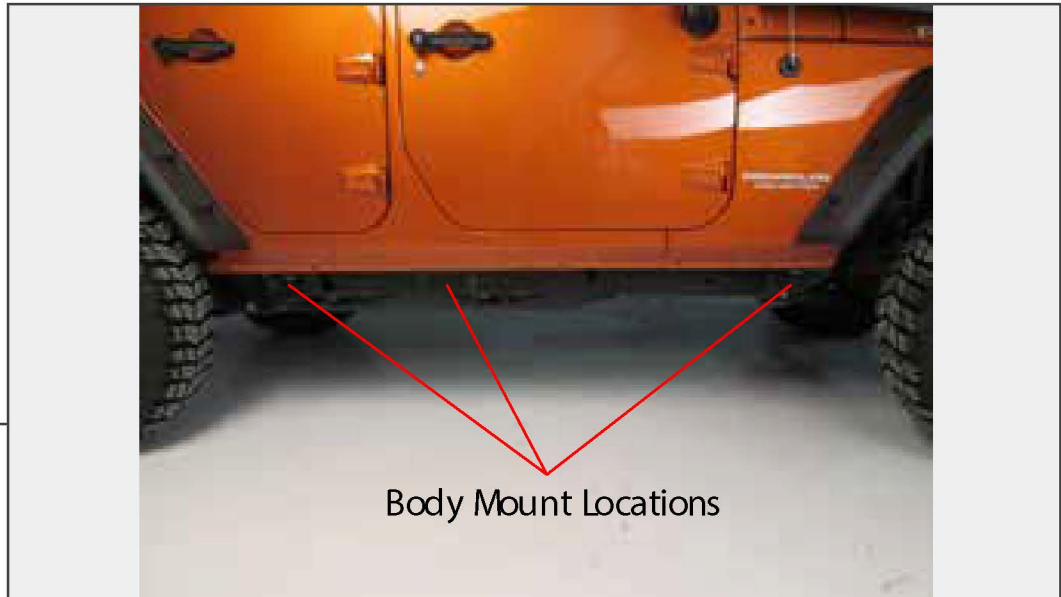

Begin by locating the (3) body mounts that run along the frame of the vehicle.

STEP 2

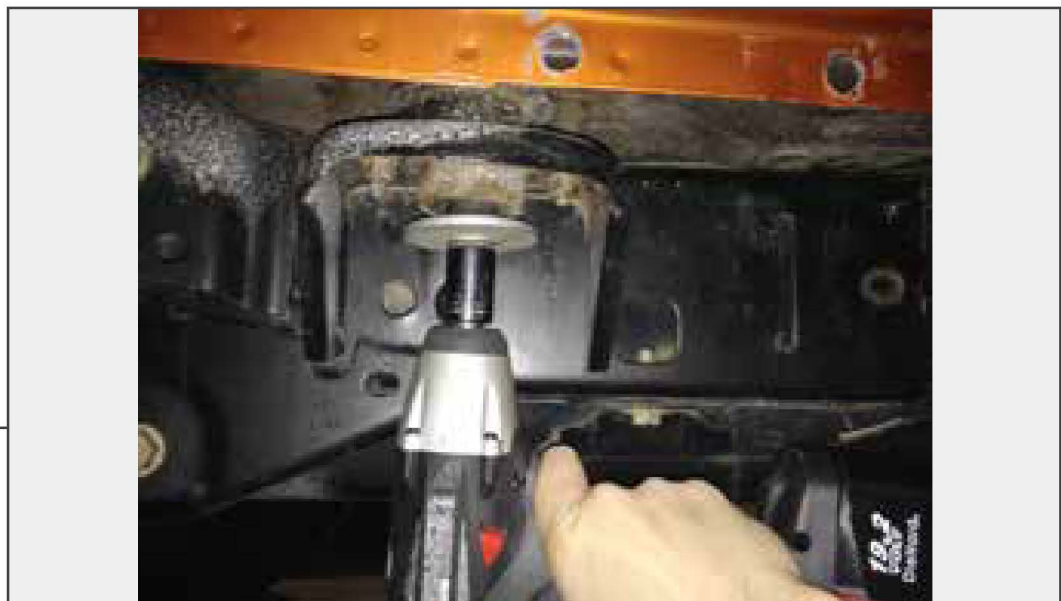

Using an impact gun or ratchet, remove the 18mm body mount bolts from the body.

Note: Using spray lubricant on the bolts prior to removal is recommended.



STEP 3

With the body mount bolts removed, line the rock slider up with the body mount holes and hand tighten each bolt. Once you have all the bolts in place, torque each bolt to factory torque specs (80 ft. lbs.)

Installation is now complete.