



OVERHEAD MOLLE PANEL

(1997-2006 WRANGLER TJ)

INSTALLATION INSTRUCTIONS

CONTENTS

- (1) Overhead Molle Panel
- (2) Roll Bar Clamps
- (2) 'T' Brackets
- (2) Flat Brackets
- (4) Rubber Insulators
- (4) M6 x 50mm Bolts
- (4) M6 x 15mm Bolts
- (4) M6 Flat Washers
- (4) M6 Flange Nuts

TOOLS REQUIRED

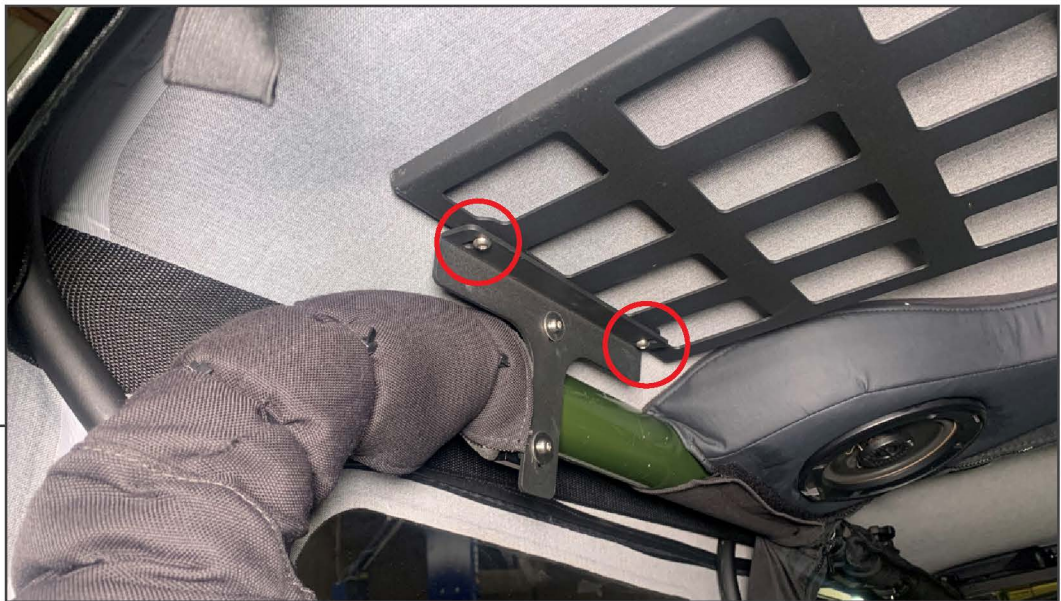
- 4mm Allen Key
- 10mm Wrench

SKU # J164245

**STEP 1**

Relocate the cargo area roll bar padding. Mount the (1) 'T' bracket to the roll bar using (1) roll bar clamp, (1) flat bracket, (2) M6 x 50mm bolts, and (2) M6 flat washers.

Repeat this step for the opposite side of the vehicle.

**STEP 2**

Lift the overhead molle panel over the 'T' brackets, then secure to the molle panel to the 'T' brackets using (2) M6 x 15mm bolts and (2) M6 flange nuts per side.



STEP 3

Installation is now complete.