



TREKKER FRONT BUMPER

(2007-2018 WRANGLER JK)

INSTALLATION INSTRUCTIONS

CONTENTS

(4) M12x1.75 35mm Bolts	(8) M8x1.25 25mm Bolts
(4) M12x1.75 Nuts	(8) M8 Lock Nuts
(8) M12 Lock Washers	(16) M8 Flat Washers
(8) M12 Flat Washers	(2) 3/4" D-Ring Shackles
(12) M4x0.7 15mm Bolts	(1) 2.5mm Allen Key
(20) M4 Flat Washers	(2) Fog Light Brackets
(12) M4 Lock Washers	(2) 9005 Fog Light Extension
(8) M4 Nuts	(2) H16 Extension Harnesses
(4) Clear Stud Retainers	

TOOLS REQUIRED

- 7mm, 8mm, 13mm, 18mm Sockets
- 2.5mm Allen Key (included)
- 7mm, 13mm Wrench
- Phillips Screwdriver
- Panel Pry Tool

SKU # J164365



STEP 1

Begin by removing the plastic sway bar cover by removing (2) plastic push clips.




STEP 2

Uninstall the original bumper by removing (8) 18mm nuts. Unplug the (2) bumper fog lights if equipped by pressing on the plug and pulling away from the light. Once the hardware is removed, pull the bumper away from the vehicle.



STEP 3

Remove the fog lights from the original bumper by removing (8) Phillips head screws.

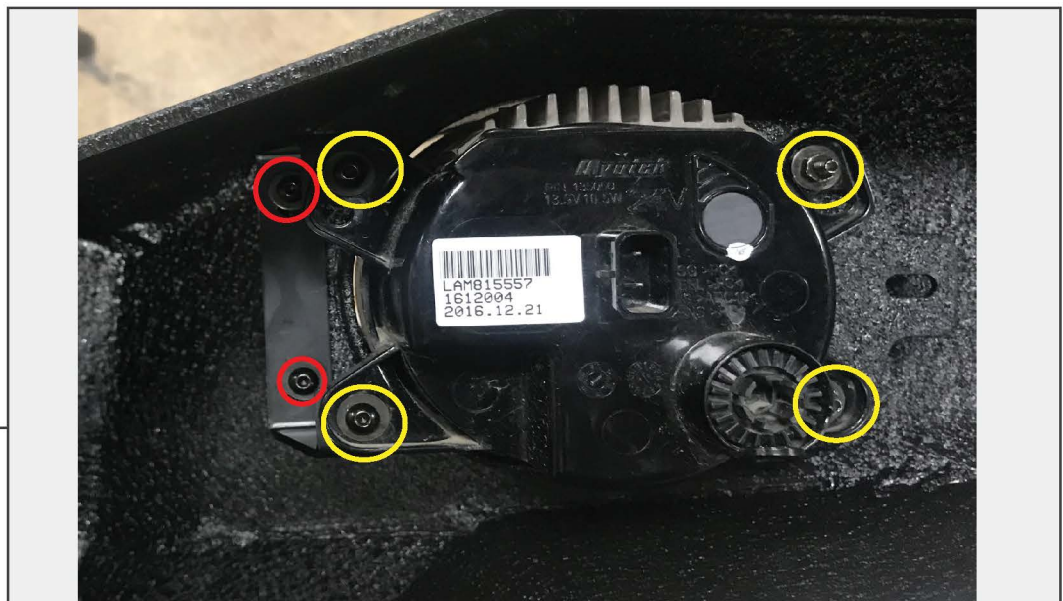

STEP 4

Install fog light brackets using (2) M4x0.7 bolts, (4) M4 washers, and (2) M4 lock nuts per side. Once brackets are secure, install the fog lights into the bumper using (4) M4x0.7 bolts, (4) M4 nuts, (8) M4 flat washers, and (4) M4 lock washers per side.



STEP 5

Install the overriders hoop onto the bumper using (8) M8x1.25 x 25mm bolts, (16) M8 flat washers, and (8) M8 nuts. Tighten the nuts and bolts using a 13mm socket and wrench.



STEP 6

Install the studded nut plates into the bumper. Use (1) clear stud retainer per bracket to hold the brackets in place. Install bumper on vehicle, align the vehicle frame holes with the studs sticking out of the bumper. Once aligned, install (1) M12 flat washer, (1) M12 lock washer, and (1) M12 nut onto each stud bracket.

****Note: Leave nuts loose at this time for adjustments later.**

STEP 7



Once the bumper is attached loosely with the nuts, using (4) M12x1.75 x 35mm bolts, (4) M12 lock washers, and (4) M12 flat washers, thread the bolts into the welded nuts on each of the previously installed brackets. Once the bolts are loosely attached, make sure bumper is level on vehicle, and tighten the nuts and bolts to the vehicle using a 18mm socket.

STEP 8



Plug the extension harness into the vehicles fog light harness. Once the harness is installed, plug the extension into the fog lights in the bumper.



STEP 9

Install the 3/4" D-Rings into the front of the bumper.

Installation is now complete.