



SWITCH POD

(1997-2006 WRANGLER TJ)

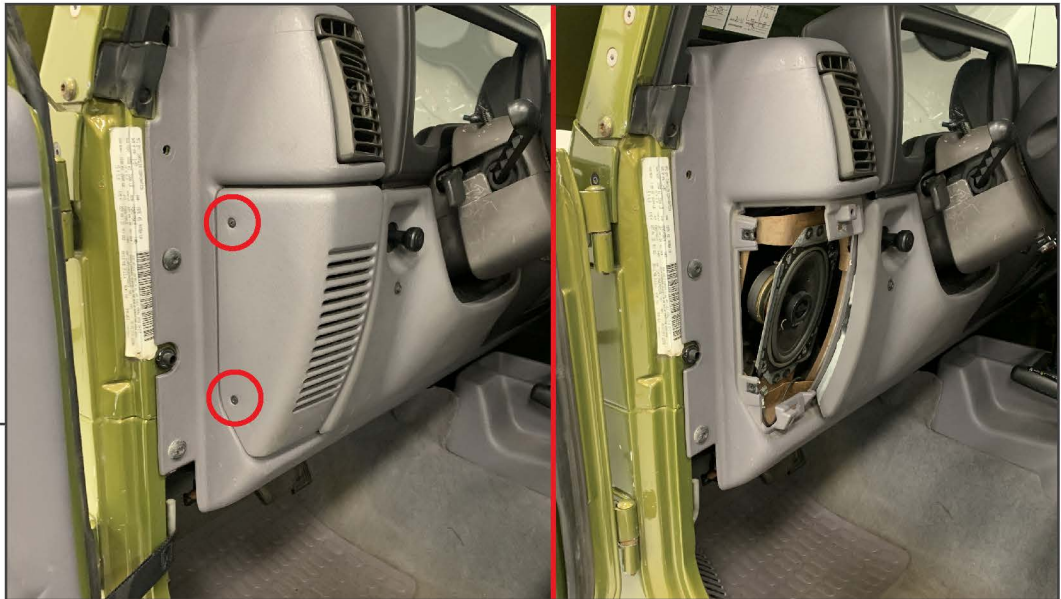
INSTALLATION INSTRUCTIONS

CONTENTS

- (1) Switch Pod
- (2) Phillips Screws

TOOLS REQUIRED

Phillips Screwdriver

STEP 1

Remove the vehicle dashboard panel by removing the (2) dashboard screws.

STEP 2

Wire the switches into the switch pod (wiring not included). Place the switch pod into the dashboard and secure into place using the provided (2) Phillips head screws.

Installation is now complete.