



DOOR ARM REST - PAIR

(1997-2006 WRANGLER TJ)

INSTALLATION INSTRUCTIONS


CONTENTS

(2) Door Arm Rests
(4) Phillips Screws

TOOLS REQUIRED


T-15 Torx Screwdriver
Phillips Screwdriver

STEP 1

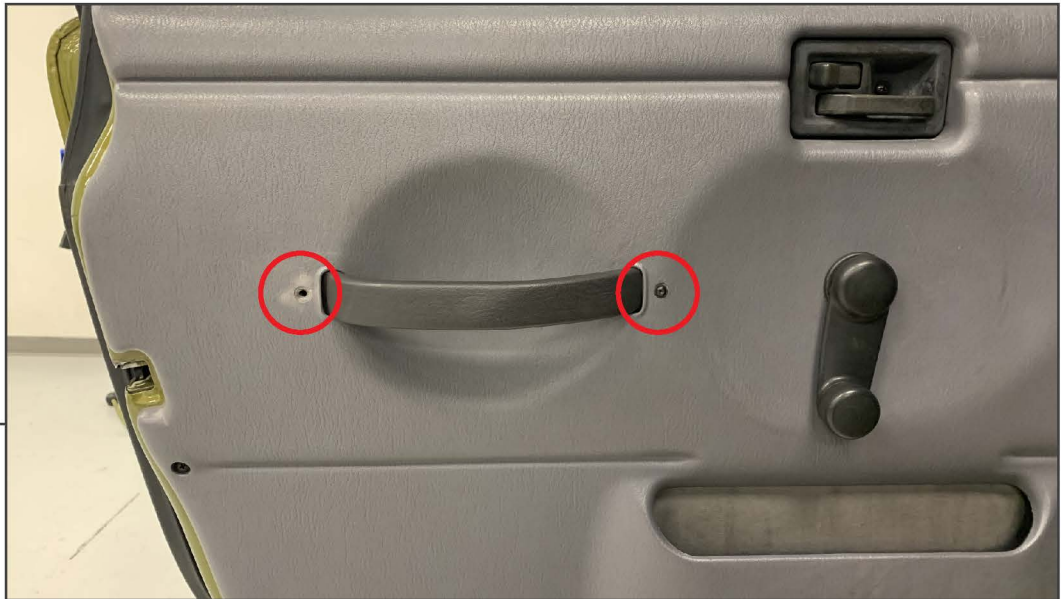

Remove (2) T-15 Torx screws from the vehicle door grab handle.

STEP 2

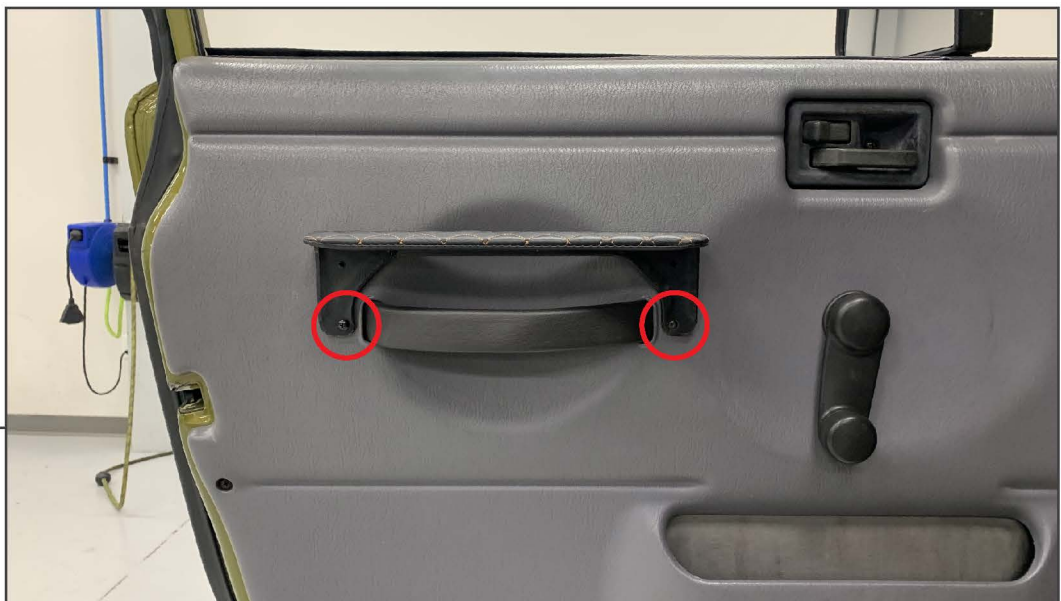

Align the door arm rest to the door panel and grab handle. Install the (2) T-15 Torx screws through the arm rest and into the grab handle.



STEP 3

Optional: Using a drill, secure the top portion of the arm rest using (2) provided Phillips head screw.



STEP 4

Repeat steps 1-3 to the opposite side.

Installation is now complete.