



REAR WINDOW MOLLE PANELS

(2018+ WRANGLER JL - 4 DOOR)

INSTALLATION INSTRUCTIONS

CONTENTS

- (1) LH Molle Panel
- (1) RH Molle Panel


TOOLS REQUIRED

- T-40 Torx Socket
- Ratchet



STEP 1

Remove (2) T-40 Torx bolts from the hard top assembly.

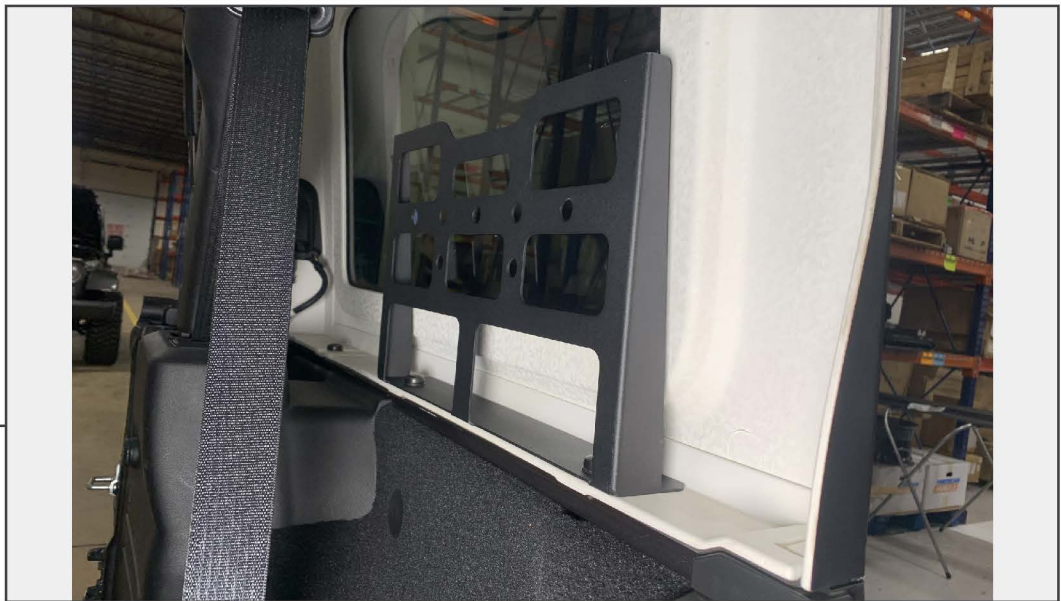

STEP 2

Place the molle panel onto the flat area of the hard top. Re-install the (2) T-40 Torx bolts through the molle panel and into the original hard top mount. Tighten hardware until secure.

Repeat steps 1-2 to the opposite side of the vehicle. Installation is now complete.