



COWL LIGHT MOUNTS

(2018+ WRANGLER JL)
(2020+ GLADIATOR JT)

INSTALLATION INSTRUCTIONS

CONTENTS

- (1) LH Light Mount
- (1) RH Light Mount
- (2) Spacers
- (2) M6x1.00 x 45mm Allen Bolts
- (4) M6 Flat Washers
- (2) 6mm Allen Bolts

TOOLS REQUIRED

- 4mm, 6mm Allen Key/Socket
- T-40, T-50 Torx Sockets
- Ratchet



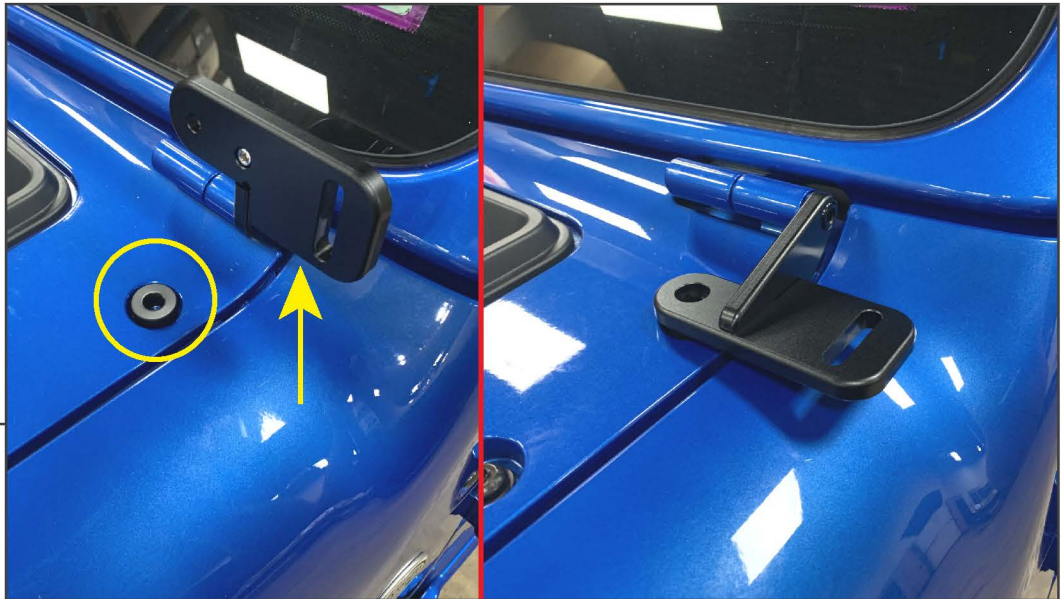
STEP 1

Remove (1) T-40 Torx bolt from the vehicle cowl.



STEP 2

Remove (1) T-50 Torx bolt from the windshield hinge.

**STEP 3**

Install the cowl light mount to the windshield hinge using the provided (1) 6mm Allen bolt. Place (1) provided spacer inside the bolt hole on the cowl. Fold the light mount to rest on the spacer.

**STEP 4**

Install (1) M6 x 45mm Allen bolt and (1) M6 flat washer through the light mount and the spacer. Tighten the hardware evenly to secure the light mount to the vehicle.

Repeat steps 1-4 to the opposite side of the vehicle. Installation is now complete.