




Antenna Bracket Installation Instructions

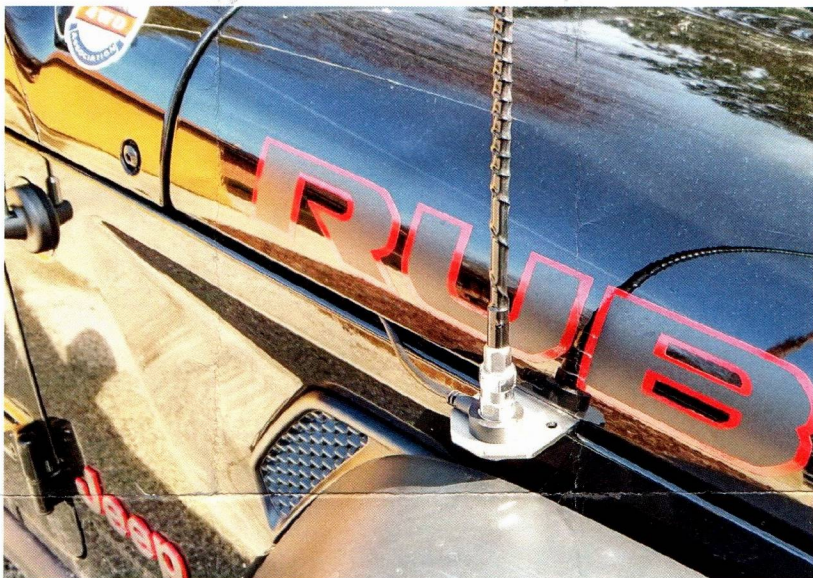


Kit Includes:

- 1 Antenna Bracket (CB or NMO)
- 1 #14x3/4" Self-Tapping Stainless Hex Screw

Not Included: (sold separately)

- 1 Antenna
- 1 Coax Wire
- 1 Coupling Nut

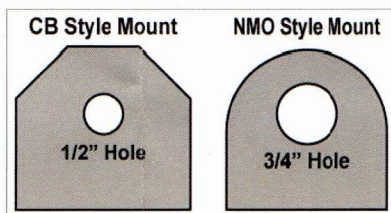

Tools Needed:


- 10mm Wrench or Socket
- Cordless Drill w/ 3/8" Socket (optional self tapping screw)

Instructions:

Open hood and locate fender attachment bolts. The bracket is universal so it will work on the driver or passenger side.

Note! On Rubicon, you can only use the rear most fender attachment bolts as the high fender blocks the mount.


Loosen the fender bolt in the location you want to use. Slide bracket under the bolt and tighten back up.

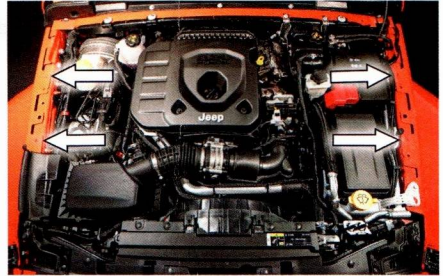

Optional: Use the supplied self-tapping screw and run it through one of the 4 auxiliary mount holes on the bracket and into the fender for extra stability on taller antennas.

Attach your favorite antenna and hit the trails.

The mount also has an additional hole in the bracket for antennas that require a separate ground wire.

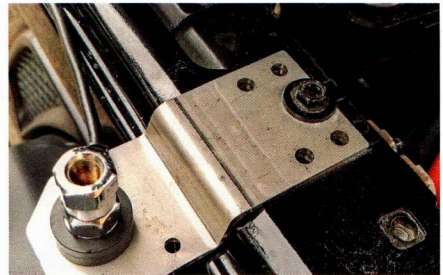

*Check out our AWESOME
Universal Radio Mic Mounts!*



Visit us at:
TopsyProducts.com
to see all our latest innovations



2024-6 FMAB-NMO/JL