

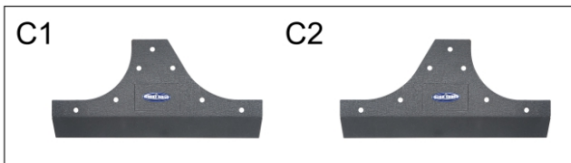



REDROCK^{4X4}

Rocker Armor


J166365

(1) Contents:

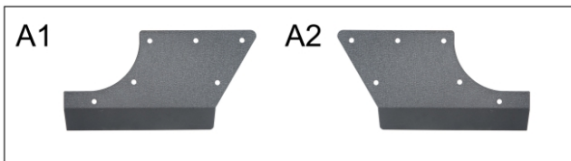

(2) Tools required:

- a. 6mm HEX Socket Wrench
- b. Drill
- c. 13mm Drill bit
- d. M10 Pneumatic Rivet Nut Setting Kit

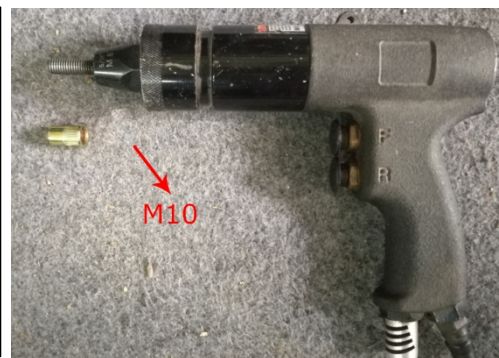

(3) Installation time:


About 1-2 hours, 2-3 persons needed. Installation time is different according to your mechanical skill level.

(PLEASE VERIFY ALL PARTS ARE PRESENT AND READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION!)

(4) Installation instruction:

Step 1:



Clean the vehicle using exterior detailer and a microfiber to prepare for installation.

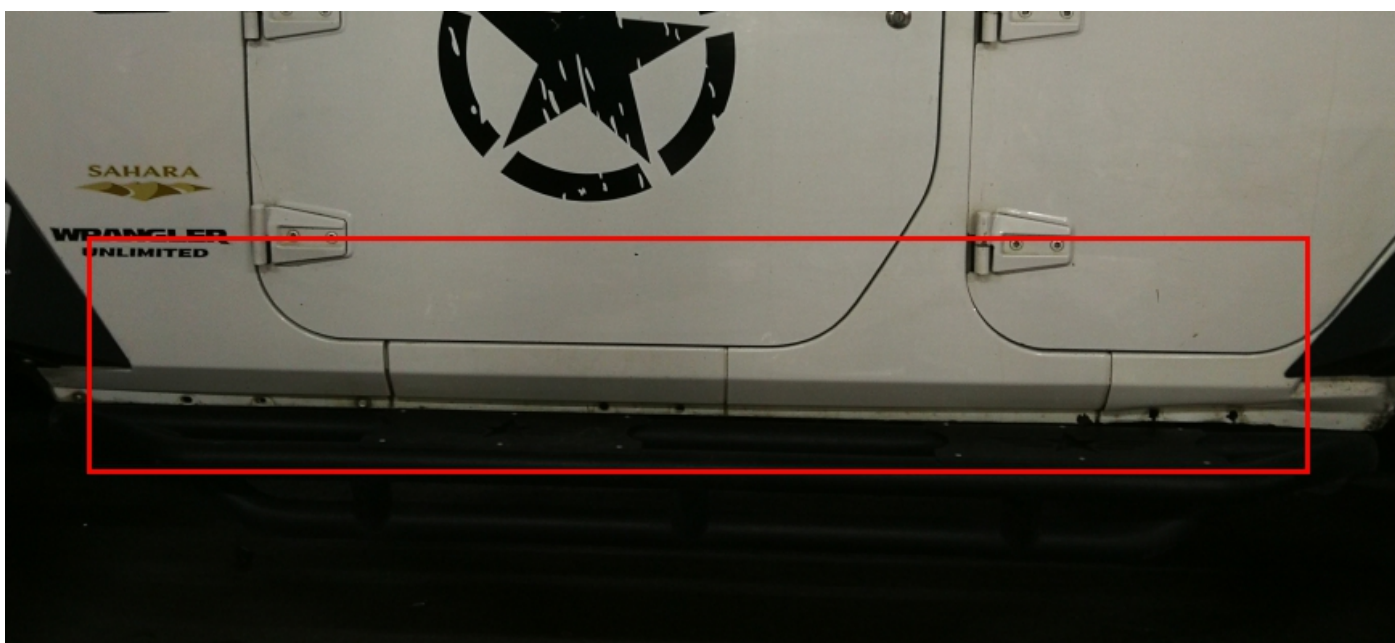

Step 2:

Align the panels to the vehicle, and mark the bolt holes with a marker.



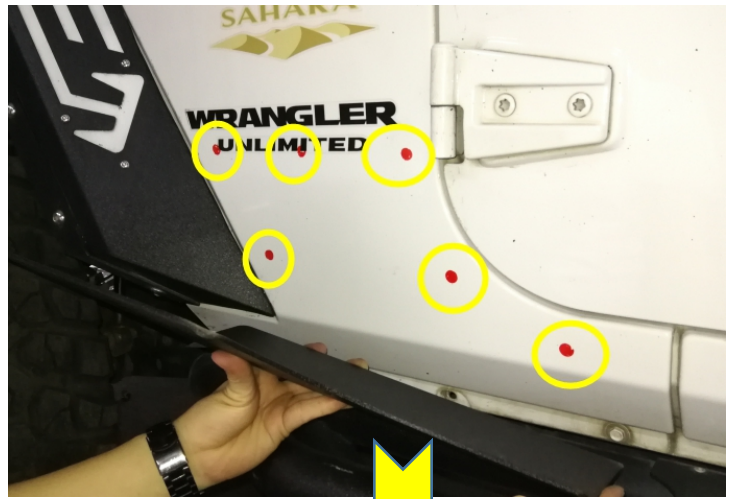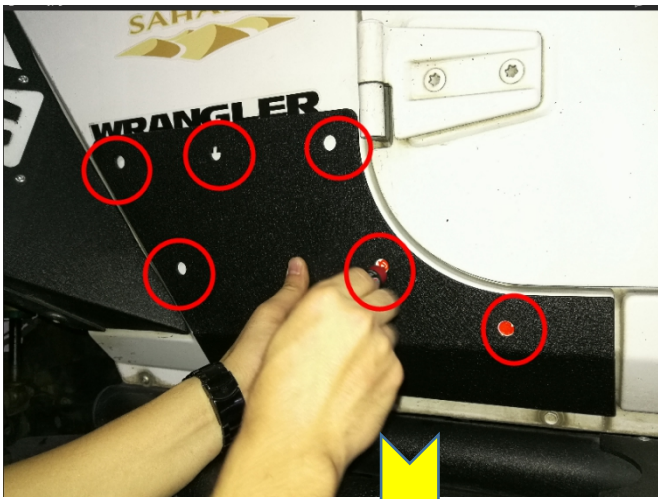

Step 3:



Drill the bolt holes.

And install the PART "I" by the

M10 Pneumatic Rivet Nut Setting


Kit.




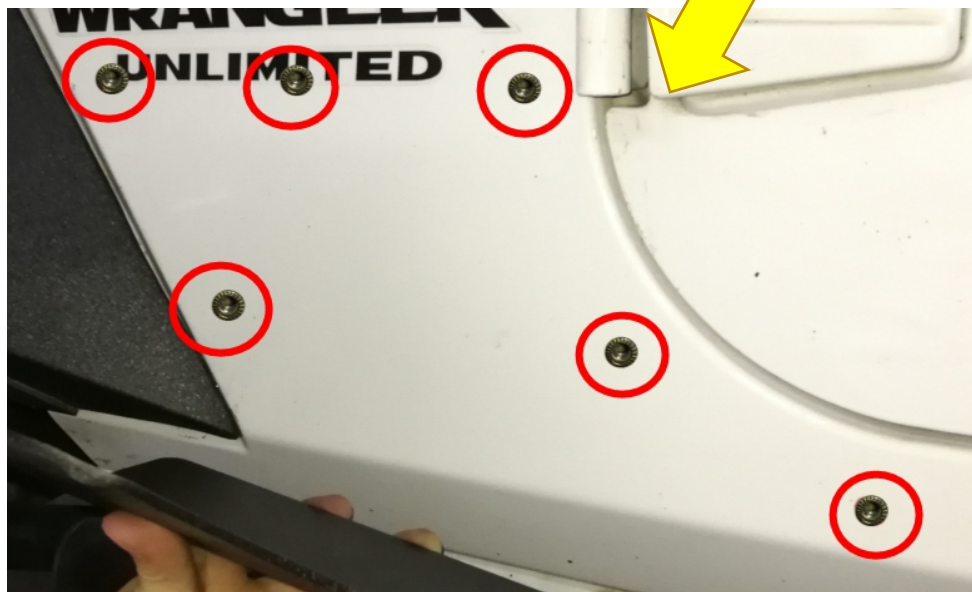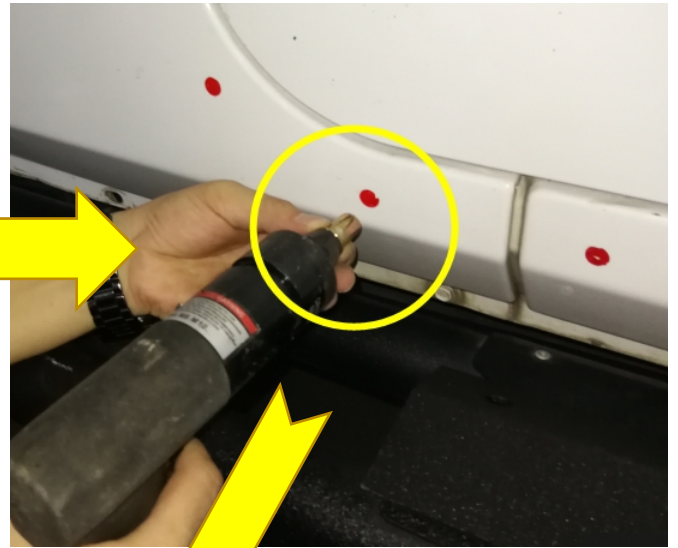

Step 4:

**Install the PART "A2" with
PART "H", PART "J" by the
6mm HEX Socket Wrench.**

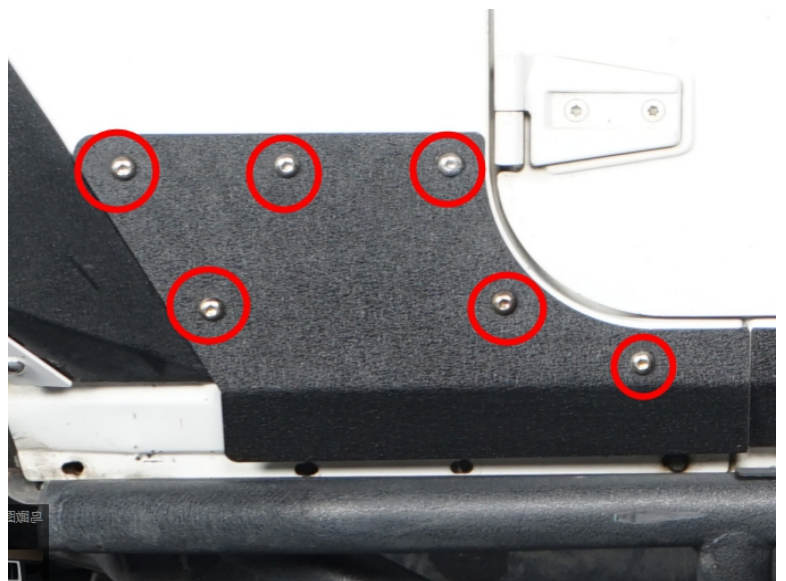

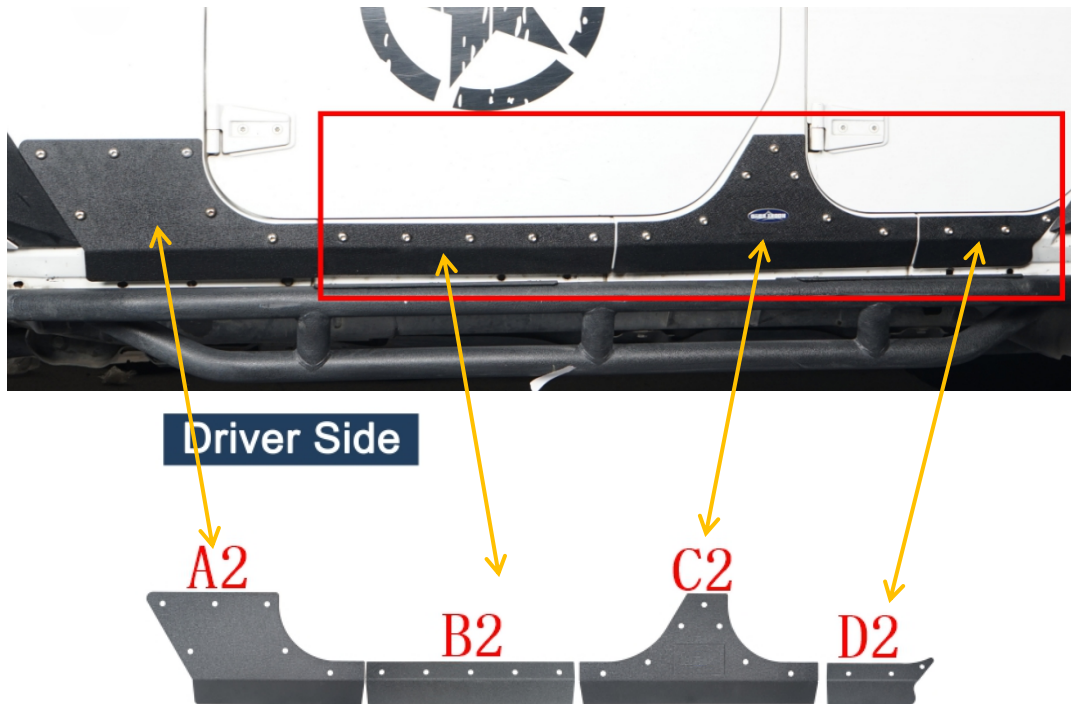

Step 5:

Repeat steps 1-5 on the opposite side of the vehicle.

Step 6:

Installation is now complete.

After



Before

