



# MAKE A DIFFERENCE

## Side Step

**QP.BXG-508**

**QP.BXG-508-2**

### (1) Contents:

**a.1x Driver Side Step;**

**b.1x Passenger Side  
Step;**


**c.Attached bolts;**



### (2) Tools required:

**a. 13mm Socket Wrench;**

**b. 10mm Wrench;**

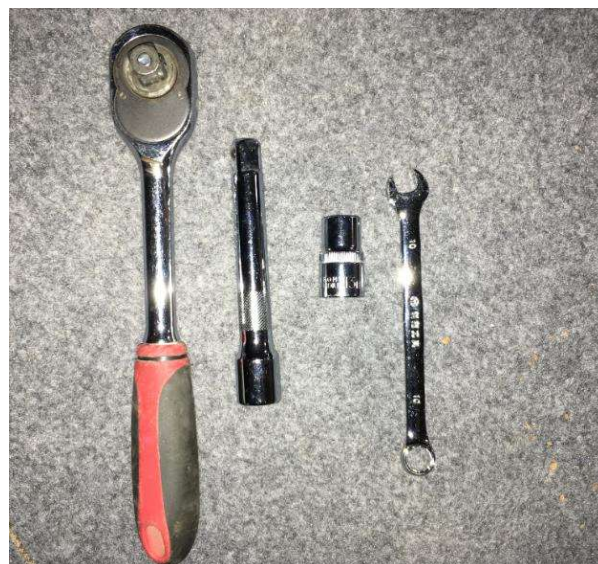

**(3)Installation time: About 1 hour, 2-3 persons needed.**

**( Installation time is difference as individual as person )**


#### **(4)Installation instruction:**

**Step 1:**Begin by removing the factory side step.Then ready to install the new side step.


**Step 2:**Install the corresponding side step for the passenger side. The front end is longer than rear end as the picture shown.




**Insert the side step into the car frame.**

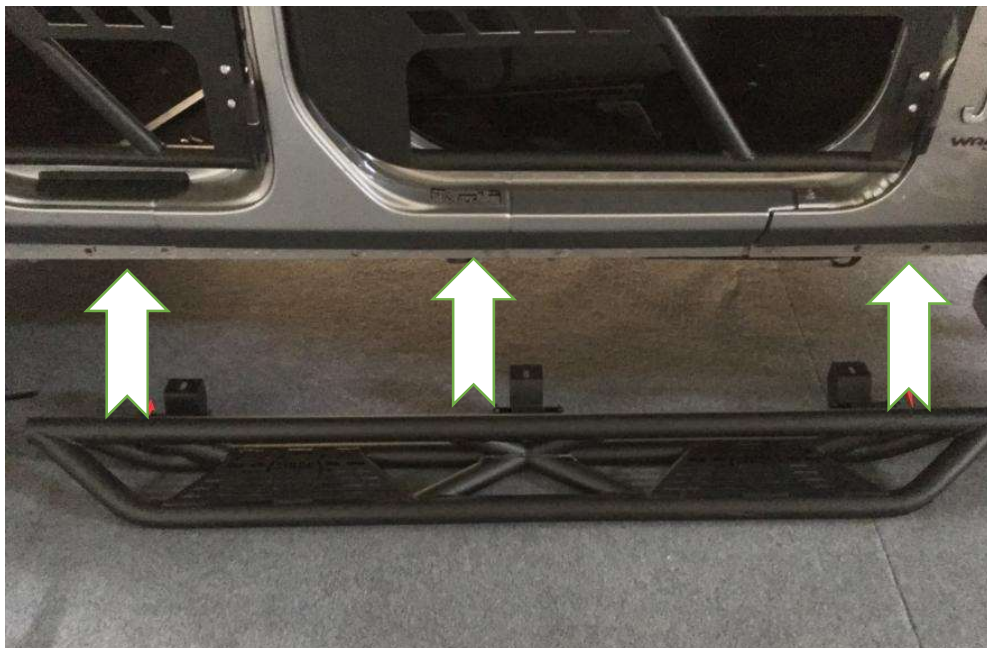



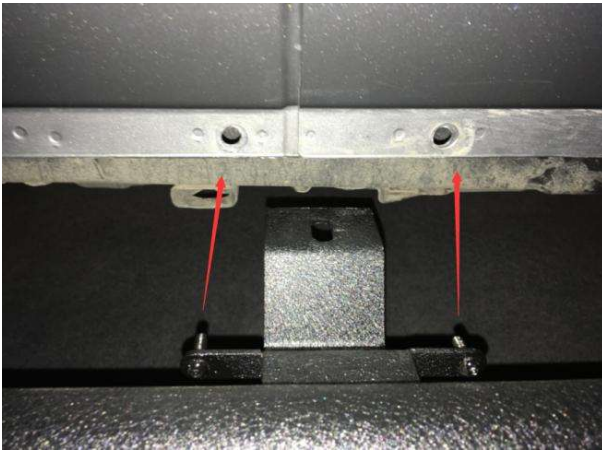

**Step 3:**Then tighten the bolts on the three parts. You may have to lie under the chassis to screw the bolts.

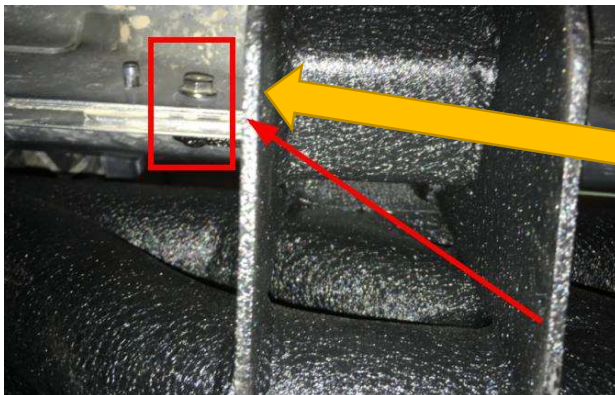

**Note:**

***Bolts are your Original Bolts. But if you don't have it. Then use the attached bolts.***

**Tighten all the bolts.**



**Step 6: Repeat the operation for driver side.**

**Step 7: Once you have everything in place you are finished with the installation. Congratulations on the purchase and installation of a quality Hooke Road product!**



## **Attention:**

**1.The product parts in this instruction may differ slightly from the actual product contents but generally does not affect the installation of the product.**

**2.Please feel free to contact us if you have any kind of question about your purchase. We will reply you in timely manner.**

 [www.ubox-offroad.com](http://www.ubox-offroad.com)    @HookeRoad4x4

Post Your Jeep w/Hashtag #hookeroad to Win Discount Every Week