

HARD TOP INSULATION KIT

(UNIVERSAL INSULATION KIT)

INSTALLATION INSTRUCTIONS


CONTENTS

TOOLS REQUIRED

Insulation Panels

Velcro Strips



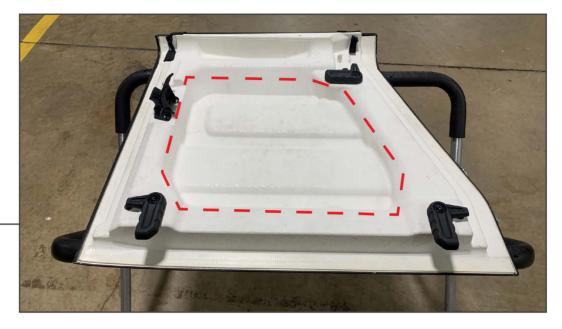

STEP 1

Prepare the hard top panel using the provided adhesion promoter. Thoroughly clean the panel to ensure no dirt/debris are remaining on the panel.



STEP 2

Press the provided Velcro strips onto the hard top insulation panel.

Note: Each panel can approximately use 12-13 Velcro strips.





STEP 3

Remove the red tape backing from the Velcro strips.



STEP 4

Adhere the insulation panel to the hard top panel. Press firmly until secure.

Repeat steps 1-4 to the remaining hard top panels. Installation is now complete.