



# REAR WINDOW MOLLE PANELS

(2007-2018 WRANGLER JK - 4 DOOR)

---

## INSTALLATION INSTRUCTIONS

### CONTENTS

---

- (1) LH Molle Panel
- (1) RH Molle Panel
- (1) LH 'L' Bracket
- (1) RH 'L' Bracket
- (4) Rubber Strips
- (2) M8x1.25 x 25mm Allen Bolts
- (2) M6x1.00 x 15mm Allen Bolts
- (2) M6 Flange Nuts

### TOOLS REQUIRED

---

- T-40 Torx Socket
- 4mm, 5mm Allen Sockets/Keys
- Ratchet


**STEP 1**



Remove (3) T-40 Torx bolts from the side of the hard top.


Note: The hard top bolts will be reused.

**STEP 2**

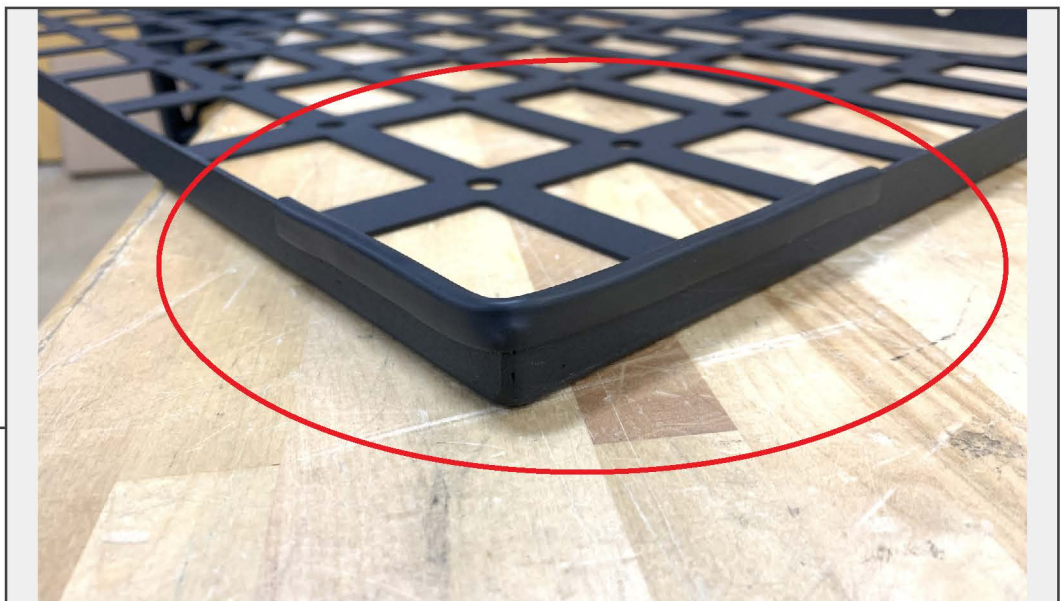

Install (2) rubber strips along the upper corners of the molle panel.

**STEP 3**

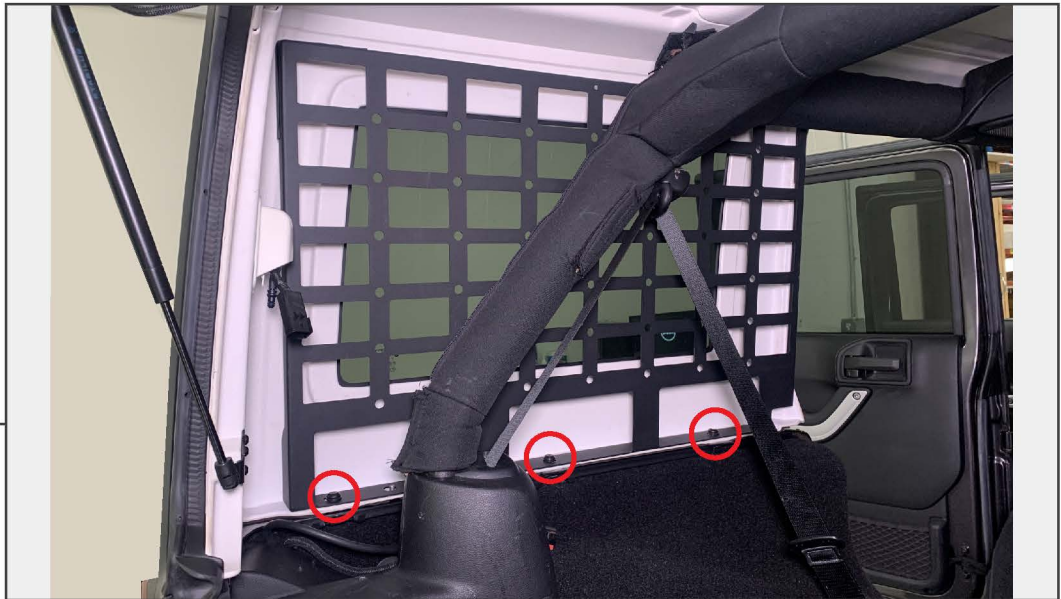

Place the molle panel to the vehicle hard top, and loosely secure the panel to the hard top using the original (3) T-40 Torx bolts.

**STEP 4**



Un-zip the upper roll bar cover to reveal the metal roll bar. Locate the (1) threaded insert in the roll bar.





---

**STEP 5**

Align the (1) 'L' bracket to the roll bar and loosely secure using (1) M8 x 25mm Allen bolt. Loosely secure the molle panel to the 'L' bracket using (1) M6 x 15mm Allen bolt and (1) M6 flange nut. Adjust the bracket and molle panel as necessary for best fit. Tighten all hardware.



---

**STEP 6**

Repeat steps 1-5 to the opposite side of the vehicle.

Installation is now complete.