



REAR WINDOW MOUNTED 30" LED LIGHT BAR

(2018+ WRANGLER JL)

INSTALLATION INSTRUCTIONS

CONTENTS

- (1) 30" Light Bar
- (1) LH Mounting Bracket
- (1) RH Mounting Bracket
- (1) Wiring Harness
- (2) M6x1.00 x 15mm Allen Bolts
- (2) M6x1.00 x 12mm Allen Bolts
- (4) M6 Lock Washers
- (4) M6 Flat Washers
- (3) Allen Keys

TOOLS REQUIRED

- Panel Removal Tool
- 10mm Socket
- Ratchet
- Allen Keys (Provided)

SKU: J168736
Edited: 5/17/2022

STEP 1



Using a panel removal tool, pry the bottom of the rear glass hinge cover to release the retaining clips.

STEP 2



Hinge the plastic cover upwards, and push the cover inwards to release the retaining hooks. Set the cover aside for reinstallation later.



STEP 3

Remove (2) 10mm bolts from the hard top hinge.


Note: Only remove the hinge bolts from one side of the vehicle at a time.



STEP 4

Place the mounting bracket under the tailgate glass hinge. Ensure to install the appropriate bracket per side. Repeat steps 1-4 for the remaining mounting bracket.

Note: Do not install the hinge cover until final adjustments are made.

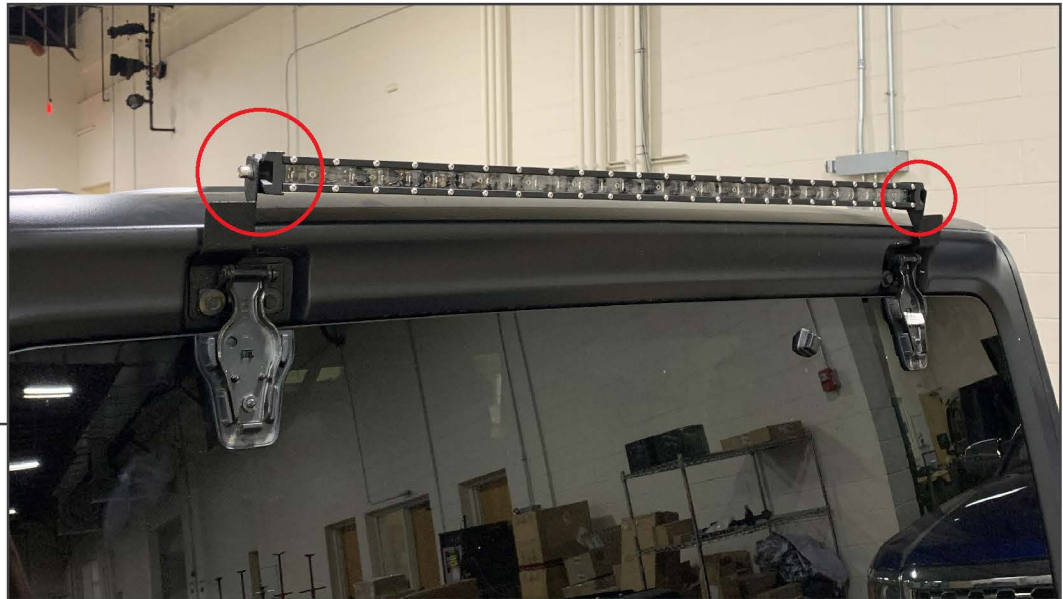

STEP 5

Install the LED light bar to the mounting bracket using (2) M6x1.00 x 15mm Allen bolts, (2) M6 lock washers, and (2) M6 flat washers. After all adjustments are made to light bar and mounting brackets, re-install the glass hinge covers to the vehicle.



STEP 6 (WIRING)

LED Wiring: Connect the LED light bar to the provided wiring harness. Route the wiring harness down the hardtop through the rear window channel, then across the passenger side of the vehicle towards the battery. Route the switch through a suitable firewall grommet. Connect the terminals to the battery using the following diagram

| <u>Vehicle Battery</u> | - | <u>LED Wiring Harness</u> |
|------------------------|---|---------------------------|
| Positive Terminal (+) | - | Red (+) |
| Negative Terminal (-) | - | Black (-) |