



**Prep Area:**  
Remove headlight bezels and clean surface.



Remove both lower bolts holding the factory guard into place.


1 | 2  
3 | 4



Now remove the guard from the bumper.



Place aftermarket grille into place by lining up the two existing bolt holes.

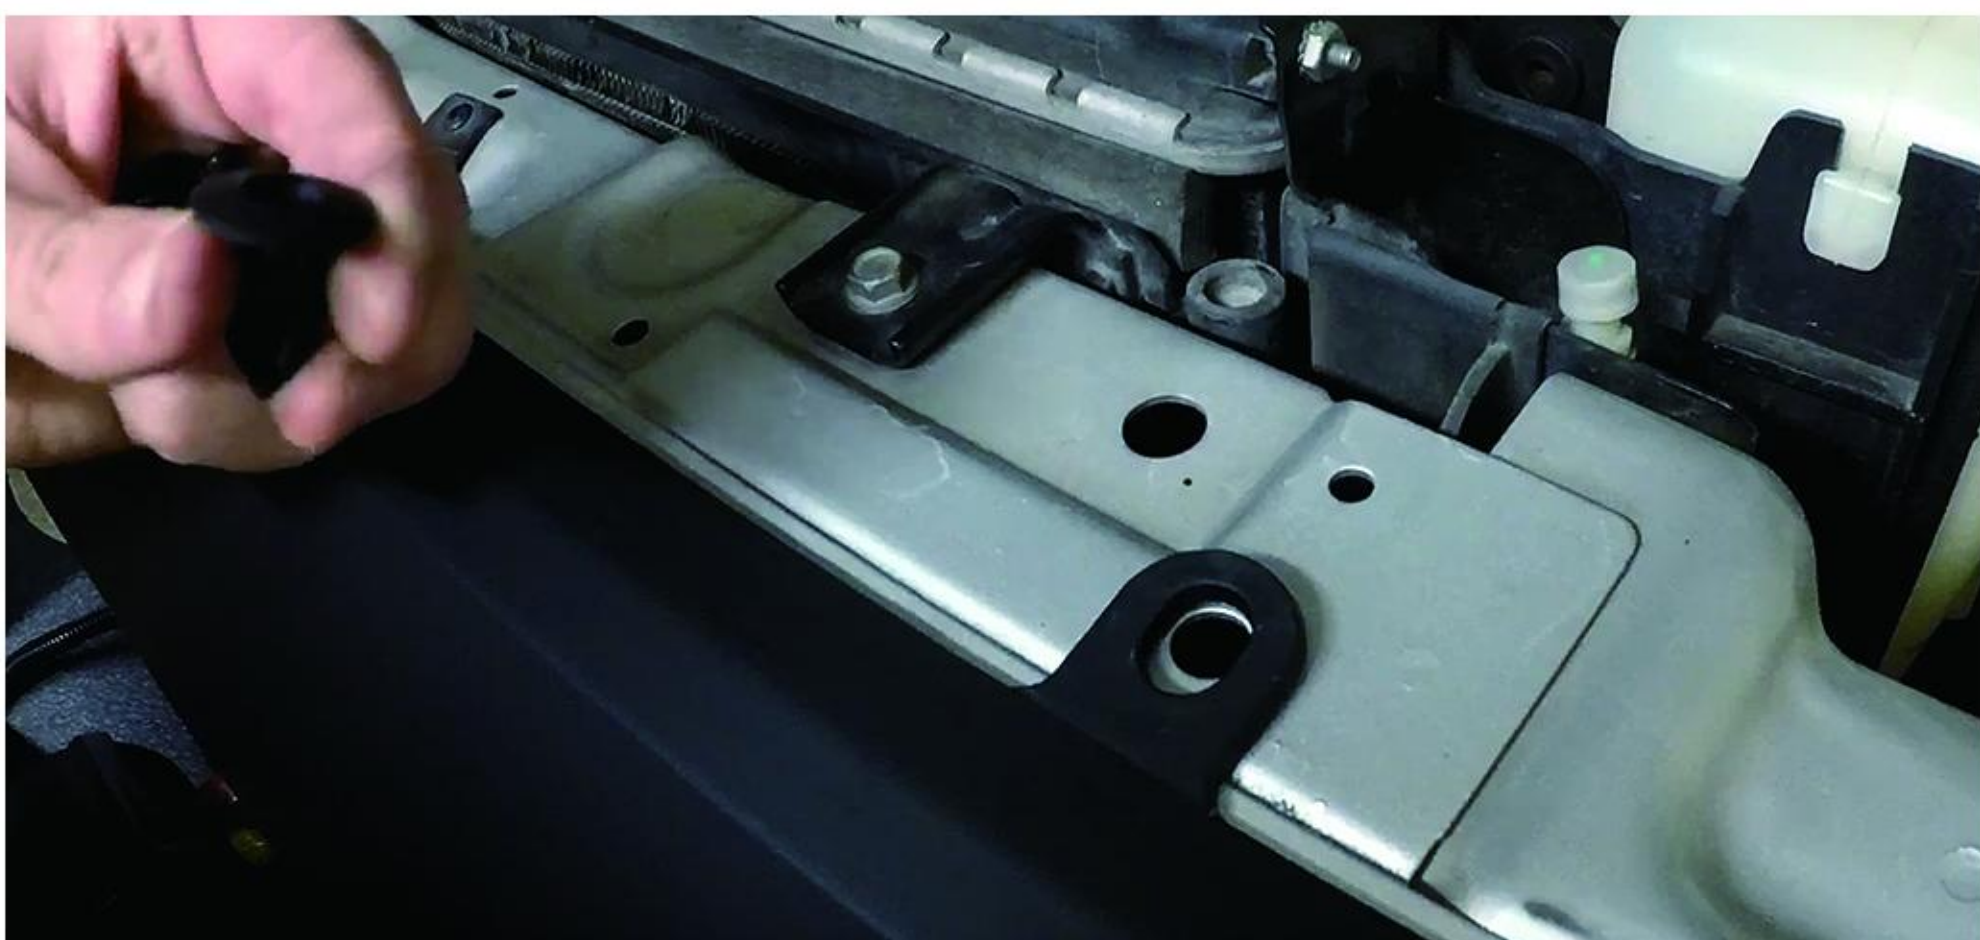

Insert plastic push screw rivets into the existing holes.



Now use the provided hardware to hold the bottom of grille into place.

5 | 6  
7 | 8



Put the factory guard back into place and bolt back together.



And a final wipedown to complete the install.