



---

# HOOD LATCHES KIT

(2007-2018 WRANGLER JK)  
(2018-2022+ WRANGLER JL)  
(2020-2022+ GLADIATOR JT)

---

## INSTALLATION INSTRUCTIONS

### CONTENTS

---

(2) Hood Brackets  
(2) Fender Brackets  
(4) M6x1.0 Allen Bolts  
(4) M6 Lock Nuts  
(2) M8x1.25 Allen Bolts  
(2) M8 Lock Nuts  
(3) Allen Wrenches

### TOOLS REQUIRED

---

10mm, 13mm Socket  
Socket Wrench

SKU # J171345




**STEP 1**

Using a 10mm socket, remove the (2) nuts securing the hood catch on the vehicle.



**STEP 2**

Install the new hood catch using the provided M6 Allen bolts and lock nuts. Ensure the rubber isolator is underneath the hood catch when installed.

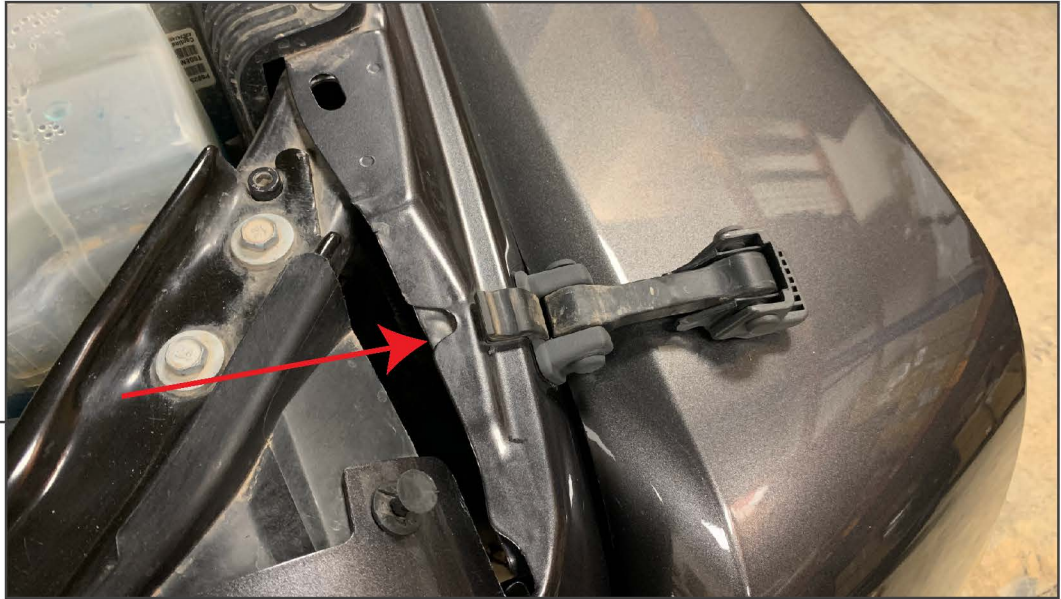

**STEP 3**

Using a 13mm socket remove the fender mounted hood latch.



**STEP 4**

Using the supplied Allen wrench, remove the Allen bolts to access the mounting bolt.

**STEP 5**



Attach the fender portion of the hood latch using the M8 Allen bolt and lock nut. Reinstall the Allen bolts removed in step 4.

**STEP 6**



Latch the hood catch as shown. Installation is now complete.