



ROOF MOUNTED SPOILER WITH LED BRAKE & REVERSE LIGHTING

(2018+ WRANGLER JL)

INSTALLATION INSTRUCTIONS

CONTENTS

- (1) LH Spoiler
- (1) RH Spoiler
- (2) 'T' Harnesses
- (2) Spoiler Brackets
- (2) Hinge Brackets
- (8) Wire Clips with Adhesive
- (4) Adhesion Promoter Pads
- (4) M6 Allen Bolts
- (4) M5 Phillips Bolts
- (4) M5 Lock Washers
- (4) M5 Flat Washers

TOOLS REQUIRED

- 10mm Socket
- Ratchet
- Plastic Pry Tool
- 4mm Allen Key


SKU # J171968
Edited: 07/26/2022

STEP 1



Remove the rear glass hinge cover using a pry tool, and hinge the cover open. Then remove the cover.

STEP 2

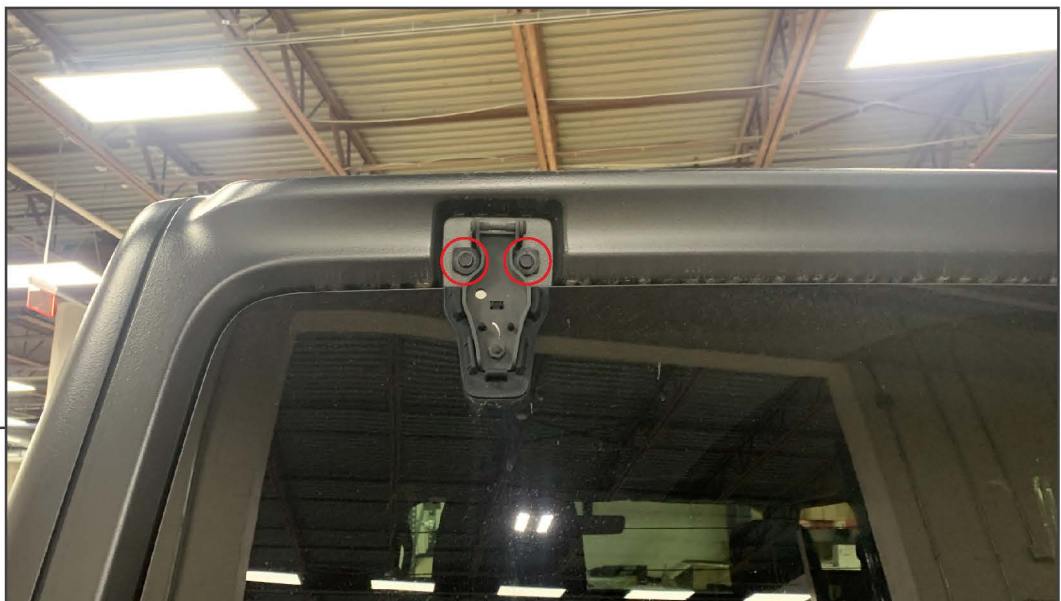

Remove (2) 10mm bolts from the hinge glass.

Note: Only work on one glass hinge at a time, do NOT remove both hinges at the same time.

**STEP 3**

Using a plastic pry tool to gently pull the glass outwards. Insert (1) hinge bracket in between the glass hinge and the vehicle hard top. Secure into place using the (2) original 10mm bolts.

**STEP 4**

Clean the hard top of the vehicle using (1) adhesion promoter pad, allow to fully dry.

STEP 5

Secure (1) spoiler bracket to the spoiler panel using (2) M5 Phillips bolts, (2) M5 lock washers, and (2) M5 flat washers. Tighten the hardware until the bracket is secure. Ensure the wiring harness is routed into the notch in the bracket.

STEP 6

Peel the red tape backing from the spoiler panel. Align the spoiler panel and bracket to the previously installed hinge bracket, and secure using (2) M6 Allen bolts.

STEP 7

Open the rear window glass, and clean the hardtop area along the gasket using (1) adhesion promoter pad and allow to dry. Adhere (4) wire retainers to the vehicle hard top along the gasket.

STEP 8

Remove (1) plastic trim cover from the interior of the vehicle. Then, remove (1) 10mm bolt to remove the vehicle tail light.

**STEP 9**

With the tail light removed, locate the wiring harness/grommet routed into the vehicle interior. Carefully cut a slot in the grommet, and route the spoiler panel wiring through towards the vehicle tail light.

**STEP 10**

Unplug the vehicle tail light, and install the (1) 'T' Harness. Then, plug in the spoiler panel wiring harness into the 'T' Harness.



STEP 11

Repeat steps 1-10 to the opposite side of the vehicle.

Installation is now complete.