



ROUND ADVENTURE MIRRORS

(1966-2018 WRANGLER CJ5, CJ7, YJ, TJ, & JK)
(2020-2022+ GLADIATOR JT)

INSTALLATION INSTRUCTIONS

CONTENTS

- (2) Round Adventure Mirrors
- (2) Mounting Arms
- (2) M8 Bolts
- (4) M8 Flat Washers
- (4) M10 Flange Nuts
- (2) M10 Lock Washers

TOOLS REQUIRED

- T-55 Torx Socket
- 13mm, 15mm Wrenches
- Ratchet
- 4mm Allen Key

SKU # J172288 , J172289



STEP 1

Remove the door from the vehicle following OEM specifications.


The mirror will be installed in the upper door hinge.



STEP 2

Place (1) M10 flange nut onto the mounting arm, ensuring the flange is facing the threads. Place the mounting arm into the door hinge. At the bottom of the hinge, secure the mounting arm using (1) M10 lock washer and (1) M10 flange nut.

STEP 3

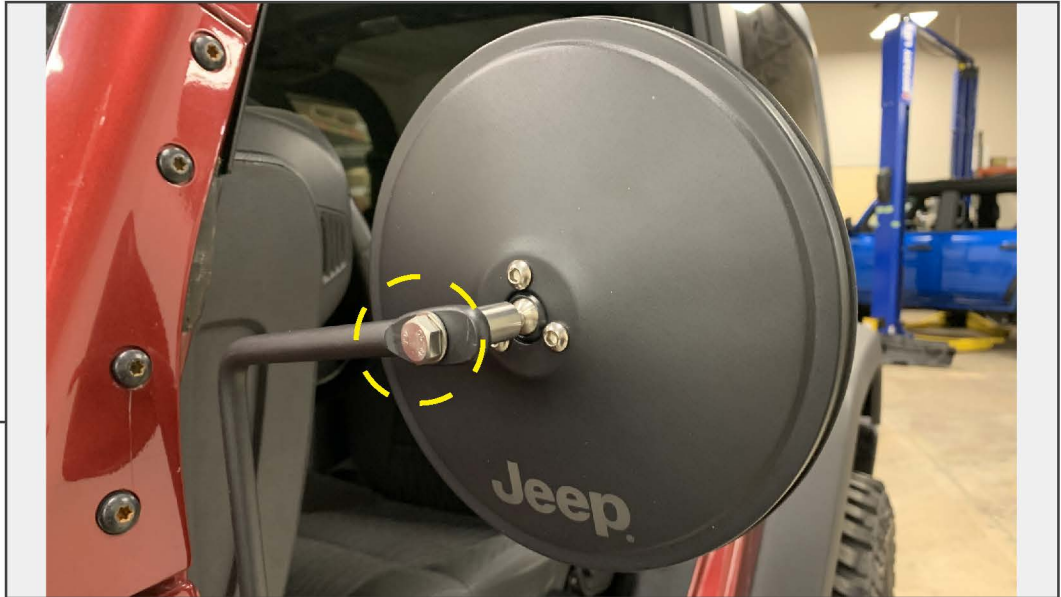

Secure the mirror to the mounting arm using (1) M8 bolt, and (1) M8 flat washer, tighten until secure.

STEP 4



Loosen the (3) Allen bolts on the backside of the mirror. Adjust the mirror to the suitable position, and tighten the (3) Allen bolts to secure into place.

Repeat steps 1-4 to the opposite side of the vehicle. Installation is now complete.