



ROCK SLIDERS WITH JEEP LOGO

(2007-2018 WRANGLER JK)

INSTALLATION INSTRUCTIONS


CONTENTS

(2) Rock Sliders

TOOLS REQUIRED


18mm Socket
Impact Gun or 1/2" Ratchet
Spray Lubricant

SKU # J174550

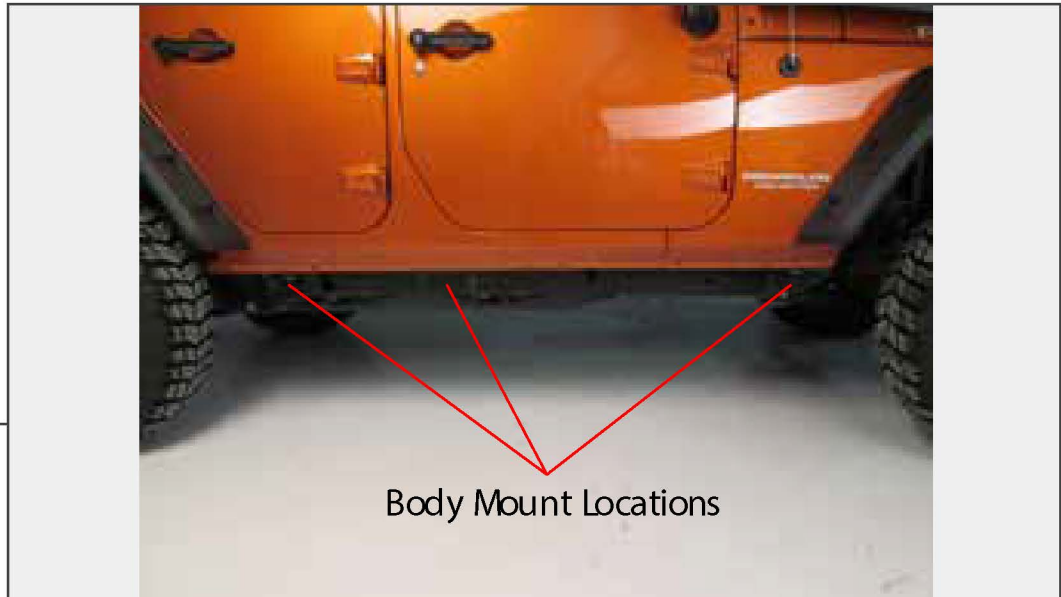

STEP 1

Begin by locating the body mounts that run along the frame of the vehicle. There are (3) for 4-doors, and (2) for 2 doors.

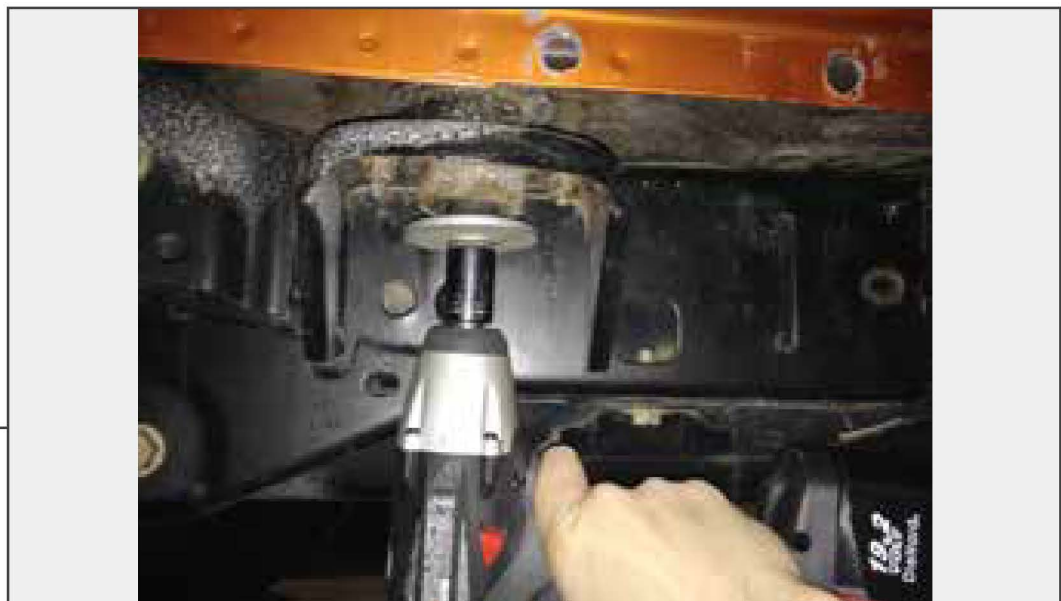

STEP 2

Using an impact gun or ratchet, remove the 18mm body mount bolts from the body.

It may help to treat the bolts with spray lubricant prior removing the body mount bolts.



STEP 3

With the body mount bolts removed, line the rail up with the holes and hand tighten each bolt. Once you have all the bolts in place, torque each bolt to factory torque specs (80 ft. lbs.)



STEP 4

Installation is now complete.