

LICENSE PLATE RELOCATION KIT

(2007-2018 WRANGLER JK)

INSTALLATION INSTRUCTIONS

CONTENTS

- (1) License Plate Relocation Assembly
- (1) Wiring Harness w/ Loom
- (4) Scotchlok Connectors
- (6) Cable Ties
- (4) M6 Allen Bolts
- (4) M6 Flat Washers
- (4) M6 Flange Nuts

TOOLS REQUIRED

10mm, 13mm, 19mm Sockets Ratchet Panel Removal Tool 5mm Allen Key Exterior Detailer Microfiber Cloth



Gently pry along the (2) metal clips to remove the plastic trim cover from the tailgate. Un-plug the third brake light connector from the vehicle.




STEP 2

Remove the spare tire from the vehicle. Then, dislodge the wiring grommet containing the third brake light wiring from the tailgate. Remove (8) 13mm bolts from the vehicle tire carrier, and remove the tire carrier from the vehicle.



Clean the vehicle tailgate using exterior detailer and a microfiber cloth.

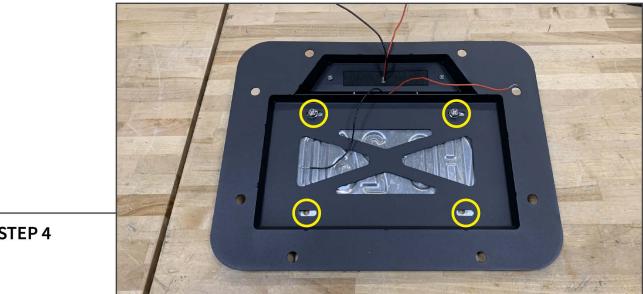

STEP 4

Remove the vehicle license plate from the original holder. Them, secure the license plate to the relocation kit using (4) M6 Allen bolts, (4) M6 flat washers, and (4) M6 flange nuts.

Using the included wiring, attach the wiring harnesses to each relocation kit light.



Mount the relocation kit to the vehicle tailgate using the (8) original 13mm bolts. Route the wiring harnesses into the vehicle.



STEP 6

Route the license plate light wiring harness towards the interior of the vehicle. Locate the wiring harness along the upper edge of the RH side of the vehicle and splice into the vehicle following diagram.

Vehicle Wiring	-	Relocation Kit Brake Light Wiring
White/Purple	-	Red (License Plate Lamp +)
Black	-	Black (License Plate Lamp -)



Route the third brake light wiring harness into the vehicle tailgate. Splice the third brake light wiring to the vehicle third brake light harness using the following diagram.

Vehicle Wiring	-	Relocation Kit Brake Light Wiring
White/Tan (Tailgate)	=	Red (Third Brake Light +)
Black (Tailgate)	-	Black (Third Brake Light -)



STEP 8

Re-assemble the vehicle interior panels and ensure all hardware is secure.

Installation is now complete.