

TUBULAR FRONT BUMPER

(1987-1995 WRANGLER YJ) (1997-2006 WRANGLER TJ)


INSTALLATION INSTRUCTIONS

CONTENTS

(1) Tubular Front Bumper(4) Washers

TOOLS REQUIRED

T-55 Torx Socket Ratchet Socket Extension

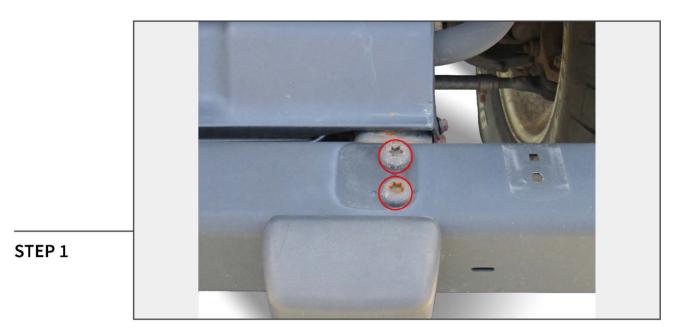

Remove the upper (4) T-55 Torx bolts from the top of the factory bumper, these bolts will be reused.

Remove the vehicle tow hooks, if equipped. The tow hooks will not be reused.



STEP 2

Remove the (2) lower T-55 Torx bolt from the bottom of the front bumper, these bolts will be reused.





Place the front bumper over the front of the frame, with light mounts on the top. Reinstall the (2) front upper bolt through the front bumper.



STEP 4

Reinstall the (2) lower T-55 Torx bolt into the bottom of the front bumper.





Installation is now complete.