



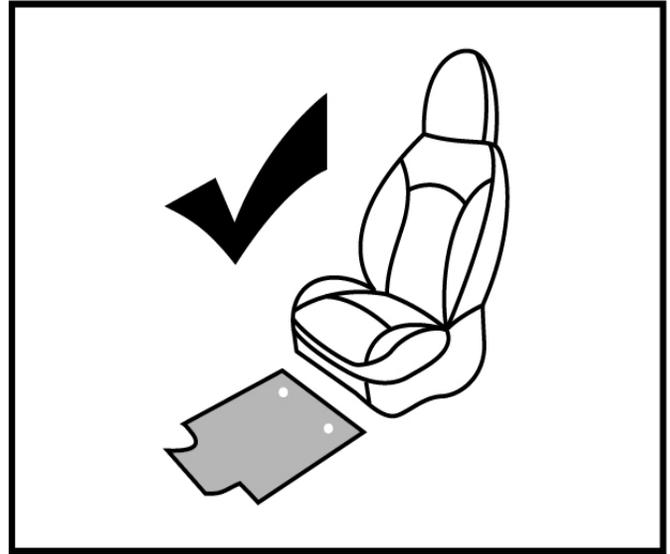

## Installation Guide

Step 1. Remove any current floor liners from your vehicle.

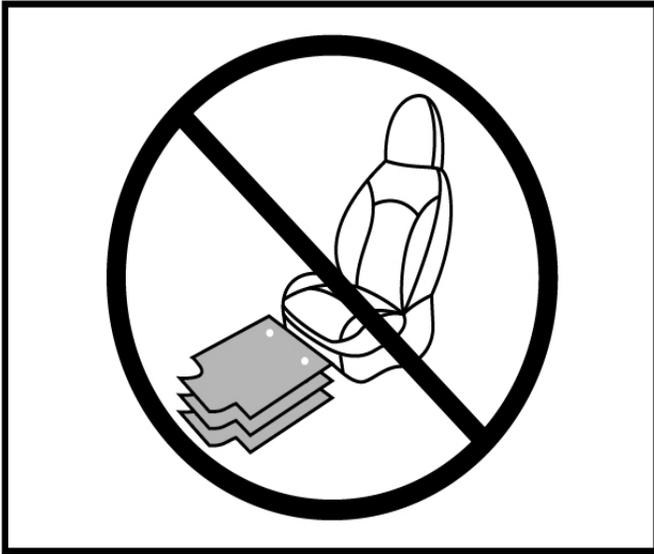


Step 2. Vacuum the floor and identify the correct floor location for each 3D Floor mats which are designed to fit the contour of your vehicle floor.





## Installation Guide

Step 3. Align and securely anchor the mat grommets to the floor retaining hooks or clip (if any). Check that the floor mats are securely fixed in the correct place.

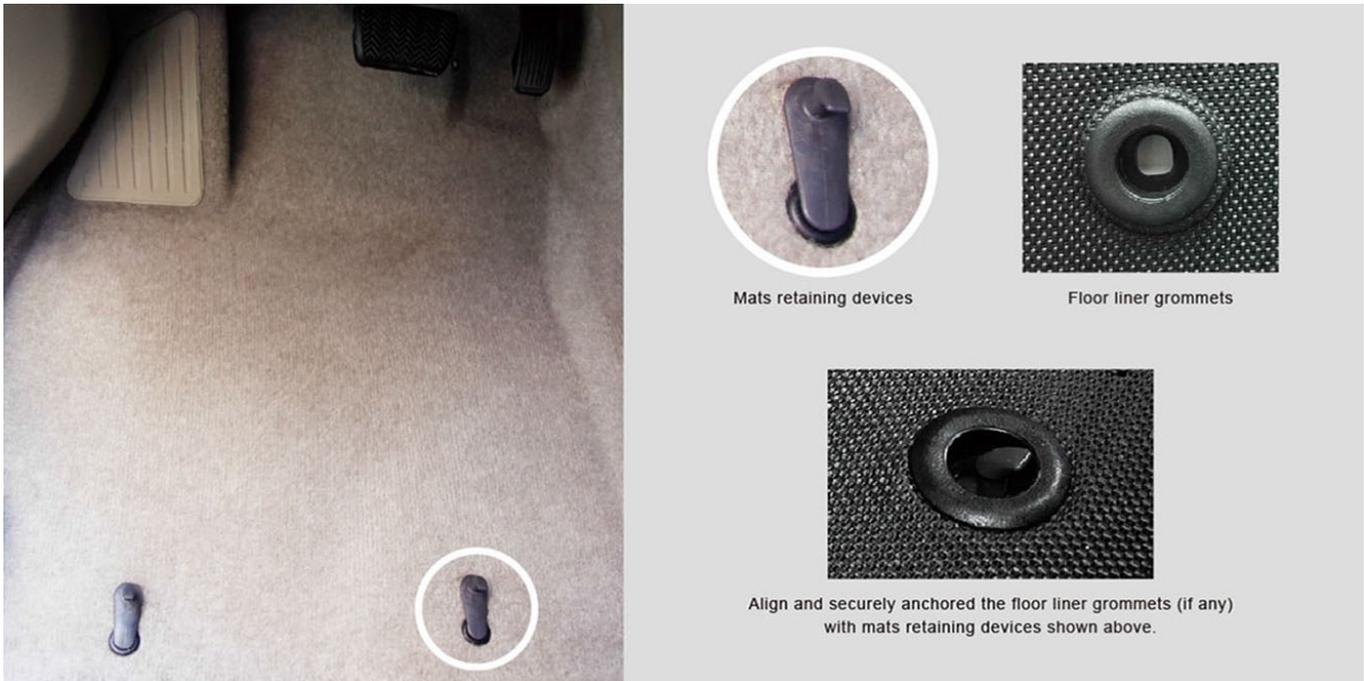

Step 4. With the engine stopped and the shift lever in P, fully depress each pedal to the floor to make sure it does not interfere with the installed floor mat.

**\*\*FAILURE TO CHECK EACH PEDAL INTERFERENCE MAY RESULT IN ACCIDENTS OR SERIOUS INJURIES IN DRIVING.\*\***



Learn more about floor mats we have.