



ADJUSTABLE REAR UPPER CONTROL ARMS

(1997-2006 WRANGLER TJ)

INSTALLATION INSTRUCTIONS

CONTENTS


(2) Rear Upper Control Arms

TOOLS REQUIRED

15mm Socket/Wrench
Ratchet
Adjustable Wrench
Pry Bar
Spray Lubricant

SKU # J181800

STEP 1

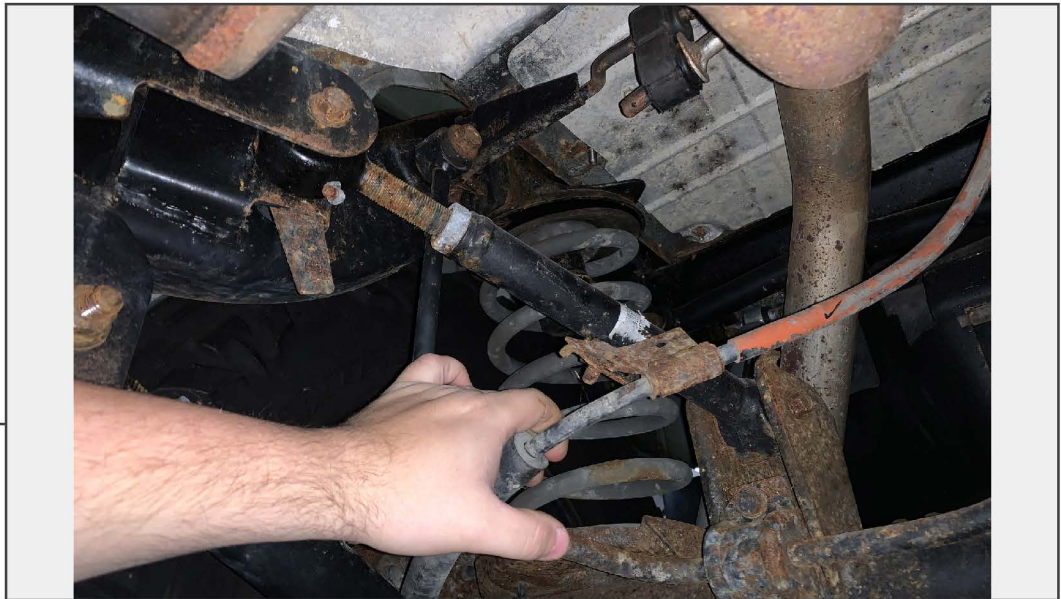

Place the vehicle in park on a flat surface, and engage the parking brake. Locate the upper control arm, and remove the parking brake retaining bracket from the control arm by removing the (1) 15mm nut.

Remove the (2) 15mm bolts and nuts from the control arm mounts.

STEP 2



Remove the control arm from the vehicle.

Note: It is suggested to gently massage the control arm mounting ears outwards to allow for additional clearance for the new control arm.



STEP 3

Adjust the new control arm to a similar length as the original control arm.



STEP 4

Fit the control arm into the vehicle, ensuring the jam nut is facing the vehicle body. Secure using the original 15mm bolts and nuts. See torque specifications below.

Frame Control Arm Bolt: 55 ft./lbs.

Axle Control Arm Bolt: 55 ft./lbs.

STEP 5



Using an adjustable wrench, tighten the jam nut to secure the control arm adjustment.

STEP 6



Secure the parking brake cable to the control arm using a cable tie. Repeat steps 1-5 for the remaining control arm. Installation is now complete.