



MESH TOP

(2007-2018 WRANGLER JK - 4 DOOR)

INSTALLATION INSTRUCTIONS

CONTENTS

- (1) Mesh Top
- (3) 3" Elastic Bands
- (10) 8" Elastic Bands
- (4) 10" Elastic Bands

TOOLS REQUIRED

N/A

SKU # J181978



STEP 1


Remove the OEM vehicle top following OEM specified remove steps.

Identify the front of the mesh top by locating the (3) center grommets.



STEP 2

Drape the front of the mesh top over the vehicle center roll bar. Secure the front of the mesh top to the windshield channel using (3) 3" elastic bands.

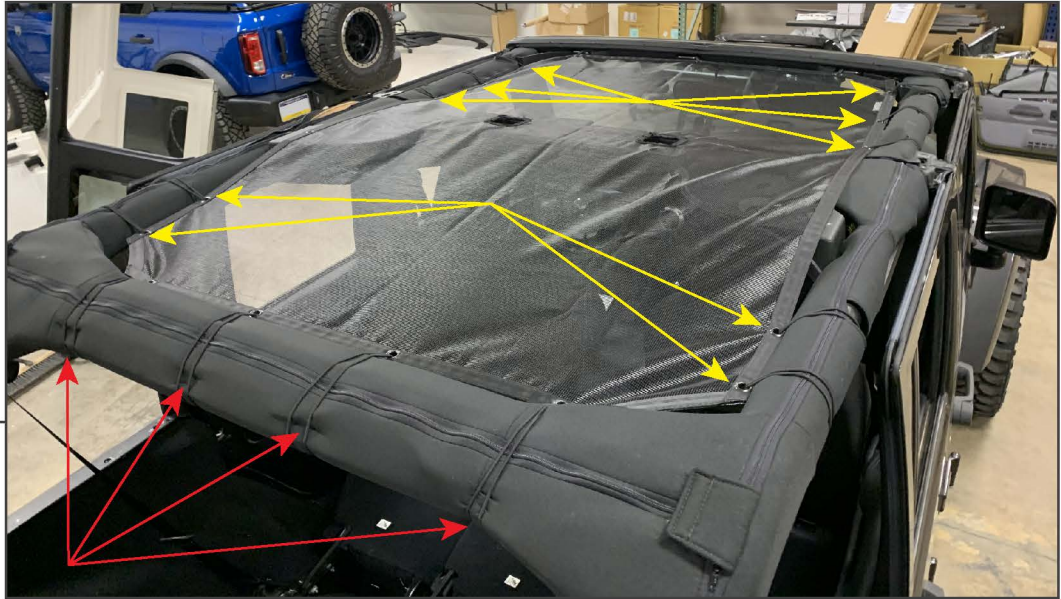

STEP 3

Secure the sides of the mesh top to the roll bar using (10) 8" elastic bands and (4) 10" elastic bands.

Installation is now complete.