



ADJUSTABLE FRONT UPPER CONTROL ARMS

(1997-2006 WRANGLER TJ)

INSTALLATION INSTRUCTIONS


CONTENTS

(2) Front Upper Control Arms

TOOLS REQUIRED

15mm Socket/Wrench
Ratchet
Adjustable Wrench
Pry Bar
Spray Lubricant

SKU # J181980

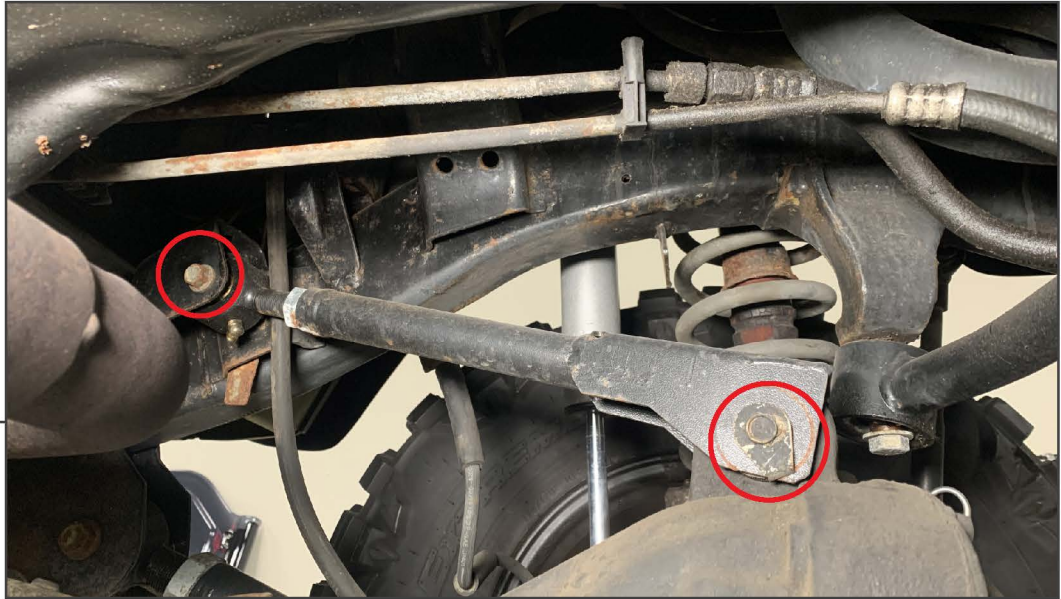

STEP 1


Place the vehicle in park on a flat surface, and engage the parking brake. Locate the upper control arm. Remove the (2) 15mm bolts from the control arm mounts.

Note: Hardware will be reused.



STEP 2

Adjust the new control arm to a similar length as the original control arm.

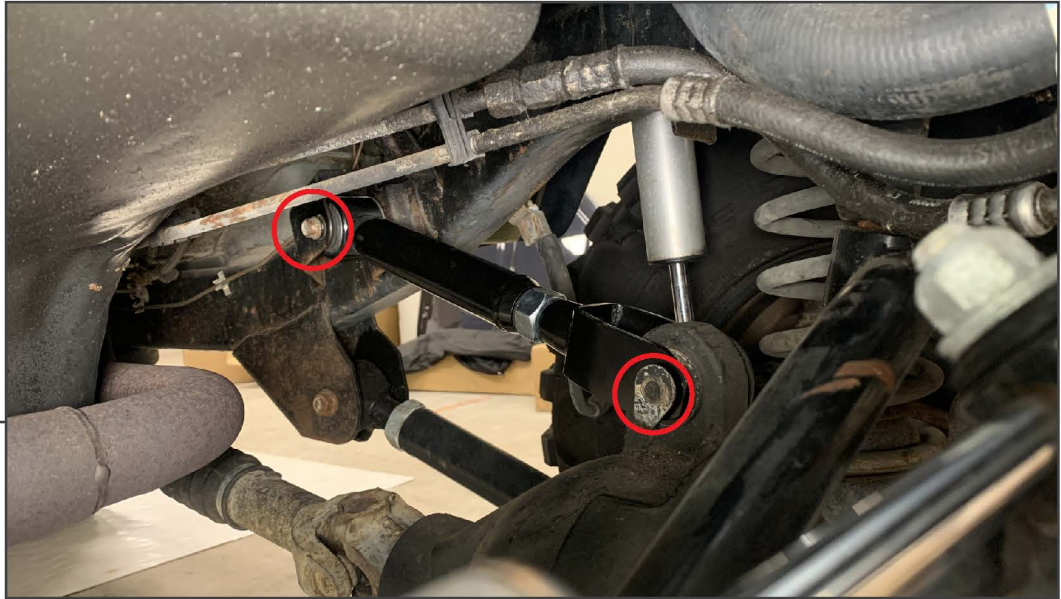

STEP 3

Fit the control arm into the vehicle. Secure using the original 15mm bolts and nuts. See torque specifications below.

Frame Control Arm Bolt: 55 ft./lbs.

Axle Control Arm Bolt: 55 ft./lbs.



STEP 4

Using an adjustable wrench, tighten the jam nut to secure the control arm adjustment.



STEP 5

Repeat steps 1-4 for the remaining control arm.

Installation is now complete.