



2-INCH HITCH STEP WITH LED LIGHTING

(WRANGLER WITH 2-INCH RECEIVER)

(BRONCO WITH 2-INCH RECEIVER)

INSTALLATION INSTRUCTIONS


CONTENTS

- (1) Hitch Step
- (1) Wiring Harness
- (3) Scotchlok Connectors
- (1) Allen Key

TOOLS REQUIRED

- 5/8" Hitch Pin
- Pliers

STEP 1

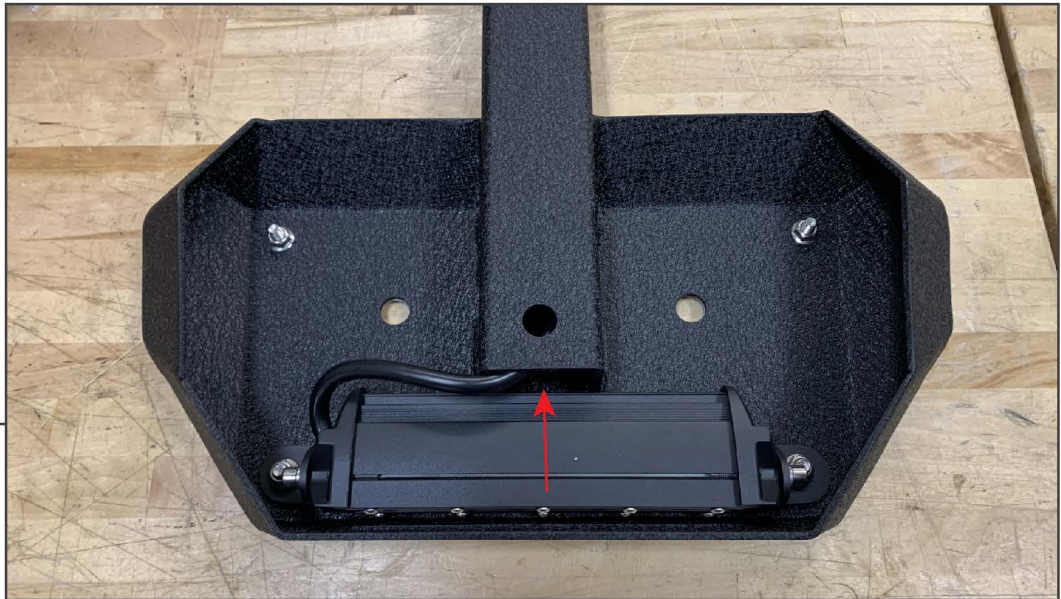


Turn the hitch step upside down, and route the wiring harness through the hitch square tube. Adjust the light bar as necessary for additional clearance.

STEP 2



Route the wiring harness through the vehicle hitch receiver, then fit the hitch step into the vehicle hitch receiver to the desired depth, and insert a 5/8" hitch pin to secure the step into place.

Note: Hitch pin sold separately.

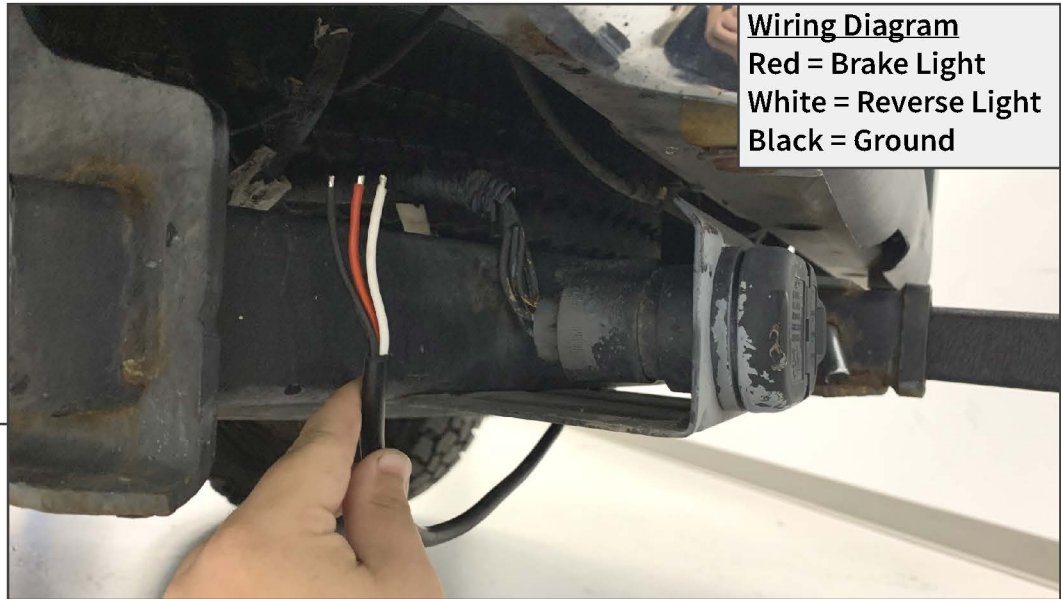

STEP 3

Route the wiring harness towards the vehicle trailer wiring. Splice the wiring harness into the trailer wiring using the (3) scotchlok connectors.

Note: If vehicle does not have trailer wiring, additional wiring materials will be required.



STEP 4

Ensure the wiring harness is neatly routed along the vehicle.

Installation is now complete.