

LED FOG LIGHTS WITH HALO

(2018-2024+ WRANGLER JL)

(2020-2024+ GLADIATOR JT)


INSTALLATION INSTRUCTIONS

CONTENTS

- (1) Pair of Fog Lights
- (2) Adapter Harnesses
- (4) Wire Leads
- (2) 3 Bolt Mounting Adapters
- (2) 4 Bolt Mounting Adapters
- (1) Allen Key
- (4) Scotchlok Connectors


TOOLS REQUIRED

- 7mm Socket
- 8mm Socket
- Ratchet
- Panel Removal Tool
- 4mm Allen Key
- Multi-Meter/Test Light

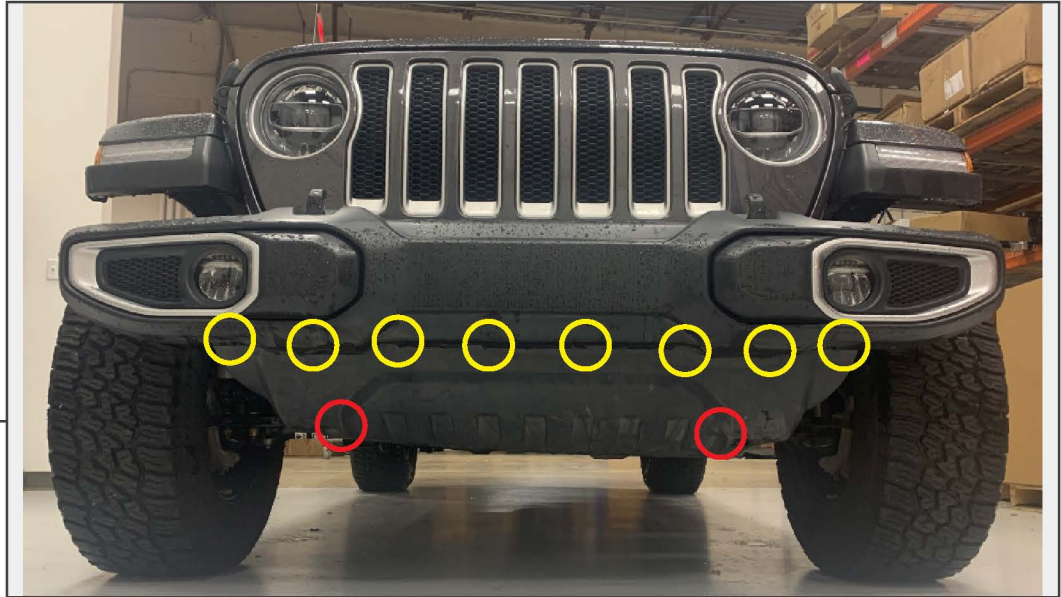

STEP 1


Remove (2) 8mm bolts from the plastic lower shield, then remove (8) plastic push clips. Remove the plastic lower shield from the vehicle.

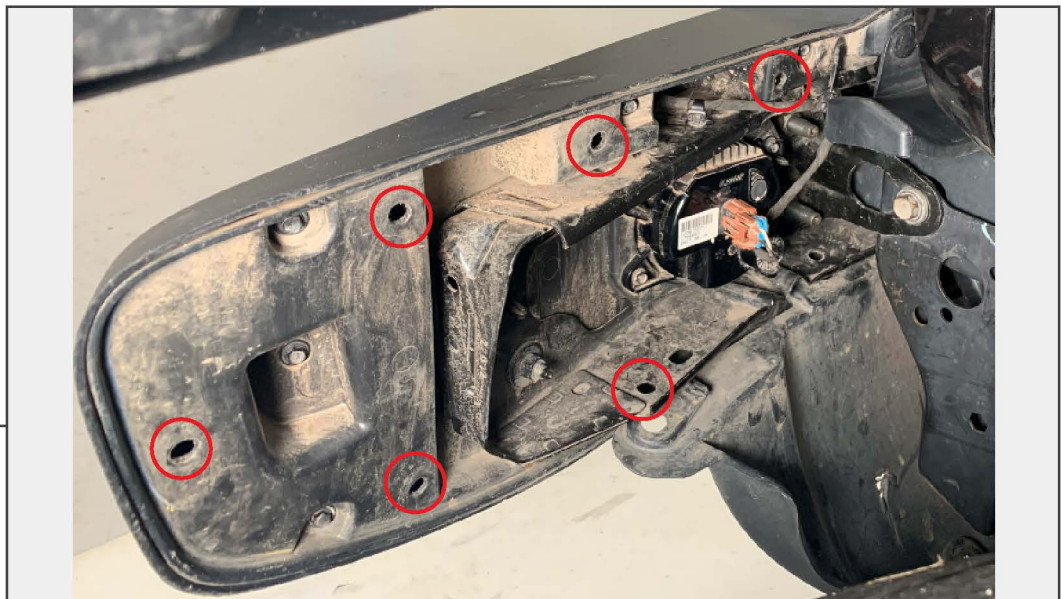

STEP 2

Remove (6) plastic push clips from the fog light cover. Remove the cover. Unplug the connector from the fog light by pressing in the tab, then pulling the connector away from the light.


Repeat this procedure to the opposite side of the vehicle.

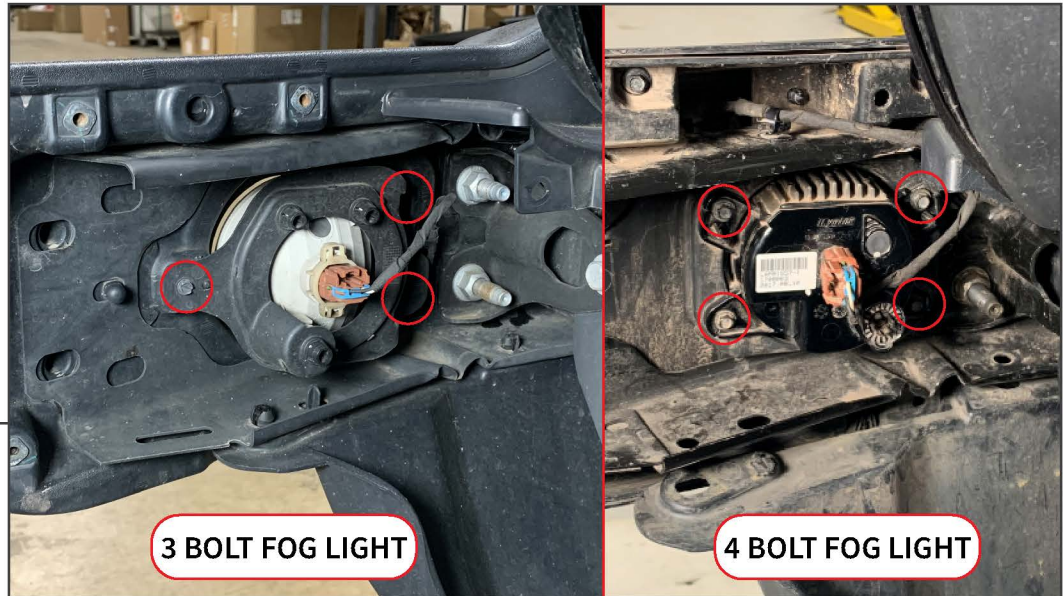

STEP 3

Depending on vehicle trim level, remove the (3) OR (4) 7mm fog light retaining bolts and remove the fog light from the vehicle. Install the new LED fog light with the appropriate mounting adapter to the vehicle bumper reusing the original hardware, and plug in the vehicle wiring harness.

Repeat this procedure to the opposite side of the vehicle.

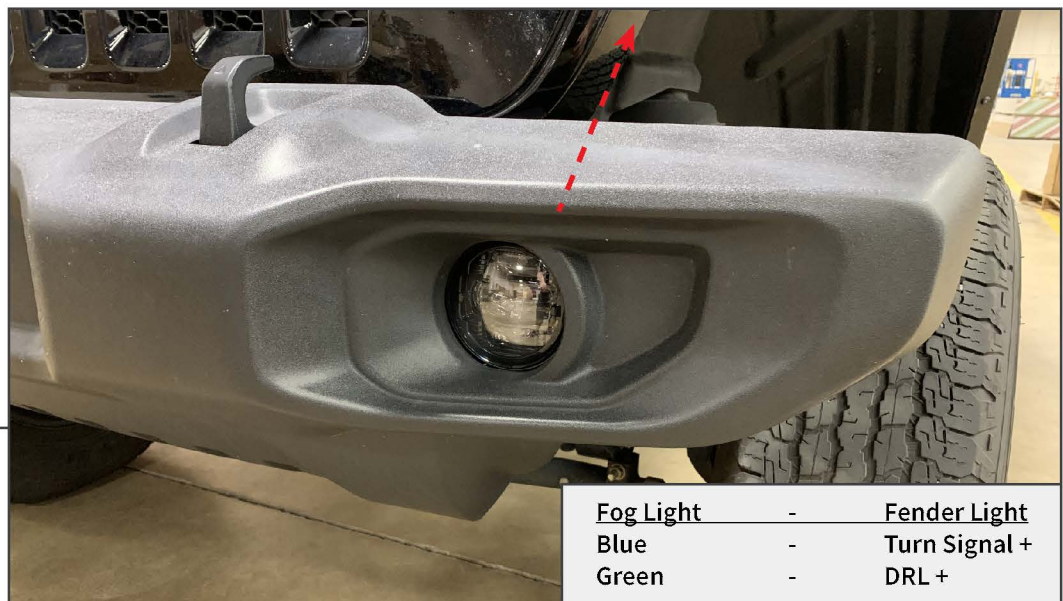

STEP 4

Re-assemble the vehicle bumper following steps 1-2 in reverse order. Adjust the fog lights using the attached Allen screw. Route the fog light wire leads to the vehicle fender lights. Splice each wire lead into the designated function above. Route all wiring away from any hot/moving components. Test the vehicle wiring for functionality before splicing.

Installation is now complete.