



Protecting Your Adventure Lifestyle

Warrior Products, Inc.  
11100 SW Industrial Way  
Tualatin, OR 97062

Phone (888) 220-6861  
Fax (503) 692-0364  
customerservice@warriorproducts.com

---

---

## **TJ WRANGLER HALF DOORS**


### **INSTALLATION INSTRUCTIONS**

### **S916DOOR / 916DOOR**

**Read all instructions before proceeding.**

**NOTE: Fits all applications where hard door striker pins and rotary paddle latch are used.**

1. Assemble the door paddle handles to both doors with the bolts and nuts provided.
2. On the inside of each door, install the foam molding per Diagram "A".
3. Hang doors on jeep and check for proper fit. Close door slowly onto paddle striker being sure that the paddle and striker line up correctly. Make any necessary adjustments if needed.

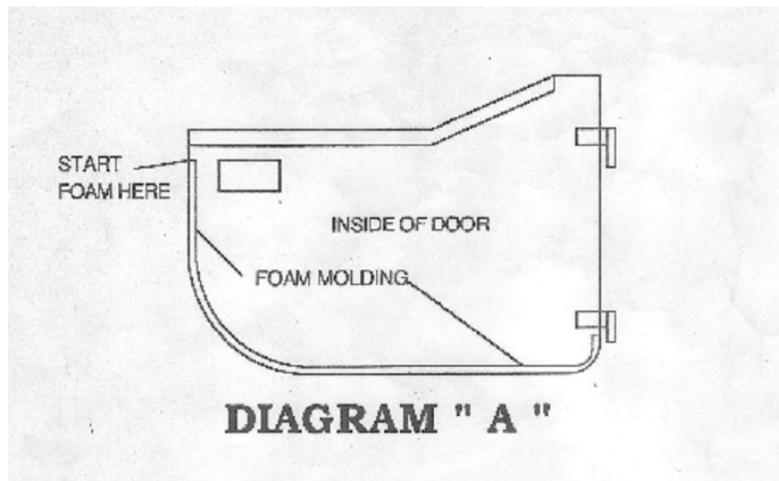

If you need further assistance installing your product, please contact us by email at [customerservice@warriorproducts.com](mailto:customerservice@warriorproducts.com) or call us at (888) 220-6861.

**THANK YOU FOR PURCHASING WARRIOR PRODUCTS**

**QUALITY • INTEGRITY • INNOVATION • SERVICE**