



FENDER FLARE EXTENSIONS

(2018+ WRANGLER JL RUBICON)

INSTALLATION INSTRUCTIONS

CONTENTS

- (1) LH Front Flare Extension
- (1) LH Rear Flare Extension
- (1) RH Front Flare Extension
- (1) RH Rear Flare Extension
- (40) Plastic Rivets

TOOLS REQUIRED

Plastic Rivet Install Tool
Cutters

STEP 1
[FRONT]



Along the outer lip of the fender flare, locate and remove the (7) plastic rivets.


STEP 2
[FRONT]



Locate the appropriate flare extension using the label molded into the part. Then, align the flare extension to the vehicle fender flare, using the plastic rivet hole in the fender as a reference.

Rivet the flare extension into place using the included plastic rivets.

STEP 3 [REAR]

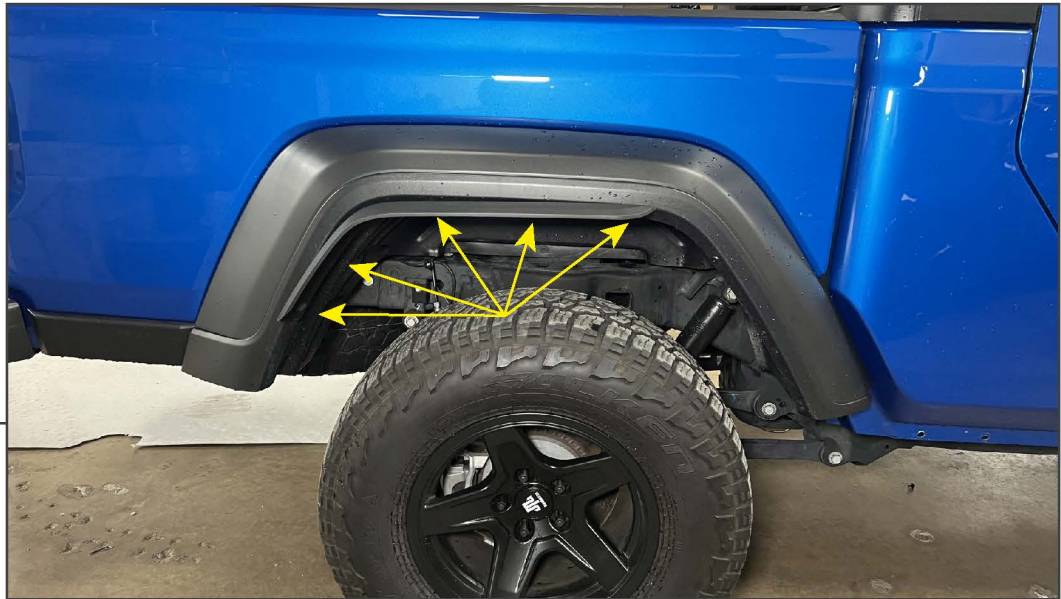

Along the outer lip of the fender flare, locate and remove the (5) plastic rivets.

STEP 4 [REAR]



Locate the appropriate flare extension using the label molded into the part. Then, align the flare extension to the vehicle fender flare, using the plastic rivet hole in the fender as a reference.

Rivet the flare extension into place using the included plastic rivets. Not every hole in the extension will be used depending on vehicle equipment.

Repeat steps 1-4 for the remaining fender flare extensions. Installation is now complete.