



MESH SUN SHADE

(2007-2018 WRANGLER JK - 2 DOOR)

INSTALLATION INSTRUCTIONS

CONTENTS

(1) Mesh Top
(12) 8" Elastic Bands
(4) 4" Elastic Bands

TOOLS REQUIRED

Isopropyl Alcohol
Microfiber Cloth


SKU # J221782

STEP 1



Familiarize the layout of the mesh top. The (2) Velcro pads will face down towards the vehicle roll bar during installation.


STEP 2

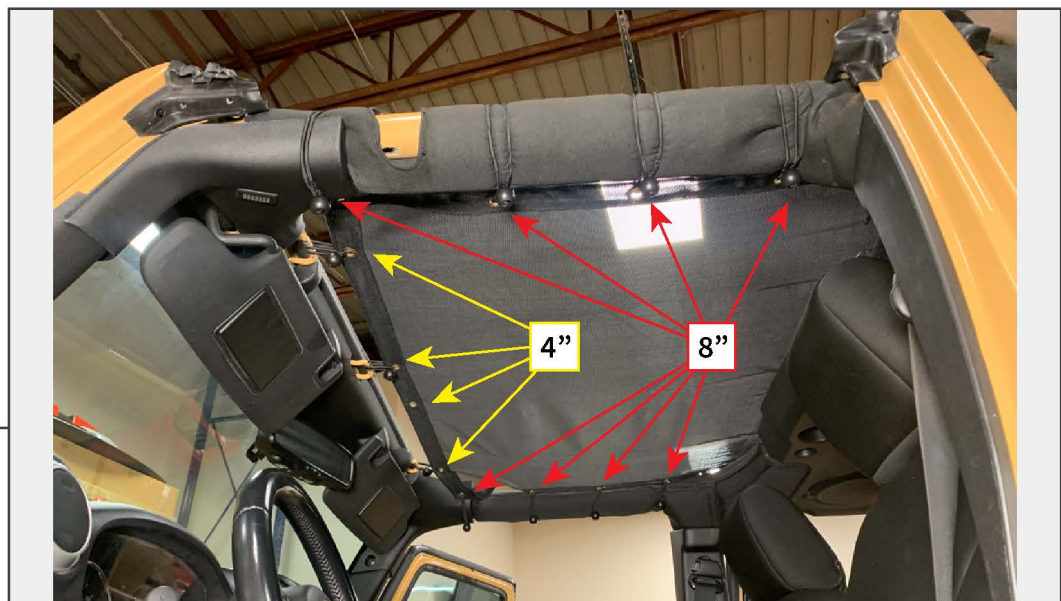

Install the front portion of the mesh top to the vehicle roll bars using (4) 8" elastic bands per side roll bar. Secure the front of the mesh top to the vehicle hooks using (4) 4" elastic bands.

Note: JK only require (3) 4" elastic bands.

STEP 3

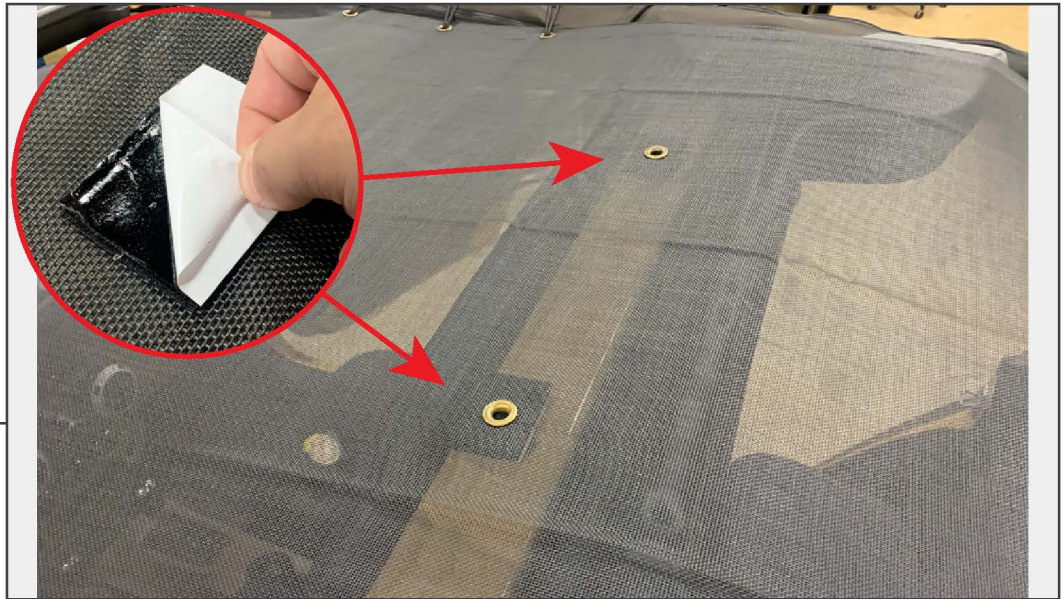

Clean the center roll bar with isopropyl alcohol and a microfiber cloth in preparation for the Velcro pads. Once dry, drape the mesh top over the center roll bar and align the Velcro pads to the center roll bar hard top mounting points. Adhere the Velcro pads using the attached tape backing.

STEP 4



Install the rear portion of the mesh top using (4) 8" elastic bands around the rear roll bars.



STEP 5

Installation is now complete.