

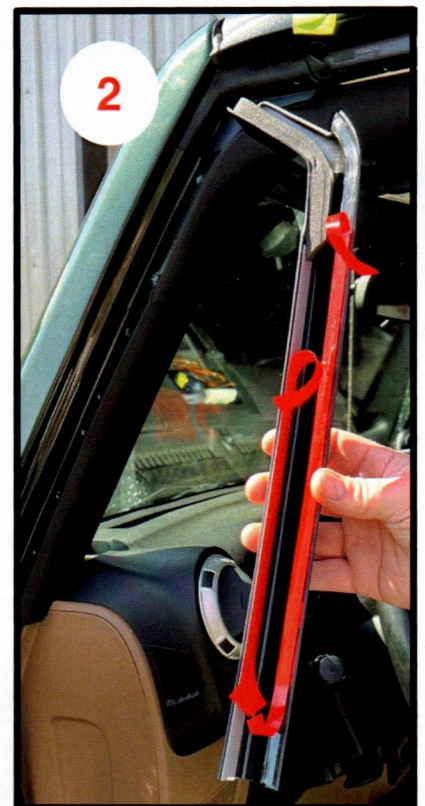


## Instructions for 2007-Up Jeep® Wrangler JK, JL and Gladiator Drip Rail Extensions

**Note: These instructions are for both JK, JL, and JT Wranglers and Gladiators**

1. Wash the outside and inside edges of the windshield frame with soap and water. Rinse and dry thoroughly. For the best adhesion, temperature should be above 50 degrees F.
2. Using the supplied isopropyl pads, clean the same areas and wipe dry with a clean cloth or paper towels.
3. Dry fit the drip rail extensions so you can visualize how they fit. While holding the drip rail in place, close the door of the Jeep®. **It is important to make sure the drip rails are placed correctly into the upper corner of the windshield frame. If they are not fitted snugly into the frame and upper corner seal, they will not work correctly. See pic 1.** You also want to make sure that the rear lip of the drip rail is not angled outward—if it is, the drip rail is twisted out of position. Also, make sure the inner vertical edge of the drip rail is aligned with the raised vertical edge of the inner windshield stamping. Holding the drip rail in the desired location, close the door of the Jeep®. Maneuver the drip rail by pushing on it to make sure that the rear section of the drip rail is parallel with the drip rail on the top. While the drip rail is being held in place with the door, mark the outer surface of the windshield frame using a soft lead pencil, grease pencil, crayon, or pieces of masking tape to mark on the windshield frame, aligning with the outer edge of the drip rail. This will give you visual reference points to make it easier for final installation.
4. Refer to picture #2 and peel back at least 1" of the red tape protective film from the gray fastening tape (inside edge of drip rail, outside edge uses clear tape). Do this at both ends of the extensions. Avoid contaminating the gray tape with your fingers. Use a toothpick or fingernail to start peeling the red film back. Fold the red film over the outside edge of the drip rail. You can use small pieces of masking tape to hold the pull tabs in place.

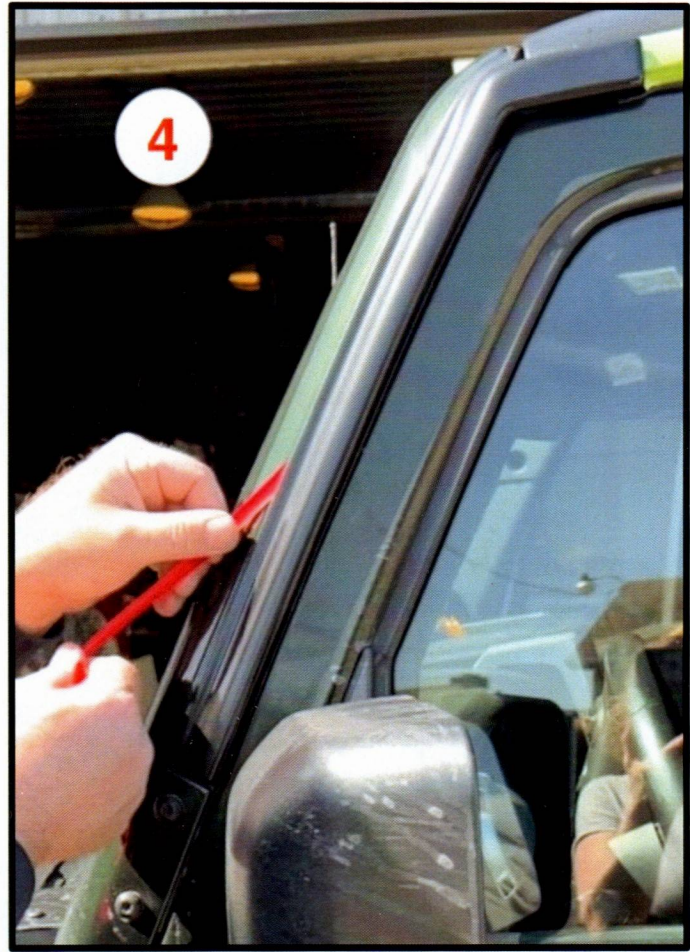

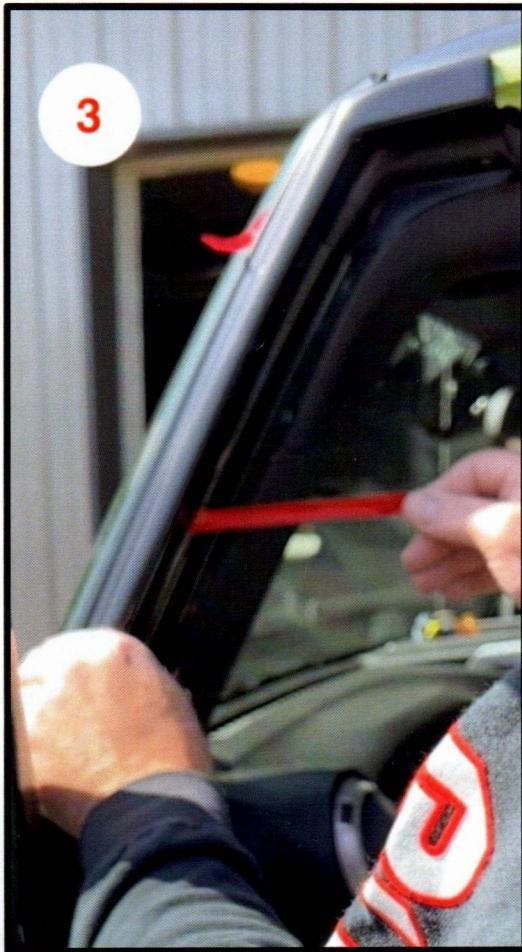

5. Carefully position the drip rail extension into the upper corner as you did with the pre-fit.
6. Once you know the drip rail extensions are in the correct spot, using your thumb, push in on the upper inside area of the extension to seat the extension. Then, lightly push down on the upper outer edge of the extension. Making sure that the inside flange of the drip rail is in position, carefully pull downward on the red tape film while making sure that the drip rail is not moving outward and is staying in position. Pic 3.
7. When the red tape protective film is removed, make sure that the drip rail extension is properly positioned, push very hard on the surface of the extension all along the inside flange of the windshield frame to make sure that the tape is making full contact. Then close the door.
8. Walk around again to the front edge of the extension and remove the outer red tape film strip and then press firmly to seat the extension to the windshield frame. Pic 4.
9. Repeat the same procedure on the other side and you are finished.

**Your door opening experiences when it's raining will be much better!**

**Questions? Email [customerservice@catamountauto.com](mailto:customerservice@catamountauto.com)**

**Telephone (835) 224-7900**