



ROOF MOUNTED LED TAIL LIGHT SPOILER

(2007-2018 WRANGLER JK)

INSTALLATION INSTRUCTIONS

CONTENTS

- (1) LH Tail Light
- (1) RH Tail Light
- (2) Adapter Harnesses
- (2) Hinge Bracket
- (4) Adhesion Promoter Pads
- (6) Wire Holders
- (4) M6x1.00 x 12mm Phillips Bolts

TOOLS REQUIRED

- 10mm Socket
- Ratchet
- 5mm Allen Key
- Phillips Screwdriver
- Pry Tool
- Razor Blade

SKU # J215625

STEP 1



Using a plastic pry tool, gently pry the hinge covers from the rear glass hinges, starting from the bottom. The cover will hinge upward once dislodged. Remove the hinge cover from the vehicle.

STEP 2



Remove (2) 10mm bolts from the rear glass hinge.

Note: Do not unbolt both rear glass hinges together. Only work one side at a time.

STEP 3

Install the tail light bracket to the light housing using (2) M6 x 12mm Phillips bolts, (2) M6 lock washers, and (2) M6 flat washers. Tighten until secure.

STEP 4

Clean the roof of the vehicle using the included adhesion promoter pads. Once clean and dry, remove the double sided tape backing from the light and adhere the light to the vehicle. Secure the light assembly to the vehicle hardtop using the original (2) 10mm bolts.

STEP 5




Route the tail light wiring down the side of the hard top channel towards the tailgate. Route the wiring under the seal and towards the vehicle tail light assembly. Use the included wire holders and wire holder adhesive pads to secure the harness to the hard top channel.

STEP 6



Route the tail light wiring down the side of the hard top channel towards the tailgate. Route the wiring under the seal and towards the vehicle tail light assembly. Use the included wire holders and wire holder adhesive pads to secure the harness to the hard top channel.

STEP 7

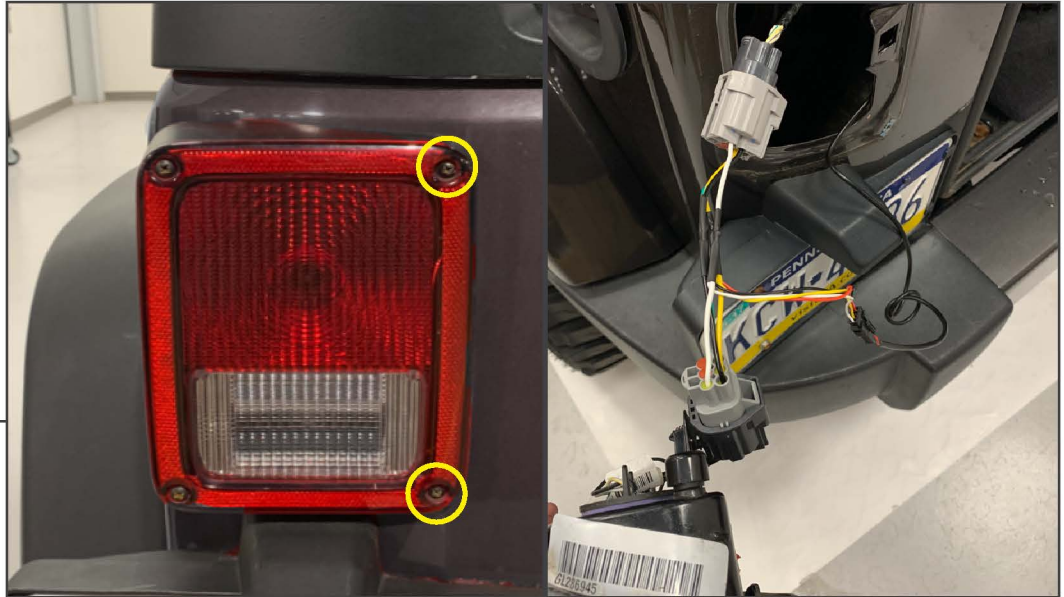

Remove (2) Phillips head screws to remove the vehicle tail light assembly from the vehicle. Once removed, unplug the tail light assembly. Install the included in-line adapter harness to the vehicle wiring harness and the tail light assembly. Plug in the roof mounted tail light.

STEP 8



Repeat steps 1-7 to the opposite side of the vehicle.

Installation is now complete.