



QUICK DISCONNECT SWAY BAR LINKS; 2.5"- 6" LIFT

(2007-2018 WRANGLER JK)

INSTALLATION INSTRUCTIONS

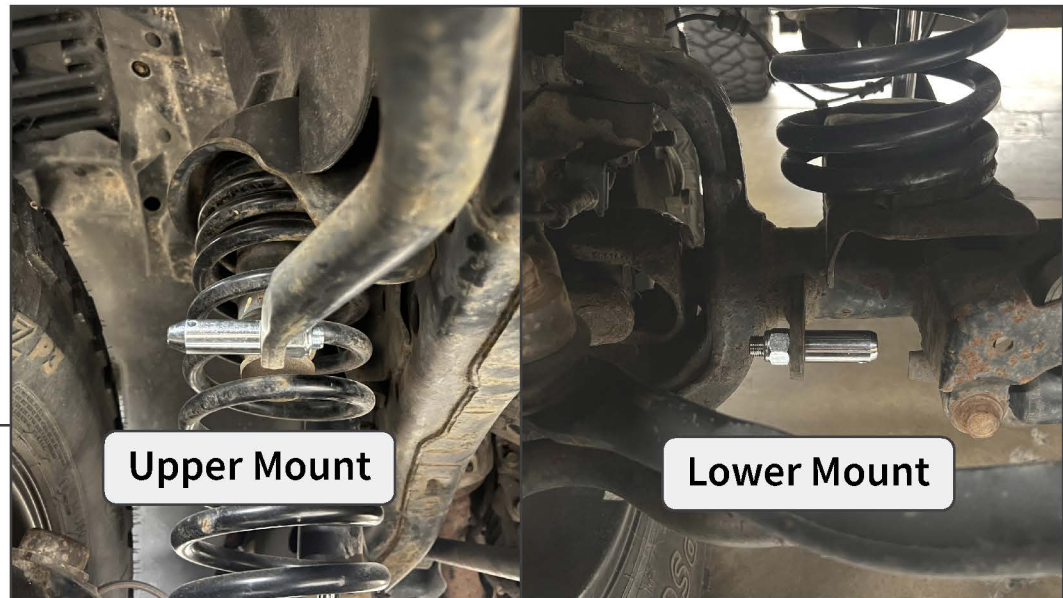
CONTENTS

(2) Sway Bar Links
(4) Latch Pins
(4) Spacers
(2) Upper Sway Bar Mounts
(1) Lower Sway Bar Mount [LH]
(1) Lower Sway Bar Mount [RH]
(4) Lock Nuts

TOOLS REQUIRED

18mm Socket/Wrench
Ratchet

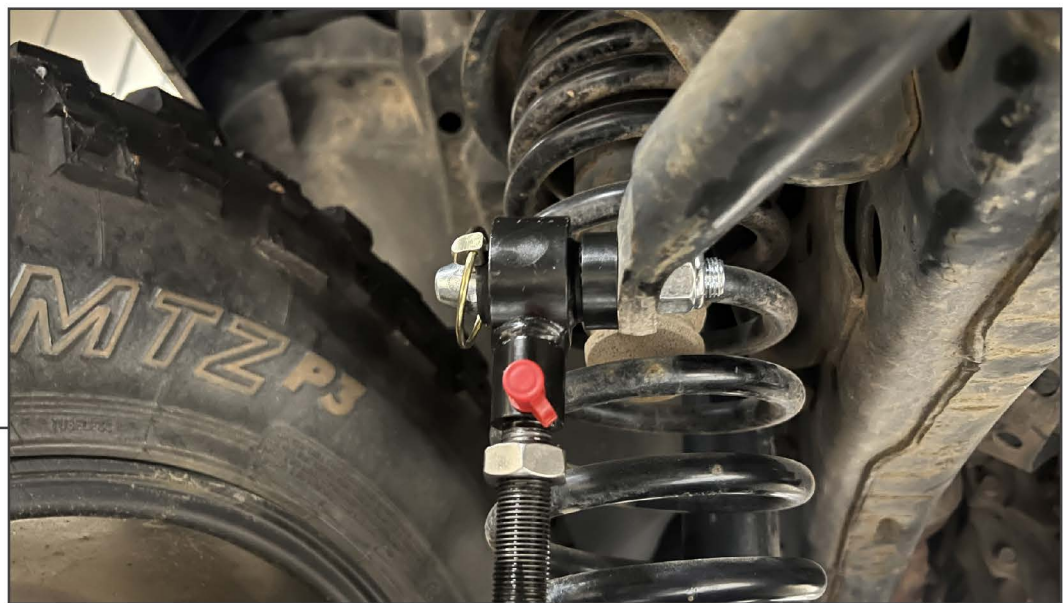
SKU # J216055

STEP 1

Remove the original sway bar links from the vehicle. Position the sway bar parallel with the vehicle frame.

Install the upper mounting post to the vehicle sway bar, ensuring the post is facing the outside of the vehicle.

Install the lower mounting post to the vehicle axle mount, ensuring the post is facing the inside of the vehicle. *LH and RH sides have different lower mounts due to different axle mount brackets.

STEP 2

Fit (1) spacer onto the top mounting post. Then, fit the top of the sway bar link to the mounting post, followed by the latch pin.



STEP 3

Fit (1) spacer to the lower mount. Adjust the sway bar link to reach the lower mount. Fit the sway bar link onto the lower mount, and secure using (1) latch pin.

Note: Spacer may or may not be necessary depending on application. The sway bar link must be as vertical as possible for proper functionality.

Grease the sway bar links using synthetic grease initially and periodically.

Installation is now complete.