

LED FOG LIGHTS

(2018+ WRANGLER JL)
(2020+ GLADIATOR JT)

INSTALLATION INSTRUCTIONS

CONTENTS

(1) Pair of Fog Lights
(2) Adapter Harnesses
(2) 3 Bolt Hole Mounting Brackets
(4) 4 Bolt Hole Mounting Brackets
(4) Scotchlok Connectors
(4) Wire Leads

TOOLS REQUIRED


7mm Socket
8mm Socket
Ratchet
Panel Removal Tool

STEP 1



Remove (2) 8mm bolts from the plastic lower shield, then remove (8) plastic push clips. Remove the plastic lower shield from the vehicle.


STEP 2

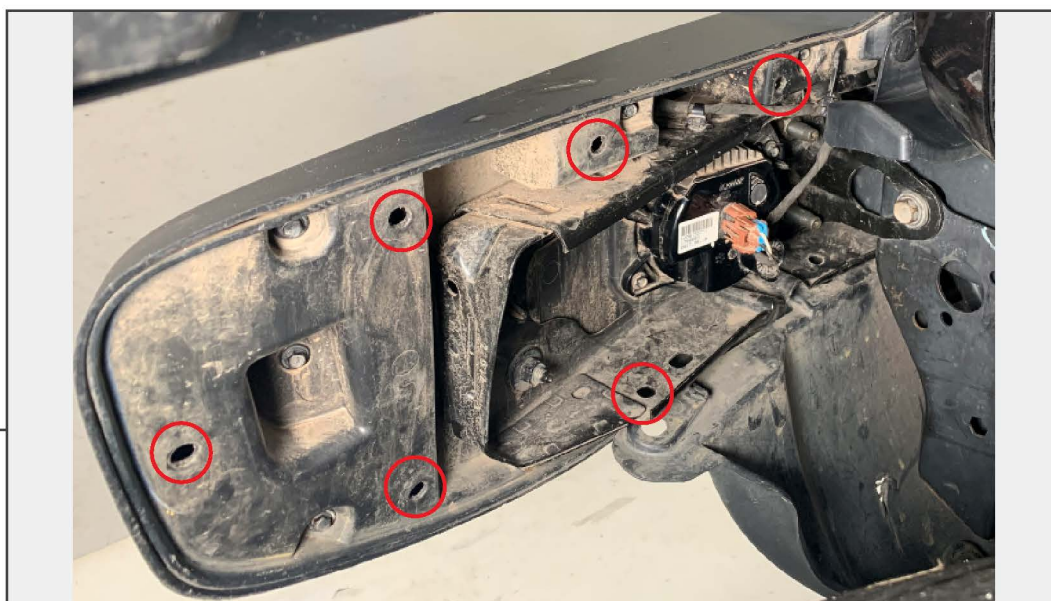

Remove (6) plastic push clips from the fog light cover. Remove the cover. Unplug the connector from the fog light by pressing in the tab, then pulling the connector away from the light.

Repeat this procedure to the opposite side of the vehicle.


STEP 3

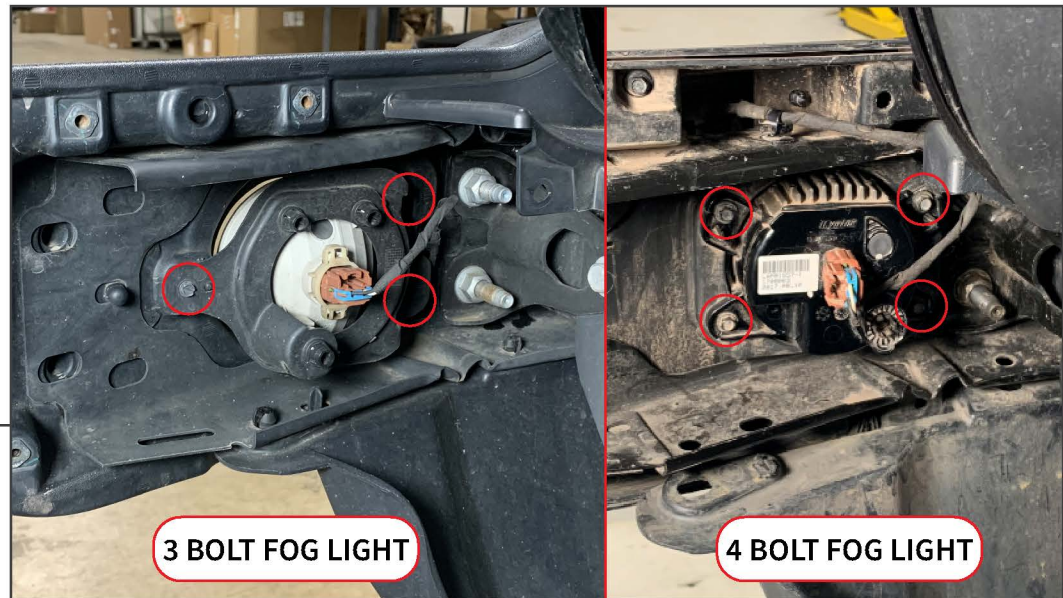

Depending on vehicle trim level, remove the (3) OR (4) 7mm fog light retaining bolts and remove the fog light from the vehicle. Install the new LED fog light with the appropriate mounting adapter to the vehicle bumper reusing the original hardware, and plug in the vehicle wiring harness.

Repeat this procedure to the opposite side of the vehicle.

STEP 4

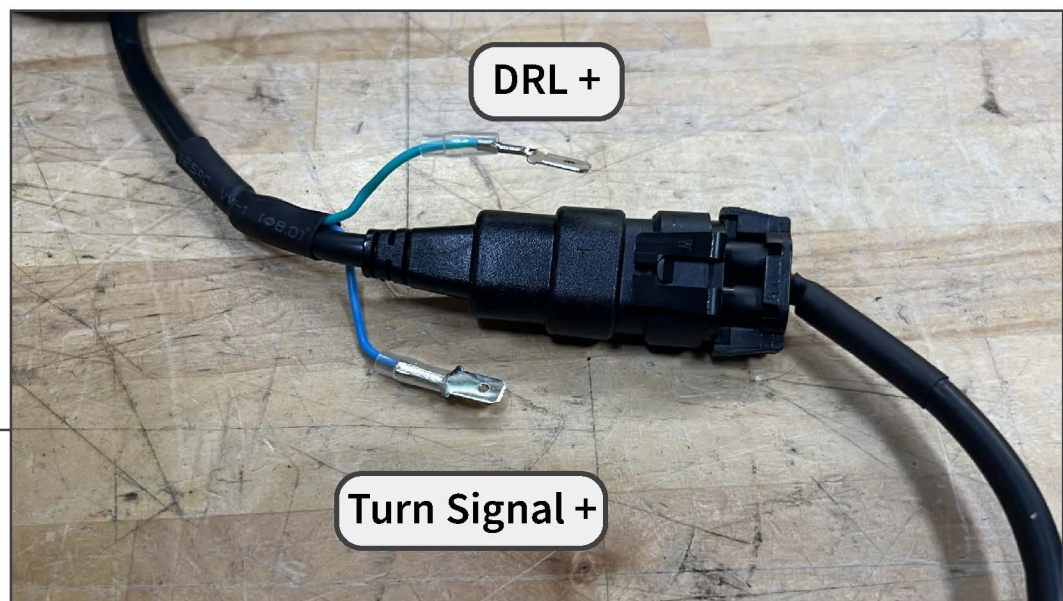

Plug the (2) wire leads into each fog light spade connector. Then, route the wire leads towards the vehicle fender flare turn signal/parking lamp. Using the (2) scotchlok connectors, splice the wire leads into the vehicle wiring harness. Use a test light/multimeter to verify connections before splicing.

<u>Vehicle Fender Wiring Harness</u>	-	<u>Fog Light Wire Leads</u>
White/Green (LH) / White/Beige (RH)	-	Green
White/Orange	-	Blue



STEP 5

Adjust the fog lights using the attached Allen bolt.

Re-assemble the vehicle bumper following steps 1-2 in reverse order.

Installation is now complete.